



Manuals.plus /

- › ecozy /
- › ecozy Ice Maker User Manual

ecozy SM-FS201C

ecozy Ice Maker (Slushie Machine) User Manual

Model: SM-FS201C

1. INTRODUCTION

Thank you for purchasing the ecozy SM-FS201C Slushie Machine. This appliance is designed to create a variety of frozen beverages, including slushies, frappes, milkshakes, and more, without the need for pre-made ice. Please read this manual thoroughly before operation to ensure safe and efficient use.



Figure 1.1: The ecozy SM-FS201C Slushie Machine, showcasing its sleek design and two example frozen beverages.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before use.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW AND PARTS IDENTIFICATION

Familiarize yourself with the components of your ecozy Slushie Machine.

Game-Changing Touch Screen



Figure 3.1: The intuitive touch screen control panel, displaying various function icons and time settings.

Key Components:

- **Main Unit:** Houses the refrigeration system and motor.
- **Transparent Container:** Where the liquid is transformed into a slushie. Features MAX 40oz and MIN 10oz fill lines.
- **Dispensing Spout:** For pouring out your finished beverage.
- **Control Panel/Touch Screen:** For selecting modes, adjusting settings, and starting/stopping the machine.
- **Drip Tray:** Collects any spills from the dispensing spout.

4. SETUP

4.1 Unpacking

1. Carefully remove the slushie machine and all accessories from the packaging.
2. Remove any protective films or packaging materials.
3. Retain the packaging for future storage or transport.

4.2 Placement

- Place the machine on a stable, level, and dry surface.
- Ensure there is adequate ventilation around the unit, especially at the rear and sides, to allow for proper heat dissipation.
- Keep the machine away from direct sunlight or heat sources.

4.3 Initial Cleaning

Before first use, clean all parts that will come into contact with food or beverages.

1. Detach the transparent container and dispensing spout.
2. Wash these parts with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Reassemble the parts once dry.

5. OPERATING INSTRUCTIONS

The ecozy Slushie Machine offers a variety of functions for different frozen beverages.

No Ice Need, Easy Fill Vessel



Figure 5.1: Examples of beverages that can be prepared, including Frappe, Milkshake, Wine, and Spiked Slushie.

5.1 Adding Ingredients

1. Ensure the machine is plugged into a grounded electrical outlet.
2. Pour your desired liquid (juice, soda, chocolate milk, alcoholic beverages, etc.) into the transparent container.
3. Do not exceed the 'MAX 40oz' fill line and ensure the liquid is above the 'MIN 10oz' line for optimal performance.

5.2 Using the Control Panel

One-Touch Smoothie Magic



Figure 5.2: The 'One-Touch Smoothie Magic' process, illustrating the addition of liquid, rapid refrigeration, and the creation of a delicious slushie.

- **Power Button:** Press to turn the machine on/off.
- **Mode Selection:** Use the touch screen icons to select your desired beverage type: Slushie, Frappe, Milkshake, Spiked Slushie, or Wine. Each mode has optimized settings for consistency.
- **Thickness Adjustment:** Use the '+' and '-' buttons on the screen to adjust the desired thickness of your frozen beverage.
- **Start/Pause Button:** Press to begin the freezing process or to pause it.
- **Clean Mode:** Select this mode for automated cleaning (refer to Maintenance section).
- **Control Lock:** Activates a child lock feature to prevent accidental operation.

- **Delay Start:** Allows you to set a timer for the machine to begin operation at a later time.

5.3 Freezing Process

The ecozy Slushie Machine is designed for rapid refrigeration, producing slushies up to 20% faster, typically ready in about 20 minutes.

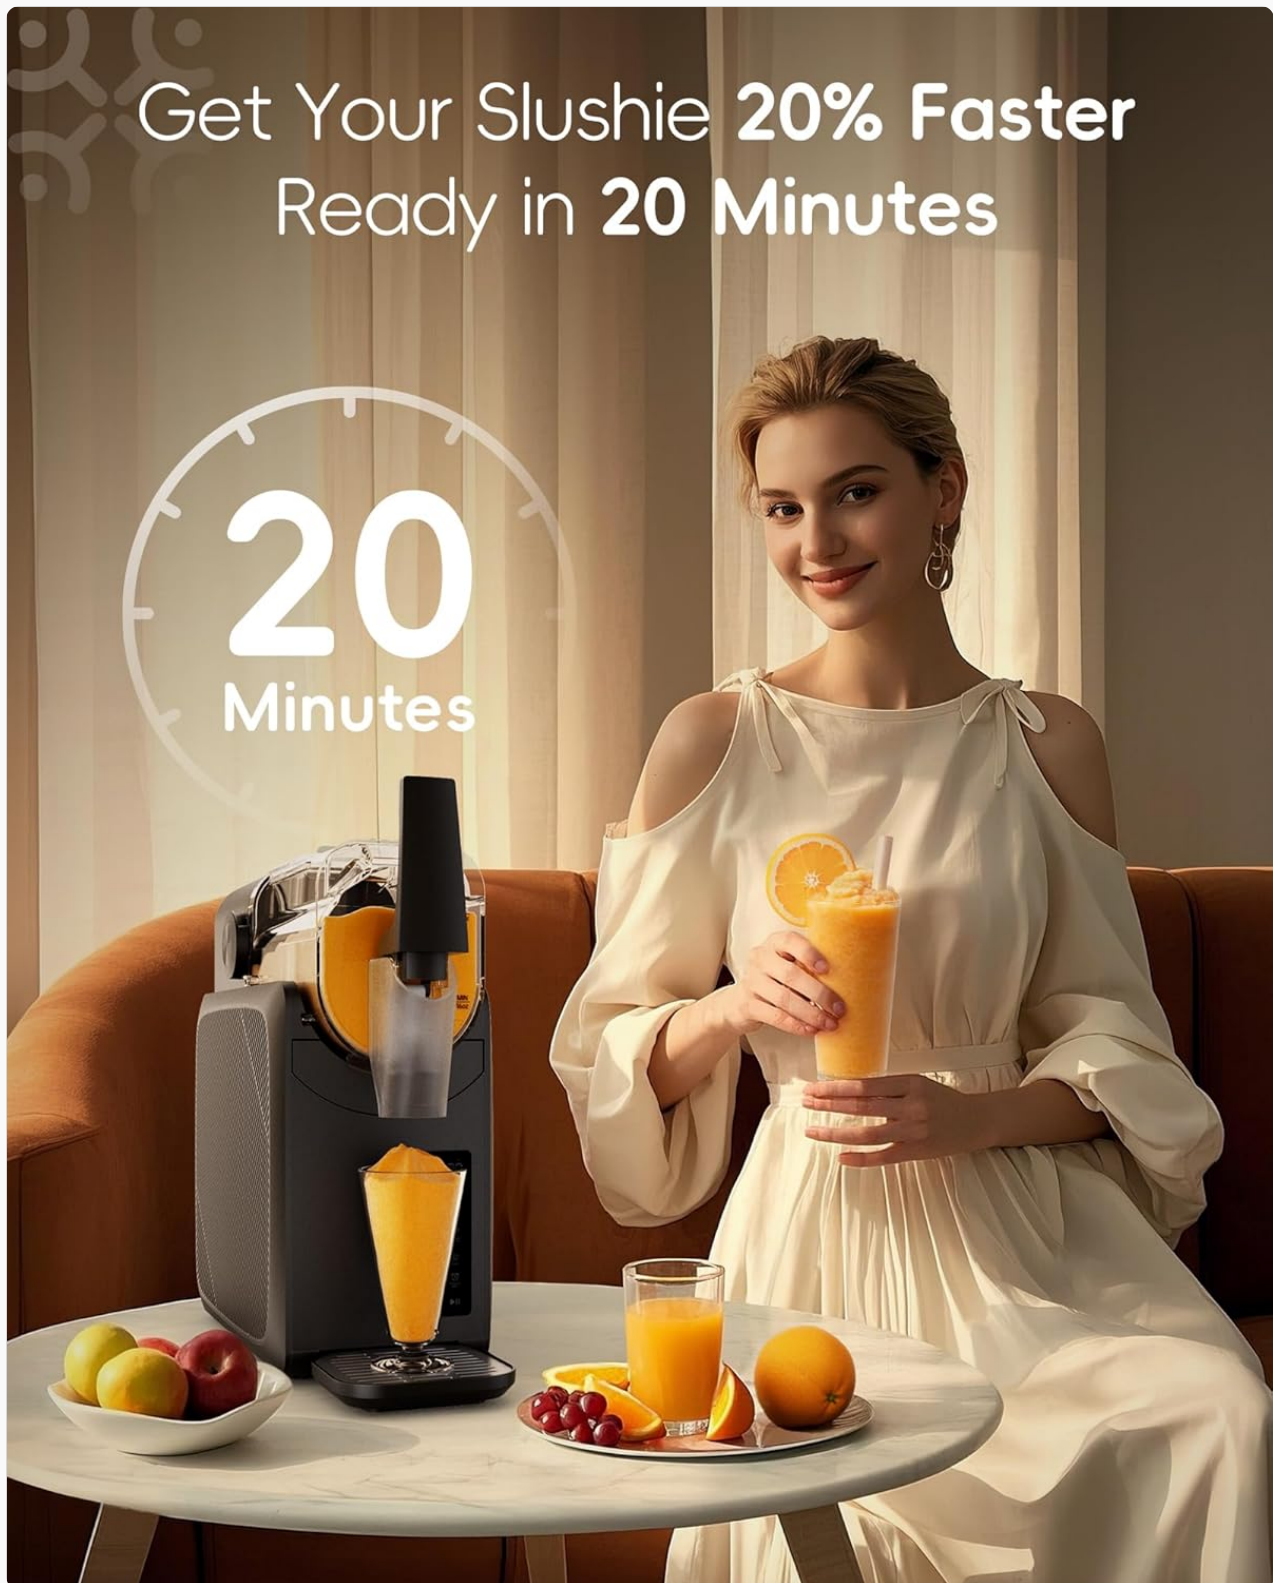


Figure 5.3: The ecozy Slushie Machine can prepare your frozen beverage in approximately 20 minutes.

1. Once liquid is added and mode is selected, press the Start button.
2. The machine will begin the freezing and stirring process. The display will show the remaining time.

3. When the process is complete, the machine will indicate readiness.

5.4 Dispensing

Place a glass or cup under the dispensing spout and pull the lever to release the frozen beverage.

6. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your ecozy Slushie Machine.

Effortless Clean

Always Ready to Refresh



Figure 6.1: The 'Effortless Clean' feature, which can be activated with one press and completes in approximately 4 minutes.

6.1 Daily Cleaning

1. After each use, empty any remaining liquid from the container.
2. Fill the container with clean water up to the 'MIN' line.
3. Select the 'Clean' mode on the control panel and press Start. The machine will perform an automated cleaning cycle, typically lasting about 4 minutes.
4. Once the cycle is complete, drain the water through the dispensing spout.
5. For thorough cleaning, detach the transparent container and dispensing spout and wash them with warm, soapy water. Rinse and dry completely.

6. Wipe the exterior of the machine with a damp cloth.

6.2 Storage

When not in use for an extended period:

- Ensure the machine is thoroughly cleaned and dry.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to store the machine in its original packaging to protect it from dust and damage.

7. TROUBLESHOOTING

If you encounter any issues with your ecozy Slushie Machine, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Power outlet malfunction; Power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly.
Liquid is not freezing or is too thin.	Insufficient freezing time; Incorrect mode selected; Ambient temperature too high.	Allow more time for freezing. Ensure the correct beverage mode is selected. Operate in a cooler environment. Adjust thickness setting to a higher level.
Slushie is too thick/hard.	Excessive freezing time; Thickness setting too high.	Reduce freezing time or adjust thickness setting to a lower level.
Machine is noisy during operation.	Normal operation sound; Machine not on a level surface.	Some operational noise is normal. Ensure the machine is placed on a stable, level surface.
Liquid leaking from the machine.	Container not properly seated; Dispensing spout not closed properly.	Ensure the transparent container is securely attached. Check that the dispensing spout is fully closed after use.

If the problem persists after attempting these solutions, please contact ecozy customer support for further assistance.

8. SPECIFICATIONS

40% Smaller High Capacity Power



Figure 8.1: The compact dimensions of the ecozy Slushie Machine, measuring approximately 42cm in width, 43cm in height, and 18cm in depth.

Attribute	Value
Model Number	SM-FS201C
Brand	ecozy
UPC	850074197027
Container Capacity	Max 40 oz (1.18 Liters)
Dimensions (Approx.)	42 cm (W) x 43 cm (H) x 18 cm (D)
Weight (Approx.)	11.8 kg (26 lbs)
Power Supply	Standard Household (Voltage/Frequency not specified, assume common region standard)

9. WARRANTY AND SUPPORT

ecozy products are manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please contact ecozy customer support through the official website or your retailer's support channels.

Please have your model number (SM-FS201C) and proof of purchase ready when contacting support.