

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sisism](#) /

› [Sisism A10 Pro Wireless Earbuds Bluetooth 5.2 User Manual](#)

Sisism A10 Pro

Sisism A10 Pro Wireless Earbuds User Manual

Model: A10 Pro

INTRODUCTION

Thank you for choosing the Sisism A10 Pro Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

WHAT'S IN THE BOX

Verify that all items are present in your package:

- Bluetooth Earphones (Sisism A10 Pro)
- Wireless Charging Case
- USB Cable
- User Manual
- 3 Pairs of Eartips (S, M, L)



Image: Sisism A10 Pro Wireless Earbuds and Charging Case. The image displays the white earbuds resting in their open charging case, which features a digital battery display.



Image: Contents of the Sisism A10 Pro package. This image shows the earbuds, charging case, USB cable, user manual, and three pairs of eartips laid out.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Sisism A10 Pro Wireless Earbuds.

Components

- **Earbuds:** Left and Right earbuds with touch control areas.
- **Charging Case:** Portable case for charging and storing earbuds, featuring a digital battery display.
- **Eartips:** Silicone eartips in various sizes for a comfortable and secure fit.

9D Stereo Sound Effect Immersive Enjoyment

Surging sound field, a more realistic sound experience



Ergonomics

lightweight and comfortable
Earbud weight only **3.6g**

Image: Dimensions of Sisism A10 Pro Earbuds and Charging Case. This image illustrates the physical dimensions and weight of the earbuds and their charging case.

Touch Controls

The earbuds feature sensitive touch controls for managing audio playback and calls.

Function	Action
Play/Pause	Single tap on either earbud
Next Song	Triple tap on the right earbud
Previous Song	Triple tap on the left earbud
Volume Up	Double tap on the right earbud
Volume Down	Double tap on the left earbud
Answer/End Call	Single tap on either earbud

Function	Action
Reject Call	Press and hold on either earbud
Activate Voice Assistant	Press and hold on either earbud (when not on a call)

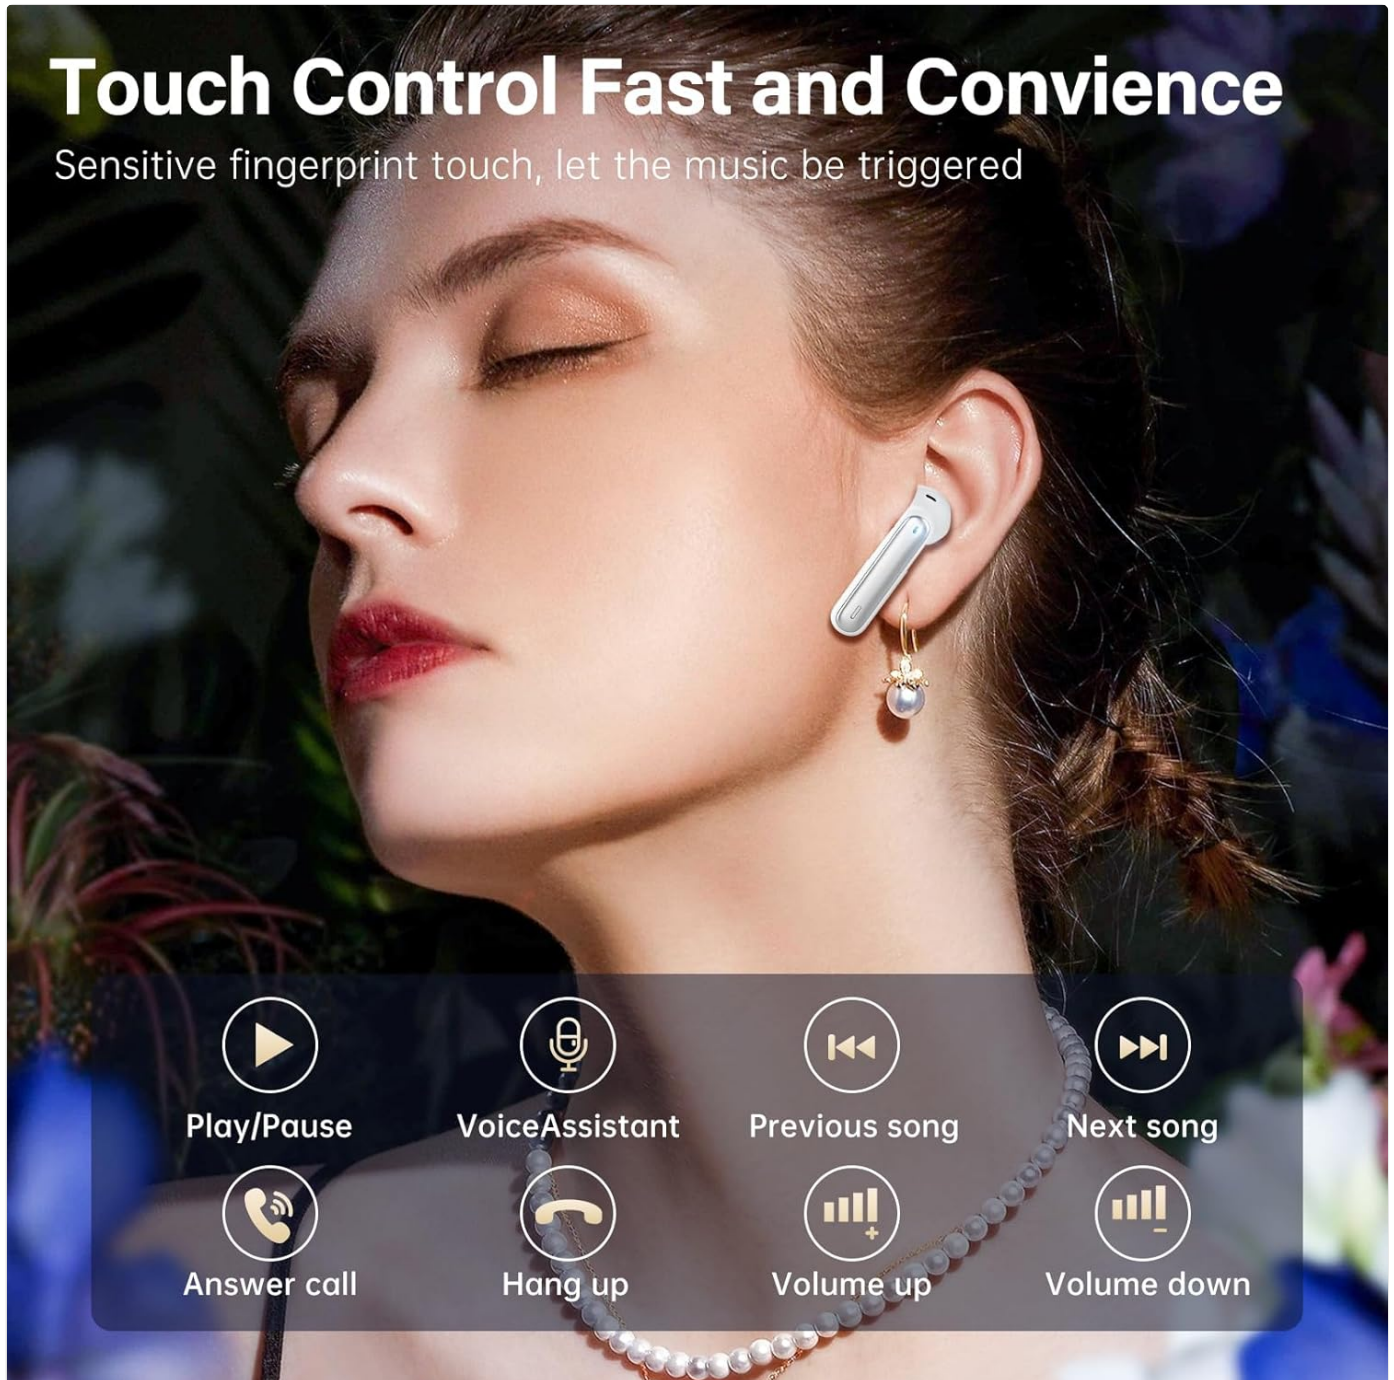 


Image: Sisism A10 Pro Earbuds Touch Control Guide. This graphic illustrates the various touch gestures for controlling music playback, calls, and voice assistant.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- Connect the provided USB cable to the charging port on the case and a power source.
- The digital display on the charging case will show the battery percentage.

- Place the earbuds into the charging case. They will begin charging automatically.
- A full charge for the earbuds takes approximately 1.5 hours. The charging case provides up to 24 hours of additional battery life for the earbuds.

Magnetic contact charging 50 hrs long standby

Single earphone can use 5-8 hours, charging case can charge 3 times, from dawn to sunset, the music doesn't stop



Image: Sisism A10 Pro Earbuds Battery Life and Charging. This image highlights the 5-8 hours of single play, 3 charges from the case, 8 hours talk time, and 300mAh charging case capacity.

2. Pairing with Your Device

The Sisism A10 Pro earbuds feature one-step pairing for quick connection.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), go to the Bluetooth settings.
3. Search for available devices and select "A10 Pro" from the list.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The earbuds will automatically reconnect to the last paired device when taken out of the case, provided Bluetooth is enabled on the device.


Quick Pairing

Take out the earbuds from the charging case and connect "A10 Pro" with bluetooth



Image: Sisism A10 Pro Earbuds Quick Pairing Guide. This image demonstrates how to pair the earbuds by taking them out of the case and connecting to "A10 Pro" in Bluetooth settings.

 One-Step Pairing Ultra Fast Connection

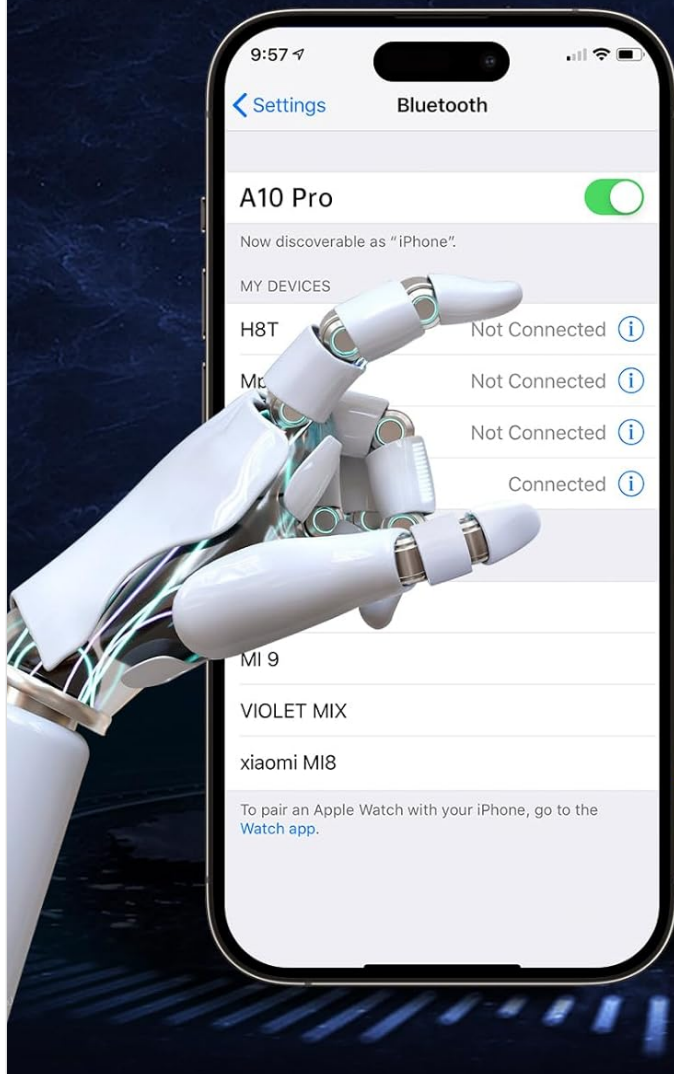

Close

Auto power off
and charging.

Open

Auto power on
and connect.



Image: Sisism A10 Pro Earbuds One-Step Pairing. This graphic illustrates the automatic power on and connection when the case is opened, and automatic power off and charging when closed.

OPERATING INSTRUCTIONS

Wearing the Earbuds

Choose the correct size of eartips for a comfortable and secure fit. Insert the earbuds into your ears and gently rotate them until they feel snug. A proper fit enhances sound quality and noise isolation.



Image: Ergonomic design of Sisism A10 Pro Earbuds. This image shows a person wearing the earbuds, highlighting their comfortable and secure fit.

Music Playback

- **Play/Pause:** Single tap either earbud.
- **Next Track:** Triple tap the right earbud.
- **Previous Track:** Triple tap the left earbud.
- **Volume Up:** Double tap the right earbud.
- **Volume Down:** Double tap the left earbud.

Call Management

- **Answer/End Call:** Single tap either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 2 seconds (when not on a call).

 
MAINTENANCE

Proper maintenance ensures the longevity and performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Eartips:** Remove eartips and clean them with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Water Resistance:** The earbuds are rated as waterproof, suitable for daily use and protection against sweat and light rain. However, they are not designed for swimming or submersion in water. Ensure the charging port is dry before charging.

Ergonomic Design

Choose the right ear tips for better sound isolation and more bass

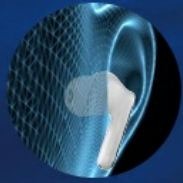

45° Comfortable Fit



Soft Silicone Ear Tips

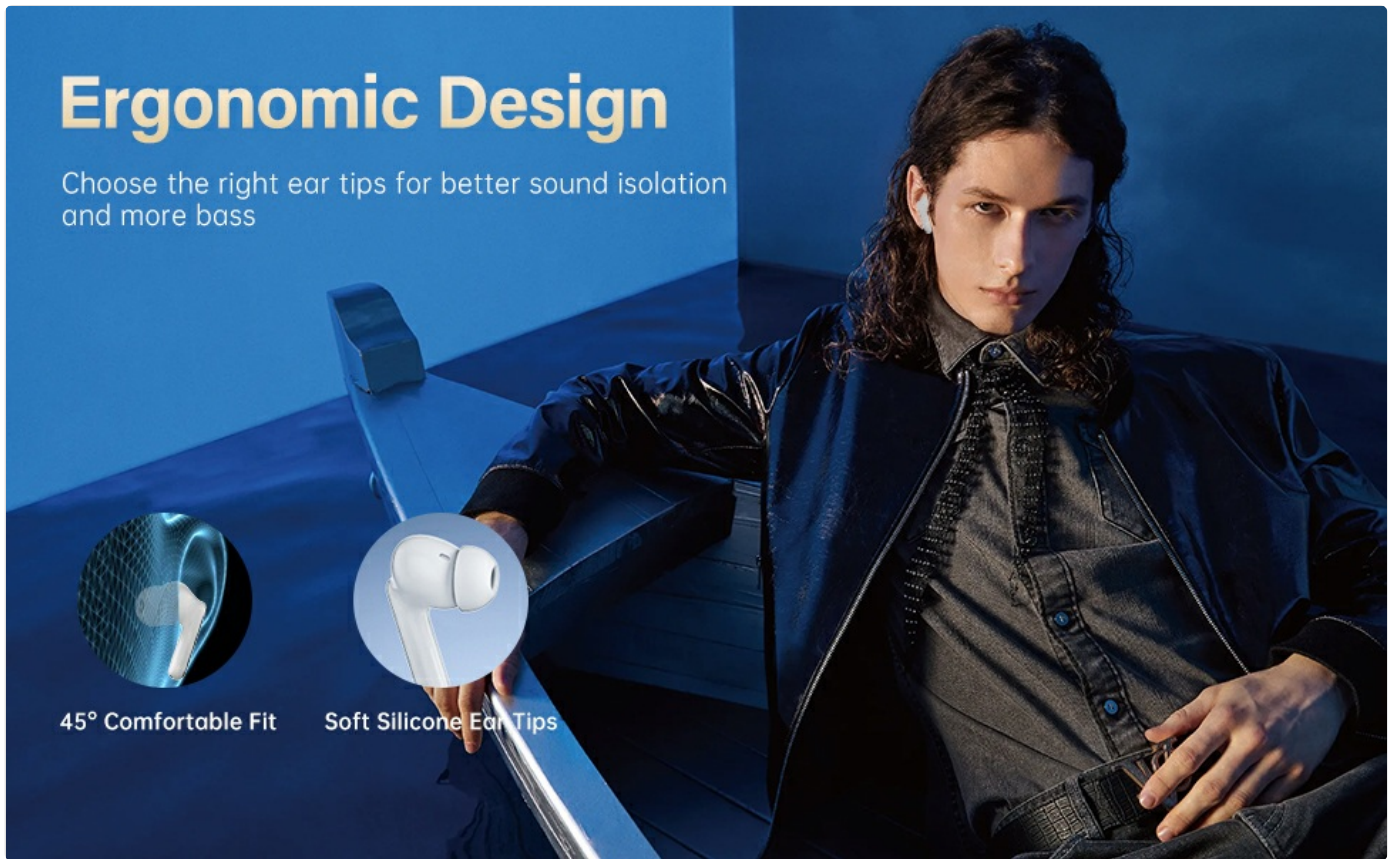 


Image: Sisism A10 Pro Earbuds Rainproof Design. This image depicts the earbuds and charging case in a water splash, illustrating their waterproof rating for daily use.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

Problem	Solution
Earbuds not pairing	<ul style="list-style-type: none">◦ Ensure earbuds are charged.◦ Place earbuds back in the case, close, then open again to re-enter pairing mode.◦ Turn off and on Bluetooth on your device.◦ Forget "A10 Pro" in your device's Bluetooth settings and try pairing again.
Only one earbud working	<ul style="list-style-type: none">◦ Ensure both earbuds are charged.◦ Place both earbuds back in the charging case, close the lid, wait a few seconds, then open the lid and try again.◦ Reset the earbuds (refer to specific reset instructions if available, otherwise try forgetting device and re-pairing).
Low volume or poor sound quality	<ul style="list-style-type: none">◦ Adjust volume on both your device and using the earbud touch controls.◦ Ensure eartips are properly seated and form a good seal in your ear. Try different eartip sizes.◦ Clean any debris from the earbud speakers.
Earbuds disconnect frequently	<ul style="list-style-type: none">◦ Ensure your device is within the Bluetooth range (up to 10 meters).◦ Avoid obstacles between your device and earbuds.◦ Ensure earbuds are fully charged.

SPECIFICATIONS

Key technical specifications for the Sisism A10 Pro Wireless Earbuds:

Feature	Detail
Model Name	A10 Pro
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Noise Control	Active Noise Cancellation, Environmental Noise Cancellation
Frequency Response	20 Hz - 20 KHz
Sensitivity	42 dB
Impedance	32 Ohm
Audio Driver Type	Dynamic Driver
Audio Driver Size	30 Millimeters
Audio Latency	16 Milliseconds
Earbud Battery Life	8 Hours
Charging Case Battery Life	24 Hours (additional)
Charging Case Capacity	300 Milliamp Hours
Charging Time	Approx. 1.5 Hours
Water Resistance Level	Waterproof
Control Type	Touch Control
Item Weight (Earbuds)	3.6g (each)
Item Weight (Total)	0.1 Kilograms (3.52 ounces)
Material	Plastic



Image: Bluetooth 5.3 Chip Features. This image illustrates the benefits of the Bluetooth 5.3 chip, including reduced delay, increased connection signal, and improved transmission speed.

WARRANTY AND SUPPORT

Sisism products are designed for reliability and performance. For warranty information and customer support, please refer to the contact details provided in your product packaging or visit the official Sisism website.

While specific warranty terms are not detailed here, some promotional materials indicate a 2-year commitment to product quality. Please retain your proof of purchase for any warranty claims.

