

[Manuals.plus](#) /

› [Garwarm](#) /

› Garwarm 20-Inch Socket Fan Light with Remote (Model TT-JD8007-B) Instruction Manual

Garwarm TT-JD8007-B

Garwarm 20-Inch Socket Fan Light with Remote

MODEL: TT-JD8007-B

1. Product Overview

The Garwarm 20-inch Socket Fan Light is a compact, dual-purpose fixture designed to provide both airflow and illumination for small indoor areas. Its design integrates a ceiling fan with a light, suitable for spaces such as bedrooms, hallways, kitchens, and garages. The unit features a quiet, energy-efficient motor and is controlled via an included remote.

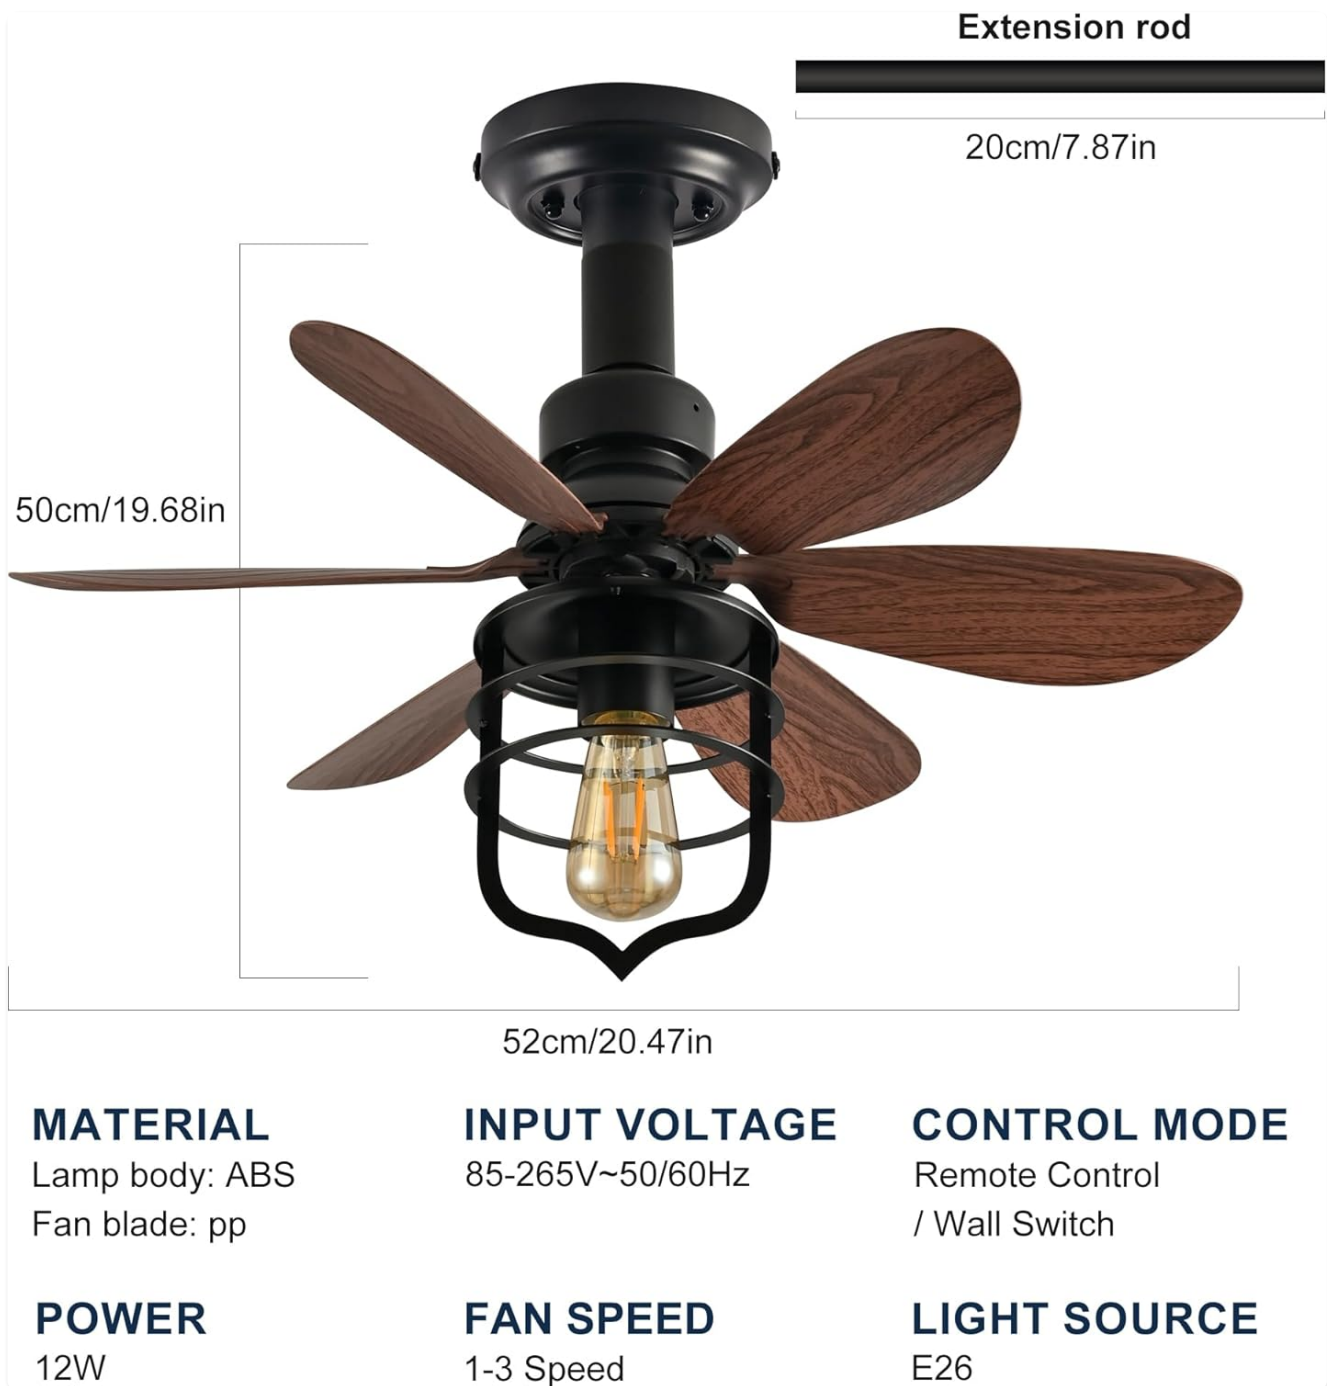


Image 1.1: Overview of the Garwarm Socket Fan Light, showing its dimensions (approximately 20.5 inches in length and 19.7 inches in width) and key specifications like ABS/PP material, 85-265V input voltage, 12W power, 1-3 fan speeds, and E26 light source.



Image 1.2: Close-up details of the fan light, highlighting the E26 socket compatibility, the protective cage design, the lightweight and removable fan blades for easy cleaning, and the quiet, powerful copper motor.

2. Setup and Installation

The Garwarm Socket Fan Light is designed for easy installation into any standard E26 light bulb socket. No complex wiring is required.

2.1. Package Contents

- Socket Fan Light Unit
- Remote Control
- 20cm Extension Rod
- Installation Instructions

2.2. Installation Steps

1. **Ensure Power is OFF:** Before beginning installation, turn off the power to the light fixture at the circuit breaker to prevent electrical shock.

2. Assemble the Unit:

- Screw the light bulb (not included) into the lamp holder.
- Secure the decorative cage cover onto the lamp body using the provided screws.
- Insert the fan blades into the fan body, ensuring they are correctly oriented.
- Attach the extension rod to the fan unit if desired for increased drop from the ceiling.

3. **Screw into Socket:** Carefully screw the assembled fan light unit into an existing E26 light bulb socket until secure.

4. **Restore Power:** Turn the power back on at the circuit breaker.

EASY TO INSTALL

Just Screw Into Any Light Bulb Socket



Image 2.1: Visual guide demonstrating the simple screw-in installation process of the fan light into an E26 socket.

Your browser does not support the video tag.

Video 2.1: An official Garwarm video demonstrating the assembly and installation of the Socket Fan Light, including attaching the bulb, decorative cover, fan blades, and screwing the unit into a ceiling socket. It also shows the remote control functions.

3. Operating Instructions

The Garwarm Socket Fan Light is operated using the included remote control. Ensure the remote has 2 AAA batteries (not included) and the plastic gasket is removed before first use.

3.1. Remote Control Functions

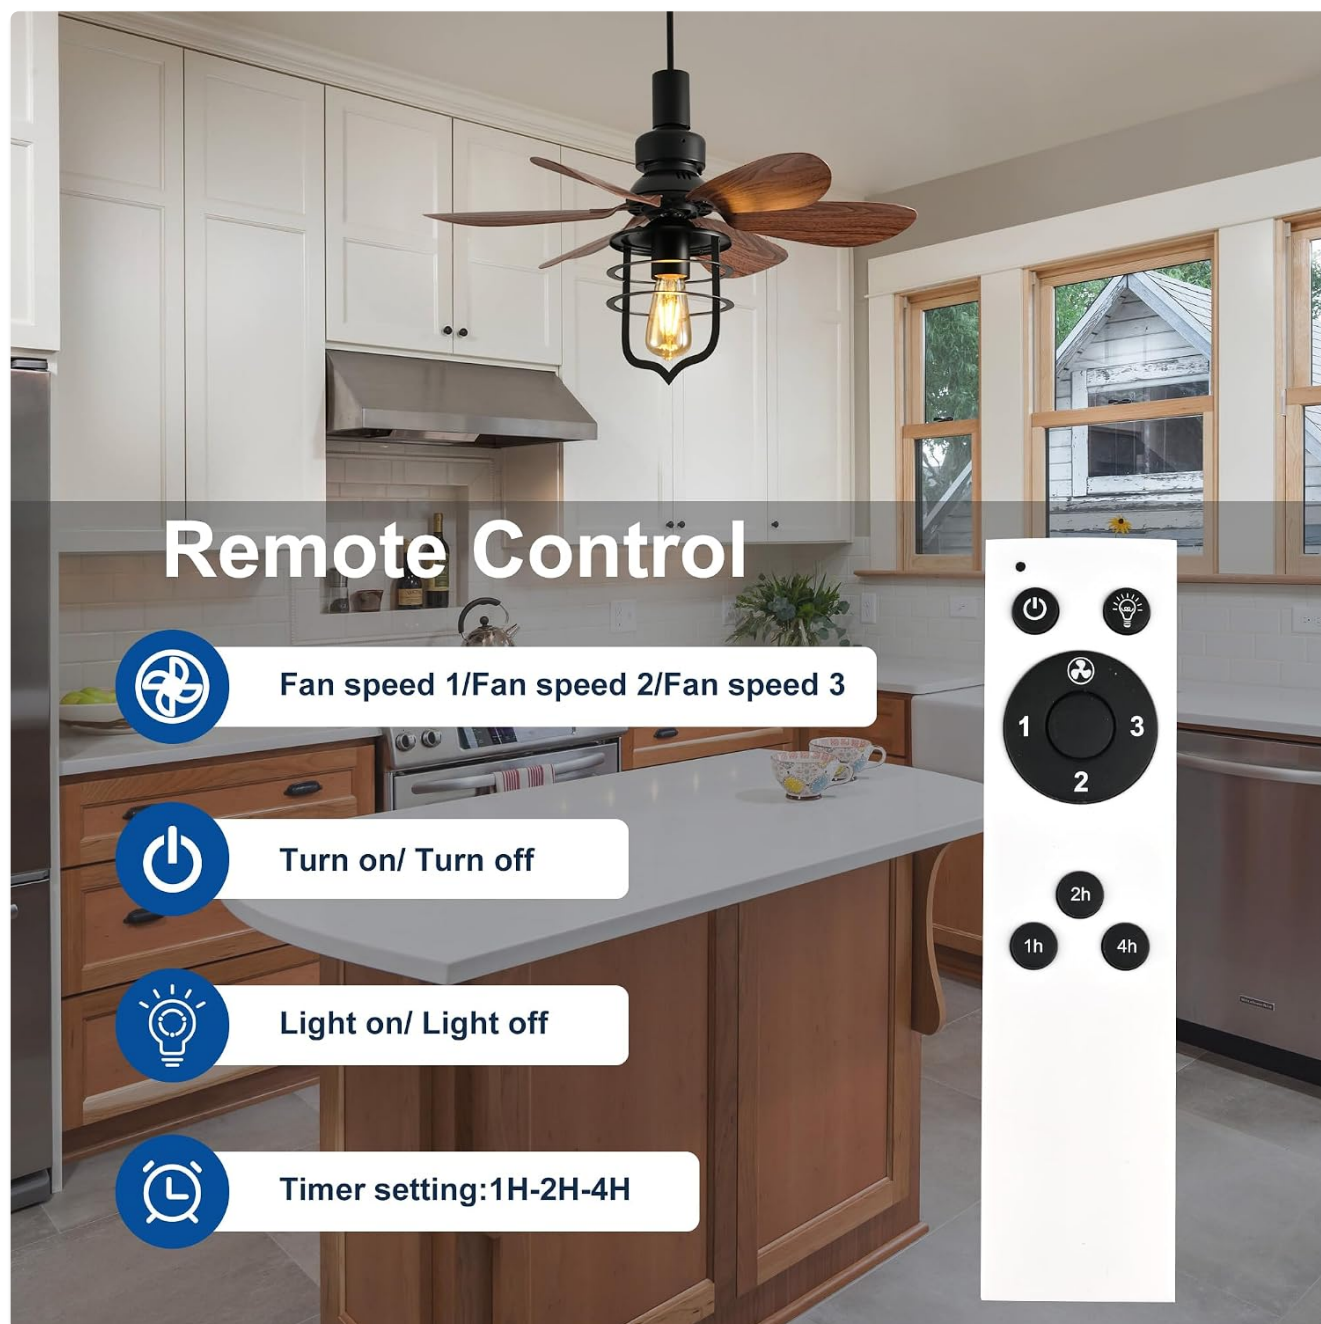


Image 3.1: The remote control unit with clearly labeled buttons for all fan and light functions.

- **Power ON/OFF:** Press the power button to turn the entire unit on or off.
- **Light ON/OFF:** Press the light bulb icon button to control the light independently.
- **Fan ON/OFF:** Press the fan icon button to control the fan independently.
- **Fan Speed Control (1, 2, 3):** Select from three adjustable wind speeds: **Speed 1** (low, for sleeping/reading), **Speed 2** (medium, for entertainment), **Speed 3** (high, for sports/fitness).
- **Timer Setting (1h, 2h, 4h):** Set the fan to automatically turn off after 1, 2, or 4 hours.



SPEED 1

For sleeping,reading



SPEED 2

For entertainment



SPEED 3

For sports,fitness

Image 3.2: Visual representation of the three distinct fan speeds and their recommended uses.



Image 3.3: Illustration of the timer function, allowing users to set the fan to turn off after a specified duration.

4. Maintenance

Regular maintenance ensures the longevity and optimal performance of your Garwarm Socket Fan Light.

4.1. Cleaning

- **Power Off:** Always turn off the power at the circuit breaker before cleaning.
- **Fan Blades:** The durable PP blades are designed to resist dust. For cleaning, gently wipe the blades with a soft, damp cloth. The blades can be disassembled for thorough cleaning if necessary.
- **Light Fixture:** Wipe the exterior of the light fixture and cage with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the power is off and the bulb has cooled before replacing. Use an E26 bulb (not included).

5. Troubleshooting

If you encounter issues with your Garwarm Socket Fan Light, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Fan or Light does not turn on	No power to the socket; Remote control batteries are dead; Bulb is faulty; Unit not screwed in properly.	Check circuit breaker; Replace remote batteries; Replace light bulb; Ensure the unit is securely screwed into the E26 socket.
Fan wobbles excessively	Unit not securely installed; Fan blades are unbalanced.	Ensure the fan light is tightly screwed into the E26 socket. Check that all fan blades are properly inserted and secure.
Remote control not responding	Dead batteries; Obstruction between remote and unit.	Replace remote batteries; Ensure a clear line of sight to the fan light.

6. Specifications

Feature	Detail
Brand	Garwarm
Model Number	TT-JD8007-B-NNNNN
Color	Socket Fan-Black
Material	Metal, Acrylic, PP
Item Dimensions (L x W x H)	20.47"L x 20.47"W x 19.68"H
Item Weight	1.34 Kilograms
Power Source	AC
Voltage	110 Volts (AC)
Wattage	12 watts
Bulb Base	E26 (Bulb not included)
Control Method	Remote Control, Wall Switch
Fan Speeds	3 Speeds
Timer Function	1h, 2h, 4h
Indoor/Outdoor Usage	Indoor use only

7. Warranty Information

This Garwarm Socket Fan Light (Model TT-JD8007-B) includes a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

8. Support

For further assistance, technical support, or warranty inquiries, please contact Garwarm customer service:

- **Email:** support@garwarm.com (example email)
- **Phone:** 1-800-GARWARM (example phone number)
- **Website:** [Visit the Garwarm Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question