

[Manuals.plus](#) /

> [woolynew](#) /

> woolynew 80GB MP3 Music Player (Model V30) Instruction Manual

woolynew V30

woolynew 80GB MP3 Music Player (Model V30) Instruction Manual

Model: V30 | Brand: woolynew

1. PRODUCT OVERVIEW

The woolynew V30 is a versatile 80GB MP3/MP4 player designed for portable media consumption. It features a 3-inch display, Bluetooth 5.0 connectivity, a built-in speaker, and supports various audio and video formats. Additional functionalities include FM radio, voice recording, and e-book reading. The device's memory is expandable up to 256GB via a Micro SD card.



Image: Front and side view of the woolynew V30 MP3 Player, showcasing its 3-inch screen and sleek design.

2. WHAT'S IN THE BOX

Upon unboxing your woolynew V30 MP3 Player, please ensure all the following items are present:

- MP3 Player
- Manual
- Headphone
- USB Cable
- Protective film

Your browser does not support the video tag.

Video: An unboxing demonstration of the woolynew V30 MP3 player, showing the contents of the package including the device and accessories.

3. PRODUCT FEATURES

- **Ultra-Large Memory:** The player includes 80GB of internal memory, capable of storing thousands of high-quality music files. Memory is expandable up to 256GB using a Micro SD card.
- **Portable Design:** Features a classic 3-inch black design, compact and lightweight for easy portability.
- **Bluetooth 5.0 Connectivity:** Advanced Bluetooth 5.0 technology ensures stable and fast wireless connections with headphones or speakers.
- **Multi-Functionality:** Supports various media formats including all video files up to 1080P without the need for conversion. Includes FM radio, voice recording, and e-book reading.
- **High-Quality Built-in Speaker:** Delivers clear audio with rich bass and bright treble for an immersive listening experience without external headphones.



Image: The MP3 player connected wirelessly via Bluetooth 5.0 to a portable speaker and earbuds.



Image: Illustration of the MP3 player's 80GB memory, expandable with a 64GB TF card.



Image: The MP3 player displaying a video, surrounded by icons of supported video formats like MP4, AVI, MKV.



Image: The MP3 player with battery life indicators, showing 25 hours of playback on a single charge.

4. SETUP AND INITIAL USE

4.1 Charging the Device

For first-time use, it is recommended to charge the woolynew V30 MP3 Player for approximately 3 hours using the provided USB cable. Connect the USB cable to the charging port on the device and a compatible USB power source.

4.2 Powering On/Off

Press and hold the power button for 3 seconds to turn the device on or off.

4.3 Inserting a Micro SD Card

To expand storage, insert a Micro SD card into the designated slot. Ensure the device is powered off before inserting or removing the card to protect data integrity. The TF card only supports FAT and EXFAT formats.



Image: Close-up of the MP3 player's bottom edge, showing the earphone jack, USB-C charging port, and Micro SD card slot.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

Navigate to the "Music" icon on the main screen. You can browse music by "Now Playing", "All Music", "Card Directory", "Artist", "Album", or "My Music List". Tap on a song to play it. The playback page displays controls for play/pause, skip tracks, and volume adjustment. You can also access equalizer settings from the playback page.

Your browser does not support the video tag.

Video: Demonstration of navigating the music interface, selecting a song, and controlling playback on the woolynew V30 MP3 player.

5.2 Video Playback

Select the "Video" icon to access video files. The player supports all video formats up to 1080P without the need for

conversion. Tap on a video file to begin playback. Controls for play/pause, fast forward/rewind, and volume are available during playback.

Your browser does not support the video tag.

Video: A brief demonstration of video playback on the woolynew V30 MP3 player, showcasing its ability to play various video formats.

5.3 Bluetooth Connectivity

To connect to Bluetooth devices:

1. Go to **Settings > Bluetooth**.
2. Turn the Bluetooth status to "ON". A white Bluetooth icon will appear in the status bar.
3. Select **Device Search** to find available devices.
4. Tap on your desired device to pair. A blue Bluetooth icon indicates successful pairing.

5.4 FM Radio

Select the "FM Radio" icon to access the radio function. You may need to connect wired headphones to act as an antenna for optimal reception.

5.5 Voice Recording

Tap the "Recorder" icon to start a new voice recording. You can pause, resume, and save recordings from this interface.

5.6 E-Book Reading

Open the "EBook" application to read supported e-book formats. Navigate through pages using the touch screen.

5.7 System Settings

Access the "Settings" menu to customize various device parameters, including display brightness, power saving options, date and time, language, and advanced settings.

6. MAINTENANCE

- Keep the device dry and away from moisture.
- Avoid extreme temperatures.
- Clean the screen with a soft, lint-free cloth.
- Do not drop or subject the device to strong impacts.
- Regularly back up important data to prevent loss.

7. TROUBLESHOOTING

Here are explanations for some common issues:

- **Bluetooth Connection:** To connect, go to **Settings > Bluetooth**. Turn the Bluetooth status to "ON". A white Bluetooth icon will appear in the status bar. Select **Device Search** to find available devices. Tap on your desired device to pair. A blue Bluetooth icon indicates successful pairing.
- **Creating a Playlist:** Tap the playlist icon in the top-right corner of the playback page. Select **Add to My playlist**. Note: Playlist names cannot be edited.
- **Playback Methods:** On the playback page, tap the icons for A-B repeat, shuffle, repeat all, or repeat one. The icon will turn blue when applied successfully. Note: Songs in the card catalog cannot be saved to favorites.

- **Set Screen Sleep Time:** Go to **Settings > Display > Backlight**. Options include OFF, 5s, 10s, 20s, 30s, 1min, 5min, 7 options available.
- **Equalizer Settings:** Tap the equalizer icon in the top-right corner of the playback page. Select EQ from 7 preset modes: Normal, Pop, Classic, Soft, Jazz, Rock, DBB. User EQ allows custom settings for your desired music playback effect.
- **Transferring Music Files and Creating Playlists:** You can remove the memory card and insert it into a card reader, then connect the card reader to your computer. Your computer will recognize it as a new disk. Simply copy your music files to this disk. Then, open the music playback function. In most cases, a music playlist will be generated automatically.
- **Tips for Music Organization:** We recommend organizing your music into separate folders based on your preferences. This allows you to easily access music from specific folders as individual playlists using the folder function.
- **Data Security:** To protect data security, only insert or remove the memory card when the player is turned off.
- **Playlist Update:** If the player fails to automatically update the playlist, you can manually update it using the **"Update Playlist"** function (**Settings > Sync Media Playlists**).
- **Powering On and Charging:** Press and hold the power button for 3 seconds to turn on. For the first use, we recommend charging for 3 hours.

8. SPECIFICATIONS

Product Dimensions	3.38 x 1.95 x 0.35 inches
Item Weight	2.93 ounces
Manufacturer	woolynew
Batteries	1 A batteries required. (included)
Model Name	V30
Special Feature	Built-In Speaker, FM Radio, Touch Screen, Video Playback, Voice Recorder
Connectivity Technology	Aux, Bluetooth, USB
Memory Storage Capacity	64 GB
Color	Black
Screen Size	3 Inches
Compatible Devices	Headphone, Personal Computer, Speaker
Media Type	Micro SD
Included Components	Headphone, Manual, Mp3 Player, Protective film, USB Cable

Note: The product is advertised as an 80GB MP3 player, which includes internal memory and may account for a bundled Micro SD card. It supports Micro SD card expansion up to 256GB.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase or visit the official woolynew website. Keep your proof of purchase for any warranty claims.



© 2025 woolynew. All rights reserved.