



Manuals.plus /

› hahaland /

› hahaland Surprise Barn with Stuffed Farm Animals User Manual

## hahaland PL006B

# hahaland Surprise Barn with Stuffed Farm Animals User Manual

Model: PL006B

## 1. INTRODUCTION

---

The hahaland Surprise Barn with Stuffed Farm Animals is a Montessori-inspired sensory toy designed for infants aged 6 months to 3 years. This interactive playset encourages early learning through tactile exploration, auditory stimulation, and imaginative play. It features a soft, foldable barn that transforms into a playmat, along with six plush farm animals that produce realistic sounds and speak their names when pressed. This manual provides essential information for safe and effective use of the product.



Image 1.1: The hahaland Surprise Barn playset, featuring a soft barn that unfolds into a playmat, surrounded by six plush farm animals. A baby is shown interacting with the toy in the background.

## 2. SAFETY INFORMATION

This product is designed with baby safety in mind. All parts are securely stitched and made from baby-safe materials. There are no small parts or harsh edges. The toy complies with US safety standards (CPC/ASTM/CPSIA).

**Important:** Plush animals contain electronic components (music IC) and are not fully washable. Surface cleaning is recommended for the animals. The barn mat is washable with water for easy cleaning.

Image 2.1: Product dimensions and safety features are highlighted, emphasizing skin-friendly, soft, and richly textured materials.

## 3. PACKAGE CONTENTS

- 1 x Foldable Fabric Barn/Playmat
- 6 x Plush Farm Animals (Cow, Pig, Sheep, Duck, Horse, Rooster)

# Six Talking Farm Friends



Image 3.1: A close-up of the hahaland barn, showcasing its compact design with plush animals stored inside.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Unfold the Barn:** The barn is designed to fold flat for storage. Unfasten the Velcro closures on the sides and top to open the barn. The base will unfold to create a farm-themed playmat.
3. **Animal Activation:** The plush animals are ready for play. If an animal's sound is not working, gently press the music note symbol on its side. If still unresponsive, check for a small battery compartment (usually secured with Velcro or a screw) and ensure batteries are correctly inserted or replaced if necessary.



Image 4.1: Visual guide demonstrating various interactive features of the barn, such as stuffing animals, hide-and-seek, and opening/closing elements.

## 5. OPERATING INSTRUCTIONS

### 5.1. Animal Sounds and Names

- Each plush animal has a small, embedded sound device. Gently press the music note symbol on the animal's side to activate its sound.
- The first press will typically produce the animal's sound (e.g., "Moo!"). Subsequent presses may announce the animal's name (e.g., "Cow!") or repeat the sound.

### 5.2. Interactive Barn Play

- **Playmat:** Unfold the barn completely to reveal a colorful farm-themed playmat. Children can place the animals on their corresponding spots (e.g., pig in the mud, cow in the pasture).
- **Stuffing and Matching:** Encourage children to place the animals into the barn through the openings, promoting fine motor skills and object permanence.
- **Peek-a-Boo Flaps:** The barn features various flaps and windows that can be opened and closed, offering peek-a-boo opportunities and crinkly sounds for sensory stimulation.
- **Mirror:** A small, baby-safe mirror is integrated into the barn, encouraging self-discovery and social development.



Image 5.1: The plush farm animals are displayed on the unfolded playmat, illustrating opportunities for cognitive and motor skill development.

Your browser does not support the video tag.

Video 5.1: An official product video demonstrating the hahaland Surprise Barn with Stuffed Farm Animals, showcasing its interactive features

## 6. MAINTENANCE

- **Plush Animals:** Due to internal electronic components, the plush animals are **not machine washable**. For cleaning, gently wipe the surface with a damp cloth and mild soap. Allow to air dry completely. Do not submerge in water.
- **Fabric Barn/Playmat:** The fabric barn and playmat can be washed with water. Hand wash or machine wash on a gentle cycle with cold water. Air dry thoroughly.
- **Storage:** For compact storage, fold the barn back into its house shape and secure the Velcro closures. Store animals inside.



Image 6.1: Cleaning guidelines for the toy, specifying that plush animals require surface cleaning due to electronics, while the fabric barn is water washable.

## 7. TROUBLESHOOTING

- **Animal sound not working:**
  - Ensure the music note symbol on the animal is pressed firmly.
  - Check the battery compartment (if accessible) for proper battery insertion or replacement.
- **Barn not folding/unfolding correctly:**
  - Ensure all plush animals are removed from inside before folding.
  - Check that Velcro fasteners are aligned properly when securing the barn.

## 8. SPECIFICATIONS

<b>Product Dimensions</b>	7.87 x 6.5 x 8.66 inches
<b>Item Weight</b>	13.4 ounces
<b>Item Model Number</b>	PL006B
<b>Manufacturer Recommended Age</b>	6 months - 3 years
<b>Manufacturer</b>	hahaland

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact hahaland customer service directly through their official website or the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.