

Tibuta 15.6-inch Wi-Fi Digital Photo Frame (Model B0F2HS2PVS)

Tibuta 15.6-inch Wi-Fi Digital Photo Frame User Manual

Model: B0F2HS2PVS

1. INTRODUCTION

1.1 About Your Tibuta Digital Photo Frame

Thank you for choosing the Tibuta 15.6-inch Wi-Fi Digital Photo Frame. This device allows you to easily share and display your cherished memories with family and friends from anywhere in the world. Its intuitive touch screen and Wi-Fi connectivity make it simple to receive photos and videos instantly.

1.2 Key Features

- **15.6-inch HD IPS Touch Screen:** Enjoy vibrant and clear display of your photos and videos with a resolution of 768 x 1366.
- **Large Capacity:** Equipped with 32GB of built-in memory, expandable via USB drive or Micro SD card (up to 128GB).
- **Automatic Rotation:** The frame automatically adjusts photo orientation for optimal viewing in both portrait and landscape modes.
- **Instant Wireless Sharing:** Share photos and videos directly to the frame from anywhere using the Uhale App.
- **Versatile Placement:** Can be placed on a table using the integrated stand or mounted on a wall.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Tibuta 15.6-inch Wi-Fi Digital Photo Frame
- Power Adapter
- User Manual

3. PRODUCT OVERVIEW

3.1 Front View

The front of the frame features the 15.6-inch HD IPS touch screen, which is your primary interface for

interacting with the device.



Image: Front view of the Tibuta Digital Photo Frame highlighting the 15.6-inch HD touch screen and its dimensions (389mm x 244mm, 192mm display height, 344mm display width).

3.2 Rear View and Ports

The rear of the frame houses the power input, various ports, and the integrated stand/wall mount points.

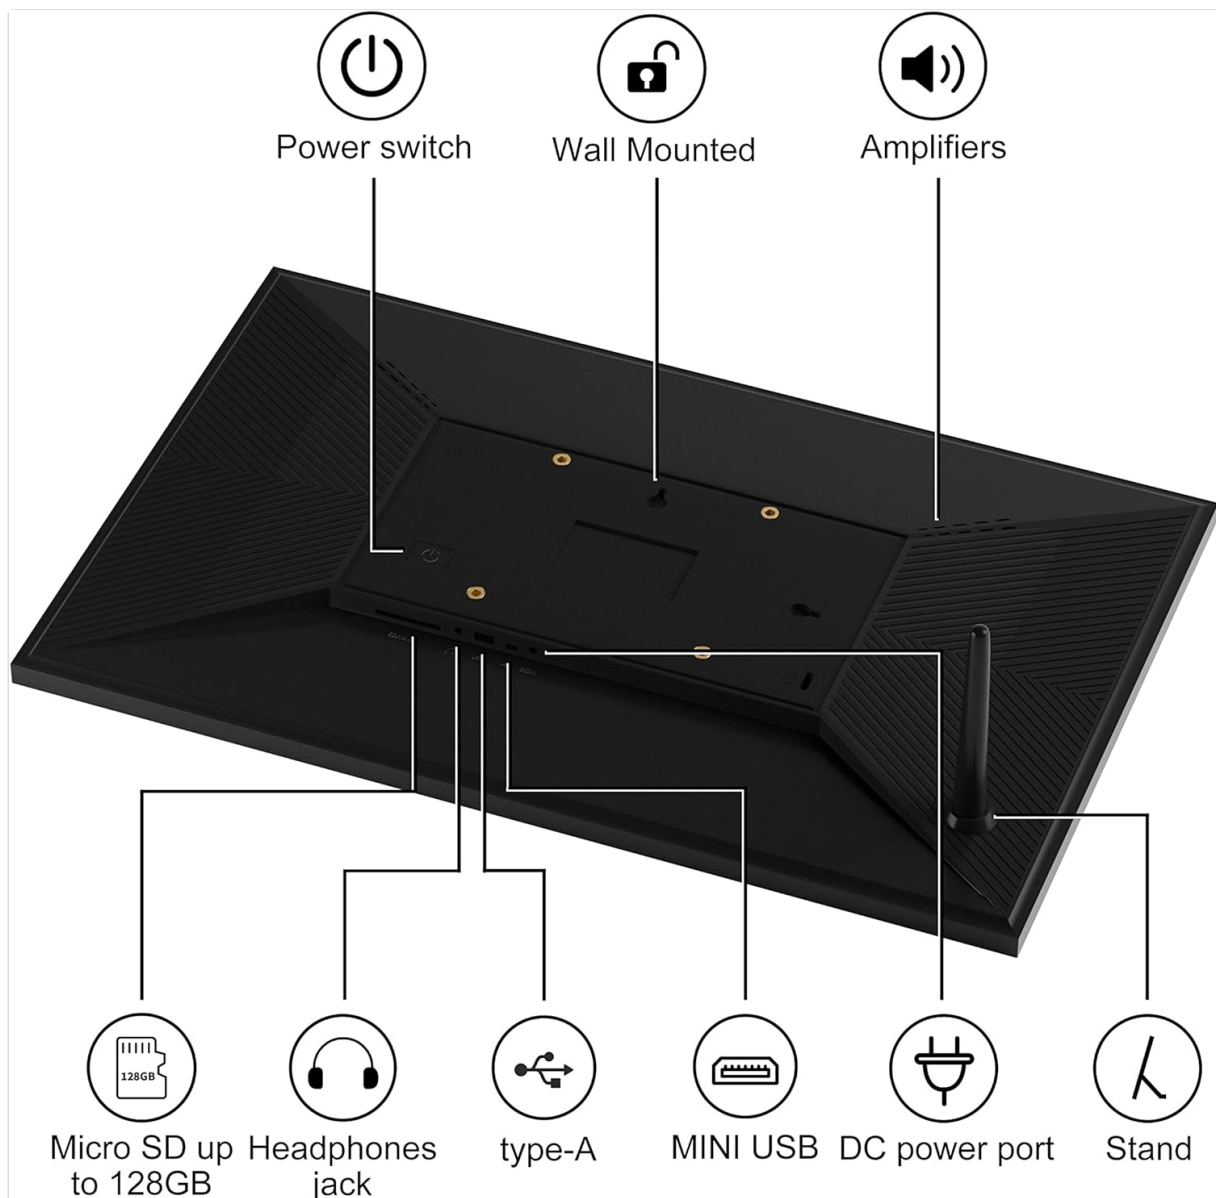


Image: Rear view of the Tibuta Digital Photo Frame, showing the power switch, wall mount holes, amplifiers, Micro SD card slot (up to 128GB), headphone jack, Type-A USB port, Mini USB port, DC power port, and the stand.

- **Power Switch:** Turns the device on or off.
- **Wall Mounted Holes:** For mounting the frame on a wall.
- **Amplifiers:** For audio output.
- **Micro SD Slot:** Supports Micro SD cards up to 128GB for expanded storage.
- **Headphone Jack:** For connecting external audio devices.
- **Type-A USB Port:** For connecting USB drives.
- **Mini USB Port:** For connecting to a computer or other devices.
- **DC Power Port:** Connect the power adapter here.
- **Stand:** Integrated stand for tabletop placement.

4. SETUP GUIDE

4.1 Step 1: Powering On

1. Connect the power adapter to the DC Power Port on the back of the frame.
2. Plug the power adapter into a wall outlet.

3. Press the Power Switch on the back of the frame to turn it on.

4.2 Step 2: Initial Setup

Upon first power-on, the frame will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. Select your network from the list and enter the password.
3. Set the time zone and date.

4.3 Step 3: Downloading the Uhale App

The Uhale App is essential for sharing photos and videos wirelessly to your frame. It is available for both Android and iOS devices.



Image: Instructions to download the free Uhale App from Google Play or the App Store, with a visual representation of the app interface and a digital photo frame displaying shared content.

- For Android devices, download from Google Play Store.
- For iOS devices, download from Apple App Store.

4.4 Step 4: Connecting the Frame to the App

Follow the on-screen instructions on your frame to generate a unique code. Open the Uhale App on your smartphone and enter this code to link your device. This allows you to send photos and videos directly to your frame.

5. OPERATING YOUR DIGITAL PHOTO FRAME

5.1 Navigating the Touch Screen

The frame features a responsive touch screen for easy navigation. Tap, swipe, and pinch to interact with the interface.



Image: A hand interacting with the touch screen of the Tibuta Digital Photo Frame, which displays two children. A smartphone screen on the right shows the Uhale app interface with a gallery of images.

- **Tap:** Select an item or open a menu.
- **Swipe:** Navigate through photos, menus, or settings.
- **Pinch-to-Zoom:** Zoom in or out on photos.

5.2 Adding Photos and Videos

There are multiple ways to add content to your frame:

- **Via Uhale App:** This is the primary and most convenient method. Open the app, select photos/videos from your device, and send them to the linked frame.
- **Via USB Drive or Micro SD Card:** Insert a USB drive into the Type-A port or a Micro SD card into the Micro SD slot. The frame will detect the storage and allow you to import media.

5.3 Automatic Rotation

The frame is equipped with an automatic rotation feature, ensuring your photos are always displayed in the

correct orientation, whether the frame is placed horizontally or vertically.

Auto Rotate



Image: Two digital photo frames demonstrating the auto-rotate feature. One frame is vertical, displaying a cat in portrait orientation. The other frame is horizontal, displaying a cat in landscape orientation. Icons for Photos, Audio, and Video are shown below.

5.4 Managing Content and Settings

Access the frame's settings menu to customize your experience:

- **Image Management:** Hide or publish images, zoom, add captions.
- **Slideshow Settings:** Adjust playback speed, transition effects, and order.
- **Display Settings:** Control brightness, contrast, and color.
- **Sleep Mode:** Schedule the frame to turn off/on automatically to save energy.
- **System Settings:** Manage Wi-Fi, date/time, language, and factory reset options.

6. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your digital photo frame, follow these guidelines:

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh

chemicals or abrasive materials.

- **Cleaning the Frame Body:** Wipe the frame body with a soft, dry cloth.
- **Placement:** Place the frame on a stable, flat surface or mount it securely on a wall. Avoid direct sunlight, high humidity, or extreme temperatures.
- **Power Off:** If not in use for an extended period, power off the frame and unplug the adapter.

7. TROUBLESHOOTING

If you encounter any issues with your Tibuta Digital Photo Frame, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frame won't turn on.	No power, loose connection.	Ensure power adapter is securely connected to the frame and a working power outlet. Press the power switch.
Cannot connect to Wi-Fi.	Incorrect password, out of range, network issue.	Double-check Wi-Fi password. Move frame closer to router. Restart router and frame.
Photos/videos not appearing.	Not sent correctly, unsupported format, storage full.	Verify content was sent successfully via Uhale App. Check file formats (MP4 for videos). Check available storage.
Touch screen unresponsive.	Temporary software glitch.	Restart the frame by turning it off and on again.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Tibuta
Model	15.6-inch Wi-Fi Digital Photo Frame
Screen Size	15.6 inches
Display Type	IPS Touch Screen
Resolution	768 x 1366
Internal Memory	32 GB
External Storage Support	Micro SD (up to 128GB), USB Drive
Connectivity	Wi-Fi, Bluetooth
Compatible Devices	Smartphone (via Uhale App)
Product Dimensions (L x W x H)	39 x 25 x 2.5 cm
Product Weight	1.64 kg

Feature	Specification
Power Source	AC Adapter (requires batteries for operation - likely refers to internal clock/memory backup)

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This Tibuta Digital Photo Frame comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please contact Tibuta customer support through the retailer's platform or the contact information provided with your product packaging.