

- Manuals.plus /
- › Zopsc /
- › Zopsc Digital Camera User Manual - Model Zopsc06s97ag2u1-12

Zopsc Zopsc06s97ag2u1-12

Zopsc Digital Camera User Manual

Model: Zopsc06s97ag2u1-12

INTRODUCTION

Thank you for choosing the Zopsc Digital Camera. This compact and portable camera is designed for capturing high-quality photos and 1080P videos, making it ideal for daily use and travel. It features a 0.96-inch color screen for real-time previews and supports up to 128GB memory cards for extensive storage. Please read this manual carefully to understand the camera's functions and ensure optimal performance.



Large storage space:
Supports up to 128GB of memory card
storage (not included), capable of holding
a large number of HD photos and videos

The Zopsc Digital Camera is suitable for capturing a variety of moments, from school events to travel adventures.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Zopsc Digital Camera
- 1 x Data Cable (for charging and data transfer)
- 1 x User Manual
- 1 x Hook Buckle
- 1 x Strap

Note: A memory card is not included and must be purchased separately.

PRODUCT FEATURES

The Zopsc Digital Camera offers a range of features designed for ease of use and quality capture:

- **Portability and Clarity:** Compact design with 3760x2128 pixel resolution for clear photos.
- **1080P Video Excellence:** Records dynamic moments with 1080P video resolution and real-time previews on the 0.96-inch color screen.
- **Extended Battery Life:** Built-in 180mAh lithium-ion battery provides up to 100 minutes of continuous operation.
- **Expansive Storage Capacity:** Supports memory cards up to 128GB (not included) for storing numerous high-resolution photos and videos.
- **Durability and Versatility:** Constructed from robust yet lightweight ABS material, suitable for various environments.

More than just good looks

Better quality

more than beauty



HD video



Super Long Range



0.96 inch HD screen



One click to take a picture



Comes with 8 filters



Video Loop

Overview of the camera's main features, including HD video, long battery life, and a clear display.

1080P HD video
0.96 inch color screen, real time and clear shoot preview.

Long endurance design:

Built in 180mAh lithium ion battery provides up to 100 minutes of shoot endurance
No need for frequent charging, ensuring that you can fully record every moment of your life.



The camera offers 1080P video recording, a 0.96-inch color screen, and a built-in 180mAh battery for up to 100 minutes of use.

SETUP

1. Charging the Camera

1. Locate the USB-C port on the side of the camera.
2. Connect the provided data cable to the camera's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.

2. Inserting a Memory Card

1. Ensure the camera is powered off.
2. Locate the memory card slot next to the USB-C port.
3. Insert a compatible memory card (up to 128GB, not included) into the slot with the contacts facing down until it

clicks into place.

4. To remove, gently push the card in until it springs out.

3. Powering On/Off

1. To power on, press and hold the Power button (refer to the camera diagram for button location) for a few seconds until the screen illuminates.
2. To power off, press and hold the Power button again until the screen turns off.



The side of the camera features the USB-C port for charging and data transfer, and the slot for inserting a memory card.

OPERATING INSTRUCTIONS

1. Taking Photos

1. Ensure the camera is powered on and in photo mode (indicated on the screen).
2. Frame your shot using the 0.96-inch color screen.

3. Press the Shutter button (often labeled or indicated by an icon) once to take a picture.



The camera is designed for simple, one-click photo capture.

2. Recording Videos

1. Switch the camera to video recording mode (check the screen for the video icon).
2. Press the Record button (often the same as the Shutter button, or a dedicated button) to start recording.
3. Press the Record button again to stop recording.

3. Viewing Content


1. Enter playback mode (usually by pressing a dedicated button or navigating through the menu).
2. Use the navigation buttons (Up/Down or Left/Right) to browse through your photos and videos.
3. Press the OK/Play button to view a photo or play a video.

4. Using Filters

The camera comes with 8 built-in filters to enhance your photos. Access these filters through the camera's menu settings while in photo mode. Select your desired filter before taking a picture.

5. Loop Recording

This feature allows the camera to continuously record video, overwriting the oldest files when the memory card is full. This is useful for continuous monitoring or capturing events without manually managing storage. Enable or disable loop recording in the video settings menu.

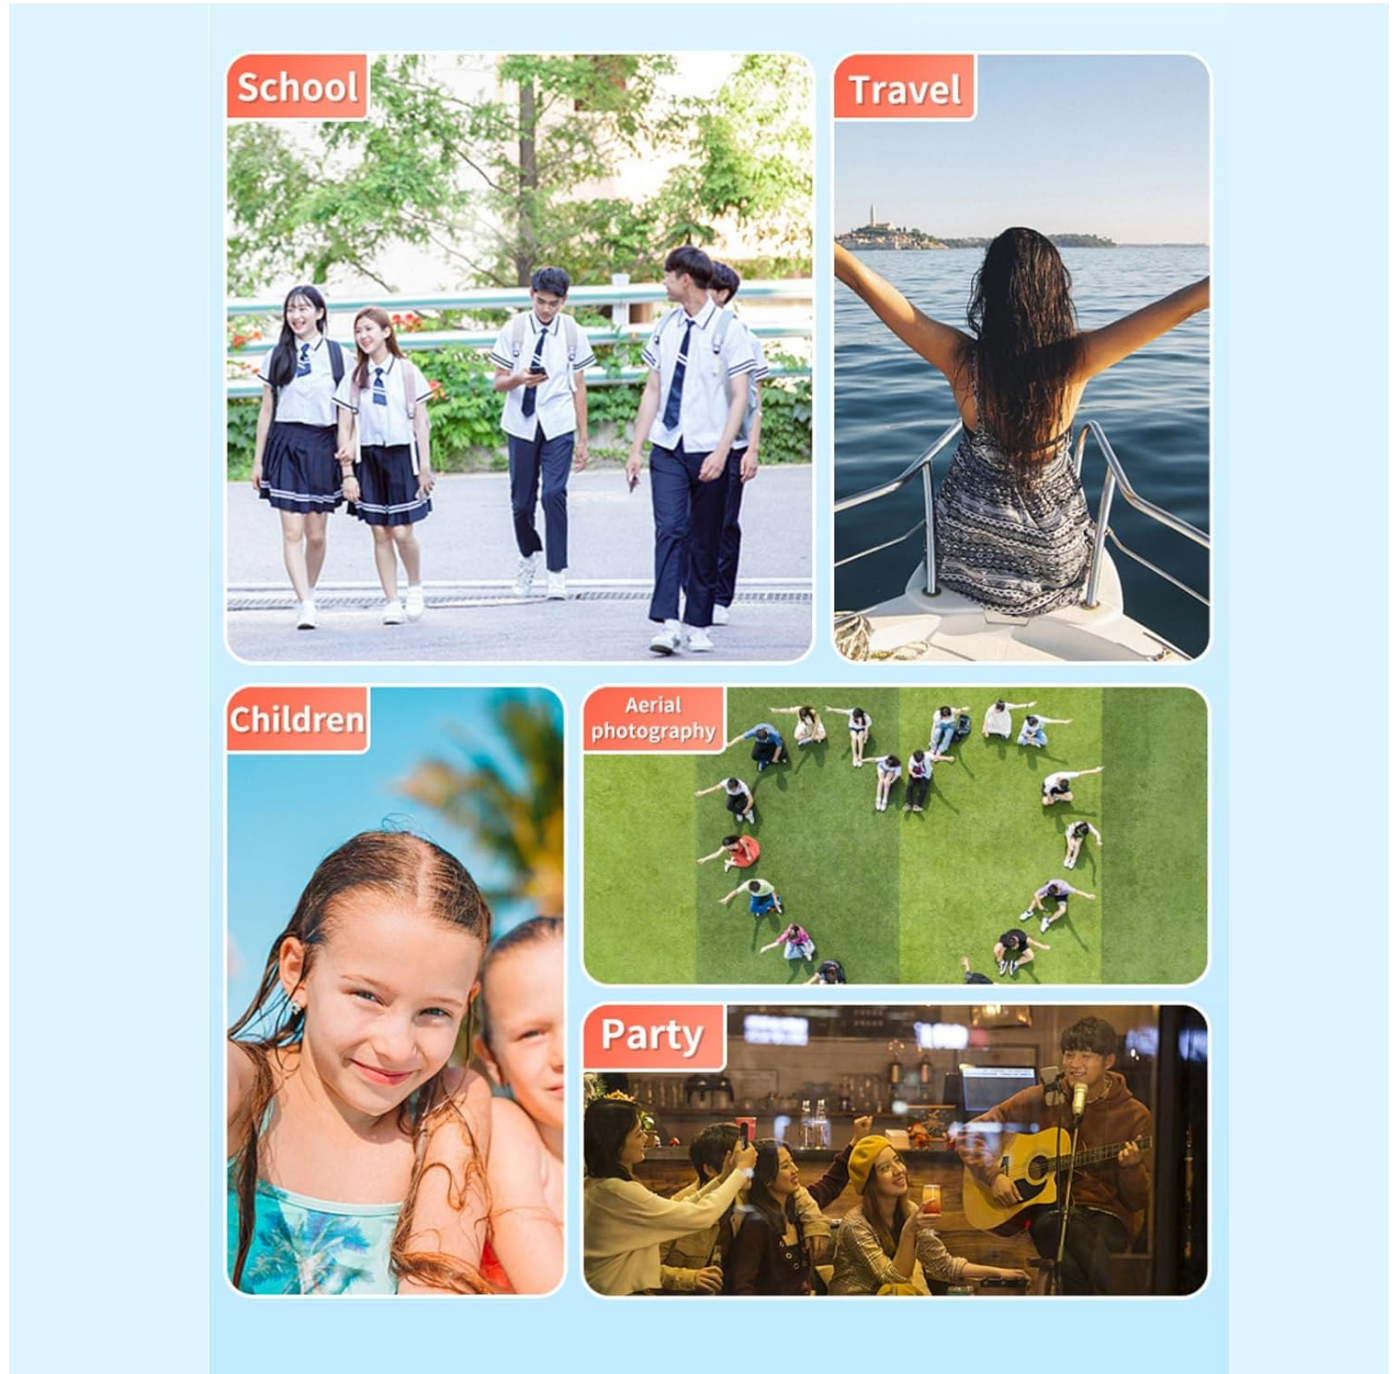

The camera supports video loop recording, automatically overwriting old files when storage is full.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, dry cloth to wipe the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.

- Do not use harsh chemicals or abrasive materials.

2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- Keep the camera away from dust and moisture.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Camera does not power on.	Low battery.	Charge the camera fully.
Cannot take photos/record videos.	No memory card or card is full.	Insert a memory card or delete old files to free up space.
Images are blurry.	Dirty lens; insufficient light; camera shake.	Clean the lens; ensure adequate lighting; hold the camera steady.
Camera freezes.	Software glitch.	Press and hold the Power button to force a shutdown, then restart. If issue persists, remove and reinsert the memory card.

SPECIFICATIONS

Feature	Detail
Brand	Zopsc
Model Name	Zopsc06s97ag2u1-12
Colour	White
Screen	0.96 inch Color Screen
Photo Resolution	3760x2128 pixels
Video Resolution	1080P
Storage Support	Up to 128GB Memory Card (not included)
Battery Type	Built-in 180mAh Lithium-ion Battery
Endurance Time	Approx. 100 minutes
Material	ABS
Item Weight	50 Grams
Country of Origin	China

WARRANTY AND SUPPORT

This product comes with **No Warranty** as per manufacturer specifications. For any operational issues or questions not covered in this manual, please refer to the seller for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question