

Manuals.plus /

- › LG /
- › LG Smart Inverter Microwave Oven 42 Litre MH8295DIS User Manual

LG MH8295DIS

LG Smart Inverter Microwave Oven

Model: MH8295DIS | 42 Litre Capacity

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your LG Smart Inverter Microwave Oven, Model MH8295DIS. Please read it thoroughly before using the appliance and retain it for future reference. The LG Smart Inverter Microwave Oven combines advanced inverter technology with a spacious 42-litre capacity and a grill function, offering versatile cooking options for your kitchen. Its digital display and touch controls ensure ease of use and precise cooking.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given.
- Do not use corrosive chemicals or vapors in this appliance.
- Ensure the appliance is properly grounded.
- Regularly inspect the power cord and plug for damage.

3. PACKAGE CONTENTS

Upon unpacking, ensure all items are present and undamaged:

- LG Smart Inverter Microwave Oven Unit

- Glass Turntable
- Turntable Ring
- Turntable Shaft
- Grill Rack (for grill function)
- User Manual (this document)

4. SETUP AND INSTALLATION

Proper installation is crucial for safe and efficient operation.

4.1 Placement

- Place the oven on a flat, stable surface strong enough to hold its weight (approximately 21 kg).
- Ensure adequate ventilation: leave at least 10 cm of space at the rear, 20 cm at the top, and 5 cm on each side.
- Avoid placing the oven near heat sources or in areas with high humidity.

4.2 Electrical Connection

- Plug the oven into a dedicated, properly grounded 230V, 50Hz electrical outlet.
- Do not use extension cords or adapters.

4.3 Turntable Assembly

1. Place the turntable shaft in the center of the oven cavity.
2. Position the turntable ring on the shaft.
3. Carefully place the glass turntable on the ring, ensuring it sits securely.



Image: Interior view of the LG Smart Inverter Microwave Oven, showing the glass turntable and the grill rack in place.

5. OPERATING INSTRUCTIONS

Your microwave oven features a digital display and touch controls for various cooking functions.



Image: Detailed view of the digital control panel, showing the display and touch buttons for various functions.

5.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the "Microwave" button (or equivalent icon).
4. Use the "+" and "-" buttons to set the desired cooking time.
5. Press "Start" to begin cooking.

5.2 Smart Inverter Technology

The Smart Inverter technology provides precise power control, ensuring even heating and defrosting. This prevents overheating and drying out of food, preserving nutrients and flavor.

5.3 Grill Function

To use the grill function for browning and crisping:

1. Place food on the grill rack (included) within a heat-resistant dish.
2. Press the "Grill" button (or equivalent icon).
3. Set the desired grilling time using the "+" and "-" buttons.
4. Press "Start". Monitor food closely to prevent burning.

5.4 Defrosting

The Smart Inverter system offers advanced defrosting capabilities:

1. Place frozen food in a microwave-safe container.
2. Press the "Defrost" button (often represented by a snowflake icon).
3. Select the food type and weight if prompted, or manually set the time.
4. Press "Start". Turn food over halfway through defrosting for best results.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your microwave oven.

6.1 Interior Cleaning

- Wipe the interior cavity with a damp cloth after each use to prevent food buildup.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen the grime.
- The glass turntable and turntable ring can be removed and washed with mild soap and water.
- Do not use abrasive cleaners or metal scouring pads.

6.2 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid spraying cleaners directly onto the control panel. Apply cleaner to a cloth first.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown.	Ensure door is latched; Check power connection; Check household fuse/breaker.
Food not heating evenly	Food not stirred/rotated; Incorrect power level; Turntable not rotating.	Stir or rotate food; Adjust power level; Ensure turntable is correctly placed.
Unusual noise during operation	Turntable not seated correctly; Foreign object in cavity.	Re-seat turntable; Remove any obstructions.
Digital display not working	Power interruption; Control panel issue.	Unplug and re-plug the oven; If issue persists, contact service.

8. SPECIFICATIONS

Brand: LG

Model: MH8295DIS

Capacity: 42 Liters

Power Output (Microwave): 1200 Watts

Voltage: 230 Volts

Product Dimensions (D x W x H): 43 x 53 x 31 cm

Item Weight: 21 kg

Special Features: Digital Display, Grill Function, Smart Inverter, Touch Control

Inner Material: Stainless Steel

Color: Silver (Note: Product images show a dark grey/black finish, but specifications list 'Silver'.)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official LG website for your region.

You can typically find support resources, FAQs, and service center locations on the LG website. When contacting support, please have your model number (MH8295DIS) and serial number ready.

LG Official Website: www.lg.com

PRODUCT OVERVIEW IMAGES



Image: Front view of the LG Smart Inverter Microwave Oven, showcasing its sleek dark grey finish and digital display.



Image: A frontal perspective of the microwave oven, highlighting its minimalist design.



Image: Angled view of the microwave oven, showing the side ventilation and overall compact form factor.



Image: The microwave oven with its door open, providing a clear view of the interior cavity and the side-mounted control panel.