

Eurotime 27139-08

Eurotime 27139-08 Quartz Alarm Clock for Children User Manual

Model: 27139-08

1. INTRODUCTION

Thank you for choosing the Eurotime 27139-08 Quartz Alarm Clock. This manual provides detailed instructions for the setup, operation, and maintenance of your new alarm clock. Please read it thoroughly to ensure proper use and to enjoy all its features.

2. SAFETY INFORMATION

- Keep the alarm clock away from water and high humidity.
- Avoid exposing the clock to extreme temperatures or direct sunlight.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel.
- Dispose of used batteries responsibly according to local regulations.
- This product is not a toy. Keep out of reach of very young children to prevent choking hazards from small parts.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Eurotime 27139-08 Quartz Alarm Clock
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your alarm clock.

4.1 Front View



Description: The front of the alarm clock features a square blue and white plastic casing. The clock face is grey with a distinctive robot design. It displays black hour and minute hands, a white timing second hand, and clear numerical hour markers from 1 to 12. A small light/snooze button is visible at the top edge.

4.2 Rear View



Description: The rear of the alarm clock is made of white plastic. It includes two black rotary knobs: one for setting the current time and another for setting the alarm time. Below these knobs is the battery compartment cover. The alarm ON/OFF switch is located on the right side of the casing.

4.3 Side View





Description: This side view shows the blue trim of the clock's casing. Prominently featured is the white alarm ON/OFF slide switch, positioned vertically on the right side of the clock, allowing for easy activation or deactivation of the alarm function.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding it down or lifting it off.

3. Insert one (1) AA battery (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

5.2 Setting the Current Time

1. Locate the **TIME SET** knob on the back of the clock (usually the rightmost knob).
2. Rotate this knob in either direction until the hour and minute hands display the correct current time.

5.3 Setting the Alarm Time

1. Locate the **ALARM SET** knob on the back of the clock (usually the leftmost knob).
2. Rotate this knob until the alarm hand points to your desired wake-up time.

6. OPERATING INSTRUCTIONS

6.1 Activating/Deactivating the Alarm

- To **activate** the alarm, slide the **ALARM ON/OFF** switch (located on the side) to the 'ON' position.
- To **deactivate** the alarm, slide the **ALARM ON/OFF** switch to the 'OFF' position.

6.2 Snooze and Light Function

- When the alarm sounds, press the large button located on the top of the clock to activate the **snooze** function. The alarm will temporarily stop and sound again after approximately 5 minutes.
- Pressing the same top button will also illuminate the clock face for a few seconds, providing a temporary **light** to view the time in the dark.

6.3 Crescendo Alarm

The alarm features a **crescendo** function, meaning the alarm sound starts softly and gradually increases in volume to ensure a gentle wake-up that becomes more insistent if not turned off.

7. MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the battery when the clock starts losing time or the alarm sound weakens. Always use a fresh AA battery.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage.

8. TROUBLESHOOTING

- **Clock not working / Hands not moving:**
 - Check if the battery is inserted correctly with the correct polarity.
 - Replace with a new AA battery.
- **Alarm not sounding:**
 - Ensure the **ALARM ON/OFF** switch is in the 'ON' position.
 - Verify that the alarm time is set correctly.
 - Check battery level.
- **Light/Snooze button not working:**

- Check battery level and replace if necessary.

9. SPECIFICATIONS

- **Model:** 27139-08
- **Type:** Quartz Alarm Clock
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions:** 9.5 x 3.81 x 9.5 cm (Length x Width x Height)
- **Features:** Timing second hand, Crescendo alarm, Light, Snooze function, Robot design
- **Casing Material:** Plastic

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer where you purchased this product or visit the official Eurotime website. Keep your proof of purchase for any warranty claims.