

Severin MW 9587

Severin MW 9587 Microwave Oven User Manual

Model: MW 9587

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these safety instructions may result in electric shock, fire, or injury.

- Do not operate the microwave oven when empty. This can damage the appliance.
- Do not place metal containers, foil, or utensils inside the microwave oven. Sparks may occur, leading to fire.
- Ensure proper ventilation around the appliance. Do not block ventilation openings.
- Supervise food being heated, especially when using high power settings.
- Liquids and other foods must not be heated in sealed containers as they are liable to explode.
- Do not use the microwave for deep-frying.
- Always use oven mitts when removing hot items from the microwave.
- This appliance is intended for household use only.
- Keep the appliance and its cord out of reach of children.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW

The Severin MW 9587 is a compact and efficient microwave oven designed for countertop placement. It features a simple rotary control system for power and time settings.



Figure 1: Front view of the Severin MW 9587 microwave oven, showing the door, handle, and control panel with two rotary knobs.

Components:

- **Oven Cavity:** The interior space where food is placed for heating.
- **Oven Door:** Features a handle for opening and closing.
- **Control Panel:** Located on the right side, containing two rotary knobs for power and time settings.
- **Power Knob:** Used to select the desired microwave power level or defrost function.
- **Timer Knob:** Used to set the cooking duration.



Figure 2: Interior view of the microwave oven, highlighting the spacious cavity. This model does not feature a rotating turntable.

3. SETUP

1. **Unpacking:** Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape from the oven cavity and door.
2. **Placement:** Place the microwave oven on a stable, level, heat-resistant surface, such as a kitchen countertop. Ensure there is adequate space around the appliance for ventilation:
 - Minimum 10 cm (4 inches) clearance at the rear.
 - Minimum 20 cm (8 inches) clearance on the sides.
 - Minimum 30 cm (12 inches) clearance above.

Do not place the microwave oven near heat sources or over a range cooker.

3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (230V).

4. OPERATING INSTRUCTIONS

The Severin MW 9587 features intuitive rotary controls for easy operation.



Figure 3: The microwave oven in use, showing food being heated inside the cavity.

Basic Operation:

1. Place the food in a microwave-safe container inside the oven cavity.
2. Close the oven door securely.
3. **Set Power Level:** Turn the upper rotary knob (Power) to select the desired power setting. Available settings are:
 - 150W
 - 300W
 - 500W
 - 700W
 - 800W (Maximum Power)
 - Defrost (indicated by a snowflake symbol)
4. **Set Cooking Time:** Turn the lower rotary knob (Timer) clockwise to set the desired cooking time. The timer can be set up to 30 minutes. The microwave will start heating automatically once the timer is set.
5. When the set time elapses, the microwave will automatically stop and a signal will sound.
6. Carefully remove the food from the oven. Be aware that the container and food will be hot.

Using the Defrost Function:

The defrost function is designed to thaw frozen foods efficiently.

1. Place the frozen food in a microwave-safe container.
2. Turn the upper rotary knob (Power) to the "Defrost" setting (snowflake symbol).

3. Turn the lower rotary knob (Timer) to set the defrosting time. The defrost setting on the knob also indicates weight ranges (e.g., 0.1kg to 0.5kg) to guide approximate defrosting times. Adjust time based on food type and weight.
4. Monitor the food during defrosting and turn it over if necessary to ensure even thawing.

5. CARE AND MAINTENANCE

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Cleaning the Interior:**
 - Always unplug the appliance before cleaning.
 - Wipe the interior surfaces, including the oven cavity walls and door seal, with a soft, damp cloth and mild detergent.
 - For stubborn food splatters, place a bowl of water with lemon juice inside and heat on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.
 - Do not use abrasive cleaners or metal scouring pads, as these can scratch the surfaces.
- **Cleaning the Exterior:**
 - Wipe the exterior surfaces with a soft, damp cloth.
 - Ensure no water enters the ventilation openings.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not plugged in; door not closed properly; timer not set.	Ensure the power cord is securely plugged in. Close the door firmly. Set the timer knob.
Food is not heating.	Incorrect power level or cooking time set; food not microwave-safe.	Adjust power level and cooking time. Use only microwave-safe dishes.
Unusual noise during operation.	Loose items inside the cavity; improper placement of food container.	Ensure no loose items are inside. Reposition the food container. If noise persists, contact support.
Light inside is not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement. Do not attempt to replace it yourself.

If the problem persists after attempting these solutions, please contact Severin customer support.

7. SPECIFICATIONS

Model	MW 9587
Type	Microwave Oven (Countertop)
Capacity	20 Liters
Microwave Power Output	800 Watts

Voltage	230 Volts
Control Type	Rotary Knobs
Number of Power Levels	6 (including Defrost)
Dimensions (W x D x H)	46.5 cm x 39.5 cm x 27.5 cm
Weight	11.83 kg
Turntable	No

8. WARRANTY AND SUPPORT

Severin products are manufactured to high-quality standards. In the unlikely event of a defect or malfunction, please refer to your purchase documentation for warranty details.

For technical assistance, spare parts, or warranty claims, please contact Severin customer support through their official website or the retailer where the product was purchased. Please have your model number (MW 9587) and proof of purchase ready when contacting support.

You can find more information and contact details on the official Severin website www.severin.com

Related Documents - MW 9587

 SEVERIN SEVERIN Mikrowelle mit Grillfunktion - Bedienungsanleitung Umfassende Bedienungsanleitung für die SEVERIN Mikrowelle mit Grillfunktion, Modellreihen MW 7892, MW 7893, MW 7894, MW 7898. Erfahren Sie mehr über Sicherheit, Bedienung und Funktionen wie Auftauen, Erwärmen und Grillen.	
 SEVERIN SEVERIN MW 7777 Microwave Warranty Information Official warranty details for the SEVERIN MW 7777 microwave, outlining terms, conditions, exclusions, and how to claim your guarantee.	



[pdf] Dimension Guide

MW 9587 Solo microwave with glass base severin Innovative flat surface reflector For even heat distribution and perfectly cooked food completely without a rotating plate 9587000 en dwn alza cz Files infolist 12905476 |||

MW 9587 Solo microwave with glass base Innovative, flat-surface glass base with microwave reflector. For even heat distribution and perfectly cooked food, completely without a rotating plate. Due to 33 larger usable capacity* also suitable for large dishes. Perfectly suitable for square casserole...

lang:en score:20 filesize: 722.83 K page_count: 2 document date: 2024-11-26




[pdf]

MW 9587 Solo Mikrowelle mit Glasboden severin 23 нояб 2024 г — Innovativer flacher Mikrowellenreflektor Für eine gleichmäßige Wärmeverteilung und perfekt gegarte Speisen völ lig ohne Drehteller 9587000 de 11 |||

MW 9587 Solo Mikrowelle mit Glasboden Innovativer, flacher Glasboden mit Mikrowellenreflektor. Fr eine gleichmige Wrmeverteilung und perfekt gegarte Speisen, vllig ohne Drehteller. Durch 33 grere Nutzfläche* auch geeignet fr groes Geschirr. Perfekt geeignet fr eckige Auflaufformen und groe Teller....

lang:de score:20 filesize: 720.19 K page_count: 2 document date: 2024-11-19

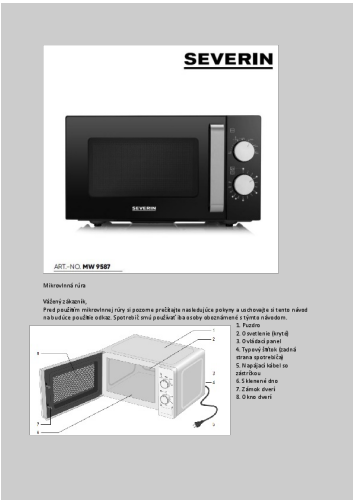

[pdf]

Hana Štěpánová Severin MW 9587 NÄ|vod 199 24 kB mikrovlnnÄ| rÄªra Nay sk 3230051 cdn nay images orig 1 |||

Mikrovlnn rra Vzen zkaznk, Pred použitím mikrovlnnej rry si pozorne prečítajte nasledujúce pokyny a uschovajte si tento nvod na budúce použitie odkaz. Spotrebic sm pouzva iba osoby oboznmen s tmto nvodom. 1. Puzdro 2. Osvetlenie kryt 3. Otvárac panel 4. Typový štítok zadná strana spotrebica 5. Napájac kb...

lang:hr score:13 filesize: 199.24 K page_count: 6 document date: 2025-01-02

ERP Ecodesign Requirements 2023 1636

Product	Manufacturer	Year	Model	Power	Energy	Water	Other
...	...	...	...	...	...	...	...

[pdf]

Direttiva sulla progettazione ecocompatibile Ali di pollo croccanti e patatine fritte dalla friggitrice ad aria

SEVERIN Official EcoDesign Richtlinie 05 2025 severin |||

ERP Ecodesign Requirements 2023/826 Category Haushalt / Beauty Haushalt /
Beauty Haushalt / Beauty Haushalt / Beauty Haushalt / Beauty Haushalt / Beauty
Haushalt / Beauty Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen Kitchen
Microwave Toasting oven Microwave Toasting oven Microwave ...

lang:de score:12 filesize: 162.11 K page_count: 7 document date: 2025-05-08