

[manuals.plus](#) /› [Ninestars](#) /› [NINESTARS DZT-50-16BSS Automatic Touchless Motion Sensor Oval Trash Can User Manual](#)

Ninestars DZT-50-16BSS

NINESTARS DZT-50-16BSS Automatic Touchless Motion Sensor Oval Trash Can User Manual

Model: DZT-50-16BSS | Brand: Ninestars

[Introduction](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty](#)

1. INTRODUCTION

This manual provides instructions for the NINESTARS DZT-50-16BSS Automatic Touchless Motion Sensor Oval Trash Can. This 13.2-gallon (50 L) stainless steel trash can features advanced infrared sensor technology for a hygienic, hands-free operation. Its oval design is suitable for various indoor environments such as kitchens, offices, and laundry rooms.

Key features include:

- **Touchless Operation:** Motion sensor lid opens automatically.
- **Large Capacity:** 13.2 Gallons (50 Liters) suitable for various settings.
- **Durable Materials:** Fingerprint-resistant stainless steel body and water-resistant infrared sensor.
- **Convenient Design:** Removable ring liner secures trash bags and maintains a clean appearance.
- **Low Maintenance:** Engineered for daily use with a smooth, quiet lid mechanism.





Image: Front view of the NINESTARS DZT-50-16BSS Automatic Touchless Motion Sensor Oval Trash Can.


2. INCLUDED COMPONENTS

The NINESTARS DZT-50-16BSS trash can package includes the following:

- Trash Can Base
- Trash Can Ring Liner
- Trash Can Lid (with integrated motion sensor)



Infrared Technology Preserves Battery Life

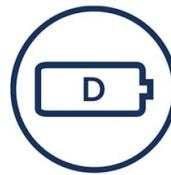

2x D Batteries

Image: Overview of key features and components of the trash can.

3. SETUP INSTRUCTIONS

3.1 Battery Installation

1. Locate the battery compartment on the underside of the lid.
2. Open the battery compartment cover.
3. Insert two (2) D-size batteries (not included) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.



Image: Battery compartment location on the lid, requiring two D batteries.

3.2 Trash Bag Installation

1. Remove the trash can lid.
2. Place a standard 13-gallon trash bag into the trash can base.
3. Fit the removable ring liner over the top edge of the trash bag, securing the bag in place.
4. Lower the ring liner and bag into the trash can base.
5. Replace the lid onto the trash can base, ensuring it is properly aligned.

3.3 Initial Placement

Position the trash can in your desired location. Ensure the motion sensor on the lid has a clear line of sight and is not obstructed by walls or other objects that might trigger it unintentionally.

4. OPERATING INSTRUCTIONS

4.1 Automatic Motion Sensor Operation

The trash can lid will automatically open when your hand or an object is detected within 10 inches and a 130-degree angle from the infrared sensor. The lid will remain open as long as the object or hand stays within the sensor's range. Approximately three seconds after the object or hand moves away, the lid will

close automatically and quietly.

Specs

NINESTARS®



Image: The motion sensor activating the lid to open.

4.2 Manual Open/Close Buttons

For situations requiring the lid to stay open for an extended period, such as during cooking or when changing the trash bag, use the manual buttons located on the lid:

- Press the **OPEN** button to keep the lid open.
- Press the **CLOSE** button to close the lid manually.

5. MAINTENANCE

5.1 Cleaning

- Wipe the exterior of the stainless steel body with a soft, damp cloth. Avoid abrasive cleaners to prevent scratching the fingerprint-resistant finish.
- Regularly wipe the infrared sensor with a dry cloth to remove any dust or obstructions.
- Clean the lid and interior surfaces as needed, especially when changing trash bags, to remove any debris or residue.

5.2 Battery Replacement

Under normal daily usage, the batteries are expected to last at least 6 months. When the lid mechanism becomes sluggish or unresponsive, it is time to replace the batteries. Refer to section 3.1 for battery installation instructions.

6. TROUBLESHOOTING

If you encounter issues with your NINESTARS DZT-50-16BSS trash can, please refer to the following common solutions:

Lid Does Not Open

- Ensure the power is on by pressing the power button on the lid.
- Check if the batteries are placed correctly according to polarity (+/-) and are not depleted. Replace if necessary.
- Wipe the infrared sensor with a dry cloth to remove any dust or obstructions.

7. PRODUCT SPECIFICATIONS

Brand	Ninestars
Model Number	DZT-50-16BSS
Capacity	13.2 Gallons (50 Liters)
Color	Black
Material	Plastic, Stainless Steel
Product Dimensions (L x W x H)	15.51" x 11.5" x 25.28"
Item Weight	7.25 pounds
Special Features	Motion Sensor, Odor Seal, Quiet Close, Removable Lid, Smudge Resistant
Power Source	2 x D Batteries (not included)
UPC	818855021886

8. WARRANTY INFORMATION

The NINESTARS DZT-50-16BSS Automatic Touchless Motion Sensor Oval Trash Can comes with a **2-year warranty**. For warranty claims or detailed information, please contact Ninestars customer service. Keep your proof of purchase for warranty validation.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your NINESTARS product, please visit the official Ninestars website or contact their customer service department. Refer to the product packaging or the Ninestars website for the most current contact information.

You can also visit the [Ninestars Store on Amazon](#) for more product information and support resources.

© 2025 Ninestars. All rights reserved.