

Dioche Dioche5fatyws48x

Dioche ABS Material Sewing Machine Reverse Button for 8280

Instruction Manual

[Introduction](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

Thank you for choosing the Dioche ABS Material Sewing Machine Reverse Button. This accessory is designed to enhance the functionality of your 8280 sewing machine by enabling precise reverse stitching. This manual provides essential information for proper installation, operation, and maintenance to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The Dioche Reverse Button is a durable and reliable replacement part for 8280 sewing machines. It is crafted from high-quality ABS material, known for its lightweight properties, high strength, and excellent wear resistance. The compact design ensures easy integration without affecting the overall operation of your sewing machine.

Key Features:

- **Durable ABS Material:** Provides lightweight, high strength, and wear-resistant performance.
- **Stable Performance:** Engineered for consistent operation without deformation.
- **Compact Design:** Ensures easy installation and replacement.
- **Secure and Non-Slip:** Features a glossy finish that is gentle on hands and fabric, with a non-slip texture for stable engagement.
- **Enhanced Sewing Efficiency:** Designed to improve the working performance of your 8280 sewing machine.



Figure 2.1: Angled view of the Dioche ABS Material Sewing Machine Reverse Button. This image shows the overall shape and smooth finish of the button.



Figure 2.2: Side view of the Dioche ABS Material Sewing Machine Reverse Button. This perspective highlights the ergonomic design and textured surface for grip.

3. SETUP AND INSTALLATION

This reverse button is designed as a direct replacement part for the 8280 sewing machine. Installation is straightforward, but always ensure your sewing machine is powered off and unplugged before attempting

any part replacement.

Installation Steps:

1. **Power Off:** Ensure your 8280 sewing machine is turned off and disconnected from the power source.
2. **Locate Existing Part:** Identify the current reverse button or lever on your sewing machine.
3. **Remove Old Part:** Carefully remove the old or damaged reverse button. Refer to your sewing machine's specific manual for detailed instructions on removing its reverse lever mechanism, if necessary.
4. **Install New Button:** Align the Dioche ABS Material Sewing Machine Reverse Button with the designated slot on your 8280 sewing machine. Gently press or slide it into place until it is securely seated.
5. **Verify Security:** Ensure the new button is firmly attached and does not wobble.
6. **Test Functionality:** Reconnect the power and turn on your sewing machine. Test the reverse button to confirm proper engagement and movement.



Figure 3.1: Bottom view of the reverse button, illustrating the attachment mechanism. This view helps in understanding how the button connects to the sewing machine.

4. OPERATING INSTRUCTIONS

The reverse button controls the direction of the fabric feeder, allowing for reverse stitching. This function is crucial for reinforcing seams at the beginning and end of your sewing projects.

How to Use:

1. **Start Stitching:** Begin sewing forward as usual.
2. **Engage Reverse:** To stitch in reverse, press and hold the Dioche Reverse Button. While the button is held, the sewing machine's feeder will move the fabric in the opposite direction.
3. **Reinforce Seams:** Use the reverse function to create a few stitches backward at the start and end of a seam. This locks the stitches in place, preventing unraveling.
4. **Release Button:** Release the button to resume forward stitching.

The non-slip texture of the button ensures a stable and comfortable grip during operation, allowing for precise control over your stitching.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Dioche Reverse Button, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the button periodically with a soft, dry cloth to remove dust and lint. Avoid using harsh chemicals or abrasive cleaners, as these can damage the ABS material and glossy finish.
- **Inspection:** Regularly inspect the button for any signs of wear, cracks, or damage. If significant wear is observed, consider replacing the part to maintain sewing efficiency.
- **Storage:** If removing the button for storage, keep it in a clean, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Dioche Reverse Button, consider the following:

- **Button Not Engaging:**
 - Ensure the button is correctly installed and fully seated in its mechanism.
 - Check for any obstructions preventing the button from moving freely.
 - Verify that your sewing machine is powered on and functioning correctly otherwise.
- **Loose or Wobbly Button:**
 - Re-check the installation to ensure it is securely attached.
 - If the button remains loose, it may indicate wear on the button or the machine's internal mechanism, requiring further inspection or replacement.
- **Incompatible Machine:** This button is specifically designed for the 8280 sewing machine. If you are using a different model, it may not function correctly.

For persistent issues, consult your 8280 sewing machine's original manual or contact a qualified sewing machine technician.

7. SPECIFICATIONS

Attribute	Detail
Product Name	Dioche ABS Material Sewing Machine Reverse Button

Model Number	Dioche5fatyws48x
Material	ABS
Compatibility	8280 Sewing Machine
Product Dimensions	2.75 x 2.75 x 0.39 inches (7 x 7 x 1 cm)
Item Weight	0.176 ounces (5 grams)

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage or customer support, please refer to the retailer's return policy or contact the manufacturer, Dioche, directly through their official channels.