

FT1211R

User Manual

Generic FT1211R Remote Control for Ceiling Fans

1. OVERVIEW

This manual provides instructions for the Generic FT1211R replacement remote control, designed for use with specific ceiling fan models, including Inspire Shamal RFC01 ST0045605 and Madeira 6592545. This remote is an infrared (IR) replacement and does not require complex programming. Please ensure your original remote matches the appearance of this replacement for full compatibility.



Figure 1: Front view of the Generic FT1211R remote control. It features buttons for fan and light control, fan speed, light dimming, fan direction, and timer functions.

2. PRODUCT FEATURES

- **Direct Replacement:** Functions as an infrared (IR) replacement for specified ceiling fan remotes.
- **No Programming Required:** Ready to use upon battery installation.
- **Comprehensive Control:** Manages fan speed, light on/off, light dimming, fan direction, and timer settings.
- **Durable Design:** Constructed for everyday use.

3. COMPATIBILITY

This remote control is specifically designed to be compatible with the following ceiling fan models:

- Inspire Shamal RFC01 ST0045605
- Madeira 6592545

Important: Before use, please verify that your original remote control matches the appearance and button layout of the FT1211R remote shown in this manual. If your fan model is not listed or your original remote differs significantly, full functionality may not be guaranteed. Contact the seller if you have compatibility concerns.

4. SETUP

4.1 Battery Installation

The FT1211R remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

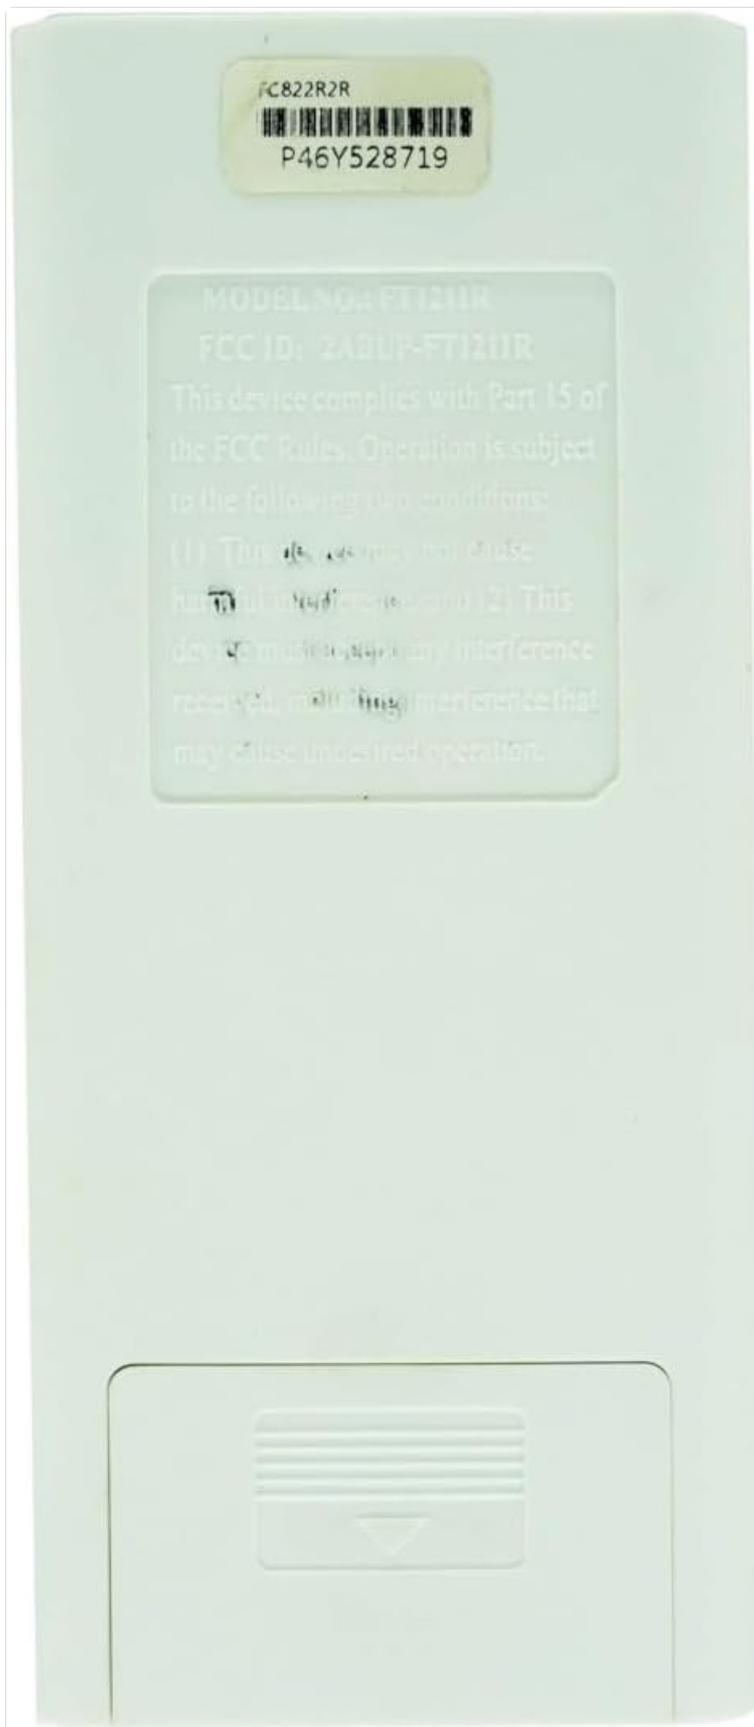


Figure 2: Back view of the remote control, illustrating the battery compartment and model information label.

Once batteries are installed, the remote is ready for use. No pairing or programming is typically required for this IR replacement remote.

5. OPERATING INSTRUCTIONS

Point the remote control directly towards the ceiling fan's receiver for optimal performance. Ensure there are

no obstructions between the remote and the fan.

5.1 Button Functions

- **FAN ON/OFF:** Press to turn the ceiling fan on or off.
- **LIGHT ON/OFF:** Press to turn the fan light on or off.
- **Light Dimmer/Brightness (* to * with bars):** Adjusts the brightness level of the fan light. Press and hold to dim or brighten.
- **Fan Speed Buttons (1, 2, 3, 4, 5):** Selects the desired fan speed. '1' is the lowest speed, and '5' is the highest.
- **F/R (Forward/Reverse):** Changes the direction of the fan blades. This is typically used to optimize air circulation for different seasons (e.g., downward airflow for cooling in summer, upward airflow for heat distribution in winter).
- **Timer Buttons (2h, 4h, 8h):** Sets the fan to operate for a specific duration (2, 4, or 8 hours) before automatically turning off.
- **Color Buttons (Yellow, White, Blue):** These buttons may control specific light color temperatures or modes if your fan's light kit supports such features. Their functionality depends on the fan model.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check if batteries are installed correctly with correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the fan's receiver.
 - Confirm the remote is compatible with your specific fan model (refer to Section 3).
- **Limited range:**
 - Replace batteries.
 - Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.
- **Some buttons not working:**
 - Verify compatibility. Some advanced functions may not be supported if your fan model does not have them or if the replacement remote does not fully replicate all original functions.

8. SPECIFICATIONS

Attribute	Detail
-----------	--------

Model Number	FT1211R
Power Source	2 x AAA Batteries (not included)
Compatible Devices	Ceiling Fans (Inspire Shamal RFC01 ST0045605, Madeira 6592545)
Color	White (with dark grey/green buttons)
Manufacturer	Easytry

9. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For any warranty claims, technical support, or further inquiries, please contact the seller or manufacturer directly through your purchase platform.

It is recommended to retain your purchase receipt as proof of purchase.