

B0F2MFQV3J

# Generic Outdoor Mesh Folding Chair User Manual

Model: B0F2MFQV3J

## 1. INTRODUCTION

Thank you for choosing the Generic Outdoor Mesh Folding Chair. This manual provides essential information for the safe and effective use, setup, and maintenance of your new chair. Designed for versatility, this lightweight and breathable lounge chair is suitable for various outdoor and indoor activities, offering adjustable comfort.

## 2. PRODUCT FEATURES

- Adjustable Recline:** The seat can be adjusted to 4 different angles (115°, 125°, 135°, 145°) for optimal comfort, allowing for both sitting and reclining positions.
- Durable Construction:** Features a high-hardness metal pipe frame and aviation-grade aluminum material, ensuring stability, corrosion resistance, and lightweight portability.
- Comfortable Materials:** Equipped with breathable mesh fabric for refreshing comfort and natural bamboo handrails that are smooth and durable.
- Integrated Pillow:** Includes a comfortable pillow for head and neck support.
- Convenient Storage:** Designed to fold compactly for easy transport and storage.
- Back Mesh Pocket:** A practical pocket on the back for storing small items like cups or magazines.

## 3. SETUP INSTRUCTIONS

Follow these steps to unfold and set up your folding chair:

- Unpack the Chair:** Carefully remove the chair from its packaging.
- Unfold the Frame:** Hold the top of the chair and gently pull the armrests outwards to begin unfolding the frame.
- Extend the Legs:** Continue to unfold until the legs are fully extended and locked into place. Ensure all four legs are stable on the ground.
- Adjust Recline (Optional):** To adjust the backrest angle, locate the adjustment mechanism on the side of the chair, typically near the armrests. Lift the armrest slightly and move it to the desired notch for one of the four available angles (115°, 125°, 135°, 145°). Ensure it clicks securely into place.



## Aviation grade aluminum material

Anti corrosion non rusting lightweight

Figure 3.1: The folding chair in an outdoor setting, showcasing its adjustable recline and integrated pillow.

### 4. OPERATING THE CHAIR

The primary operational feature of this chair is its adjustable backrest. To change the recline angle:

1. **Identify Adjustment Points:** Locate the adjustment levers or mechanisms on both sides of the chair, usually integrated with the armrests.
2. **Lift and Recline:** While seated or standing beside the chair, gently lift the armrests to disengage the current locking position.
3. **Select Angle:** Move the backrest to one of the four predefined angles: 115°, 125°, 135°, or 145°.
4. **Secure Position:** Ensure the armrests click firmly into the desired notch on both sides to secure the backrest at the chosen angle. Verify stability before applying full weight.

**4th gear adjustment angle**

**Adjustable gear range**

**115 ° 125 ° 135 ° 145 °**



Figure 4.1: Visual guide to the 4-gear backrest adjustment, illustrating the range of recline angles.

The back mesh pocket can be used to store lightweight items such as a book, phone, or small water bottle. Avoid overloading the pocket to prevent damage or instability.

Four adjustable gears can sit or lie down  
Comes with a comfortable pillow  
and supports without pressure



Figure 4.2: Close-up of the convenient mesh storage pocket located on the back of the chair.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your chair:

- **Cleaning the Fabric:** The Oxford cloth and mesh fabric can be cleaned with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Allow to air dry completely before folding or storing.
- **Frame Care:** The aluminum and metal frame can be wiped clean with a damp cloth. Inspect for any signs of rust or damage periodically.
- **Bamboo Handrails:** Wipe bamboo handrails with a dry or slightly damp cloth. Avoid prolonged exposure to moisture to prevent warping or cracking.
- **Storage:** When not in use, especially during inclement weather or off-season, fold the chair and store it in a dry, protected area to prevent wear and tear from elements.
- **Inspection:** Regularly check all screws, bolts, and joints to ensure they are tight and secure. Tighten any loose fasteners as needed.

# Back mesh pocket

Can hold small items such as cups and magazines



Figure 5.1: Detail of the breathable mesh fabric, which is easy to clean and maintain.

**Breathable mesh fabric is  
refreshing and comfortable**



Figure 5.2: The aviation-grade aluminum frame material, requiring minimal maintenance.

# Natural bamboo handrails

## Durable, smooth and comfortable



Figure 5.3: Natural bamboo handrails, which should be kept dry and clean.

## 6. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions:

- **Chair does not unfold smoothly:**
  - Ensure there are no obstructions. Gently apply pressure to the frame joints while unfolding. Do not force the mechanism.
- **Backrest does not lock into position:**
  - Check that the adjustment levers are fully engaged in the desired notches on both sides. Ensure no fabric or debris is blocking the locking mechanism.
- **Chair feels unstable:**
  - Verify that all legs are fully extended and resting evenly on a flat, stable surface. Check all frame connections for tightness and tighten any loose screws.
- **Squeaking noises:**
  - Apply a small amount of silicone-based lubricant to moving joints if squeaking occurs. Avoid oil-based lubricants that can attract dirt.

## 7. SPECIFICATIONS

Attribute	Detail
Product Name	Outdoor Mesh Folding Chair
Model Number	B0F2MFQV3J
Brand	Generic
Dimensions (Unfolded)	82 x 60.5 x 75 cm (32 x 24 x 30 in)
Storage Size (Folded)	60.5 x 16 x 75 cm (24 x 6 x 30 in)
Net Weight	3.58 kg (8 lb)
Load Bearing Capacity	120 kg (265 lb)
Color	Black (also available in Green)
Materials	Bamboo, Aluminum, Oxford Cloth, Stainless Steel
Adjustable Angles	115°, 125°, 135°, 145° (4 gears)
Batteries Required	No
Unit Count	1.0 Count
Pattern	Solid



Figure 7.1: Detailed dimensions of the chair in its unfolded state.

## 8. WARRANTY INFORMATION

---

This product comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## 9. CUSTOMER SUPPORT

---

For any questions, concerns, or assistance regarding your Generic Outdoor Mesh Folding Chair, please refer to your purchase documentation or contact the seller directly through the platform where the product was purchased. Please have your model number (B0F2MFQV3J) and proof of purchase ready when contacting support.

© 2026 Generic. All rights reserved.