

LifeBasis KS-2626E

LifeBasis Rechargeable Power Scrubber 11-Piece Kit Instruction Manual

Model: KS-2626E



1. PRODUCT OVERVIEW

The LifeBasis Rechargeable Power Scrubber is a versatile and efficient cleaning tool designed to simplify various household and outdoor cleaning tasks. Featuring high-frequency vibration technology, it offers powerful scrubbing action to tackle tough dirt and grime. Its cordless and rechargeable design, coupled with IPX7 waterproofing, ensures convenience and durability for a wide range of applications.

Key Features:

- **Powerful and Efficient Cleaning:** High-frequency vibration up to 5,800 per minute for faster and more effective cleaning than manual scrubbing.
- **Rechargeable and Battery Indicator:** Cordless operation with a built-in rechargeable battery. LED indicator changes from green (full) to yellow (low) to red (needs charge) for easy power monitoring.
- **Professional and Easy-to-Use:** Comes with 5 different replacement brush heads for various cleaning needs without scratching surfaces. Simple one-button operation.
- **IPX7 Waterproof and Ergonomic Design:** Lightweight structure with a rubberized non-slip handle for comfortable grip and reduced hand fatigue. IPX7 water-resistant assembly for durability (do not immerse the whole brush in water).
- **Indoor and Outdoor Cleaning Essential:** Suitable for floors, faucets, drains, sinks, tiles, grout, showers, toilets, counters, stove-tops, appliances, patio grills, car trim, and tires.

2. WHAT'S INCLUDED IN THE BOX

Your LifeBasis Rechargeable Power Scrubber kit includes the following components:

- 1 x Power Handle (Main Unit)
- 1 x Grout Brush
- 1 x Large Brush
- 1 x Shoe Brush
- 1 x Soft Bristle Brush
- 1 x Velcro Head
- 3 x Scrubber Pad Refills (Red)
- 3 x Microfiber Pad Refills (White)
- 1 x Type-C Charging Cable
- 1 x Lanyard
- 1 x Product Manual



Image: All components of the LifeBasis Rechargeable Power Scrubber 11-piece kit laid out, including the red and gray power handle, various brush heads, scrubber pads, microfiber pads, Type-C charging cable, lanyard, and user manual.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the power scrubber. The device features a built-in 2500mAh battery and charges via a Type-C USB cable.

1. Locate the Type-C charging port at the bottom of the power handle.
2. Open the silicone cover protecting the charging port.
3. Connect the provided Type-C charging cable to the port and plug the other end into a compatible USB power adapter (not included, 5V/1A recommended).
4. The LED indicator light will show the charging status:
 - **Red:** Charging
 - **Yellow:** Low battery
 - **Green:** Fully charged
5. A full charge takes approximately 3-4 hours and provides 90-150 minutes of working time.
6. Ensure the silicone cover is securely sealed after charging to maintain IPX7 waterproof rating.



Image: The LifeBasis Power Scrubber handle showing the Type-C charging port and the LED battery indicator with green, yellow, and red states.

Your browser does not support the video tag.

Video: A demonstration of charging the LifeBasis Power Scrubber. The video shows the Type-C port being uncovered, the cable being plugged in, and the LED indicator showing charging status. It also briefly shows the scrubber in use on a sink faucet.

3.2 Installing Brush Heads

The LifeBasis Power Scrubber comes with various interchangeable brush heads and pads for different cleaning tasks.

1. Select the appropriate brush head for your cleaning task.
2. Align the brush head with the snap-fit joint on the power handle.
3. Insert the brush head into the handle.
4. Grip the head and rotate it clockwise until the vertical line engraved on the brush head and handle are aligned, indicating it is securely locked.

5. To remove a brush head, rotate it counter-clockwise and pull it out.



Stainless Steel Wire Brush Head

PP bristles lift dirt, steel wires scrub tough grime—interlocked for durability. Stains don't stand a chance!



Shoe Brush Head

Smartly designed to easily clean any corner of your shoes—from toe to heel, sparking clean!

Image: A step-by-step visual guide demonstrating how to install a brush head onto the LifeBasis Power Scrubber handle by aligning and twisting.

Brush Head Options:

- **Large Brush:** Ideal for large flat surfaces such as hard floors, walls, doors, windows, counters, patio furniture, pools, soap scum, stoves, and carpets.
- **Grout Brush:** Designed for tile grout, edges, corners, and hard-to-reach places.
- **Soft Bristle Brush:** Suitable for delicate, fragile surfaces like glass and shoes.
- **Shoe Brush:** Specifically designed for cleaning shoes and other similar items.
- **Velcro Head with Scrubber/Microfiber Pads:** For tableware, gas ranges, sinks, bathtubs, and ceramic surfaces. The pads attach via Velcro.

5 Replacement Brush

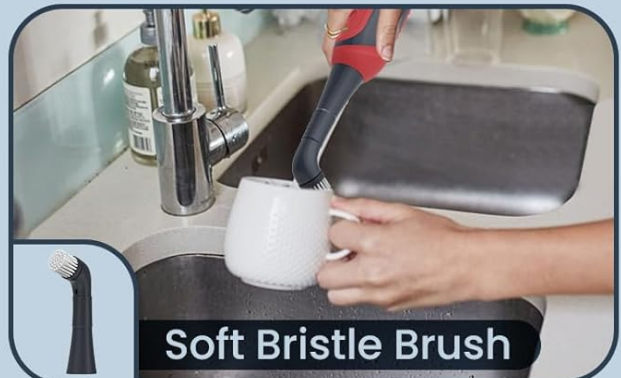


Image: A collage showing the different brush heads included with the LifeBasis Power Scrubber, including large brush, grout brush, shoe brush, soft bristle brush, and Velcro head with pads, demonstrating their intended uses.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To operate the power scrubber:

1. Ensure a brush head is securely installed and the device is charged.
2. Press the power button located on the handle once to turn the device ON. The brush head will begin to oscillate.
3. Press the power button again to turn the device OFF.


4.2 General Usage Tips

- Apply a suitable cleaning solution to the surface you intend to clean.

- Gently guide the oscillating brush head over the surface. Avoid pressing too hard, as this can reduce the effectiveness of the vibration and potentially strain the motor.
- For optimal results, allow the high-frequency vibrations to do the work.
- Use the lanyard for convenient storage or to keep the device secure while moving between cleaning areas.

POWERFUL & EFFICIENT

High-frequency Cleaning with Up to 5,800 Vibrations Per Minute

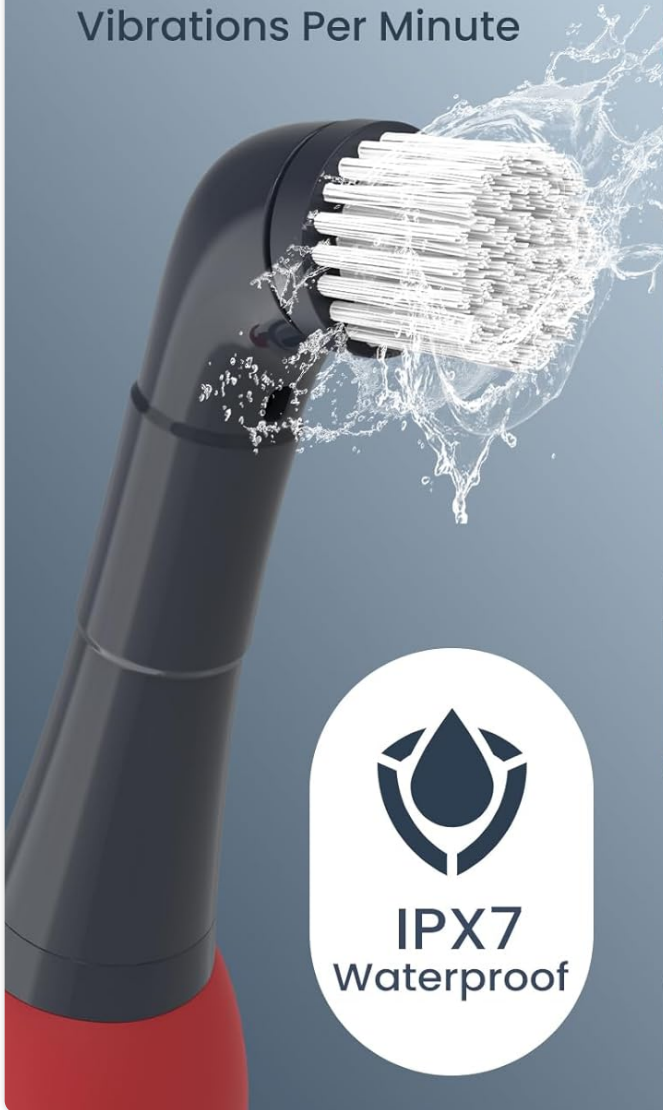

How To Install Brush Head



1. Select a brush head and insert it into the handle by aiming at the Snap-Fit Joint.



2. Grip the head and rotate it clockwise.



3. Installation is complete when the vertical line engraved on the brush head and handle are on the same line

*** To remove the brush, rotate it counter clockwise and pull it out.**

Image: The LifeBasis Power Scrubber with a brush head actively cleaning a surface, demonstrating its high-frequency cleaning action and IPX7 waterproof rating.

Your browser does not support the video tag.

Video: A user demonstrates cleaning a shower head and faucet with the LifeBasis Power Scrubber, highlighting its effectiveness against hard water stains and soap scum. The video shows the soft bristle brush and grout brush in action.

5. MAINTENANCE

5.1 Cleaning the Product

- Always clean the handle and brush heads separately.
- Use a neutral detergent if necessary; avoid all solvents and harsh detergents.
- Clean the brush head after use by rinsing it under running water with the handle switched on.
- Use clean water to wash the surface of the handle and wipe it with a soft cloth until dry.
- DO NOT press the rubber sealing ring with sharp items or metal objects, as it will be damaged.
- DO NOT submerge the handle in water.

5.2 Storage

Store the power scrubber in a cool, dry place away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING GUIDE

If you encounter any issues with your LifeBasis Power Scrubber, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Unable to charge	Using a high-power charging adapter.	Choose a 5V-1A USB adapter to charge.
The vibration strength becomes weak.	<ol style="list-style-type: none"> 1. The brush is pressed too hard against the cleaning object. 2. The brush head is not installed properly. 3. Low battery. 	<ol style="list-style-type: none"> 1. Gently press the brush head while cleaning. 2. Reinstall the brush head. 3. Charge it in time.
The brush stops working suddenly.	<ol style="list-style-type: none"> 1. Too much pressure applied on the brush. 2. Battery runs out. 	<ol style="list-style-type: none"> 1. Gently press the brush head while cleaning. 2. Charge it in time.

7. PRODUCT SPECIFICATIONS

- **Brand:** LifeBasis
- **Model:** KS-2626E
- **Color:** Red
- **Handle Material:** Plastic
- **Material:** Plastic
- **Input:** 5.0V 1.0A
- **Battery Type:** Li-ion Battery
- **Battery Capacity:** 3.7V 2500mAh
- **Charging Time:** 3-4 Hours
- **Working Time:** 90-150 Minutes
- **Waterproof Grade:** IPX7
- **Item Weight:** 0.4 Kilograms
- **Other Special Features:** Lightweight, Rechargeable, Replaceable Head

8. WARRANTY AND SUPPORT

LifeBasis is committed to providing high-quality products. For any questions about the product, warranty information, or support needs, please refer to the contact information provided in your product packaging or visit the official LifeBasis website.

If you have any questions about the products, we will give you a solution ASAP.
