

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LifeBasis](#) /

› [LifeBasis KS-2626E Rechargeable Power Scrubber Mini User Manual](#)

LifeBasis KS-2626E

LifeBasis KS-2626E Rechargeable Power Scrubber Mini User Manual

Model: KS-2626E | Brand: LifeBasis

1. INTRODUCTION

Thank you for choosing the LifeBasis KS-2626E Rechargeable Power Scrubber Mini. This cordless electric cleaning brush is designed to simplify your cleaning tasks with its high-frequency vibration technology and versatile brush heads. Please read this manual thoroughly before use to ensure safe and optimal performance.

2. WHAT'S INCLUDED

Your LifeBasis Power Scrubber Mini package contains the following items:

- 1 x Rechargeable Power Handle
- 1 x Large Brush Head
- 1 x Grout Brush Head
- 1 x Soft Bristle Brush Head
- 1 x Shoe Brush Head
- 1 x Velcro Head
- 3 x Scrubber Pad Refills
- 3 x Microfiber Pad Refills
- 1 x Type-C Charging Cable
- 1 x Lanyard
- 1 x Product Manual

- 1 X Power Handle
- 1 X Grout Brush
- 1 X Large Brush
- 1 X Shoe Brush
- 1 X Soft Bristle Brush
- 1 X Velcro Head
- 3 X Scrubber Pad Refills
- 3 X Microfiber Pad Refills
- 1 X Type-C Charging Cable
- 1 X Lanyard
- 1 X Product Manual



The complete package contents laid out: the power handle, grout brush, large brush, shoe brush, soft bristle brush, Velcro head with scrubber and microfiber pad refills, Type-C charging cable, lanyard, and the product manual.



The LifeBasis Rechargeable Power Scrubber, presented with its full set of accessories, including the main handle, five distinct brush heads, and various scrubbing pads.

Your browser does not support the video tag.

This official video from LifeBasis USA provides a comprehensive overview of the Rechargeable Power Scrubber. It showcases the unboxing experience, details each component, explains how to attach brush heads, demonstrates the charging process, and illustrates the scrubber's versatility across different cleaning tasks in the home.


3. SETUP

3.1 Attaching Brush Heads

1. Select the desired brush head.
2. Align the brush head with the snap-fit joint on the power handle.
3. Insert the brush head and rotate it clockwise until the vertical line engraved on the brush head aligns with the line on the handle, indicating it is securely locked.
4. To remove, rotate counter-clockwise and pull it out.

POWERFUL & EFFICIENT

High-frequency Cleaning
with Up to 5,800
Vibrations Per Minute

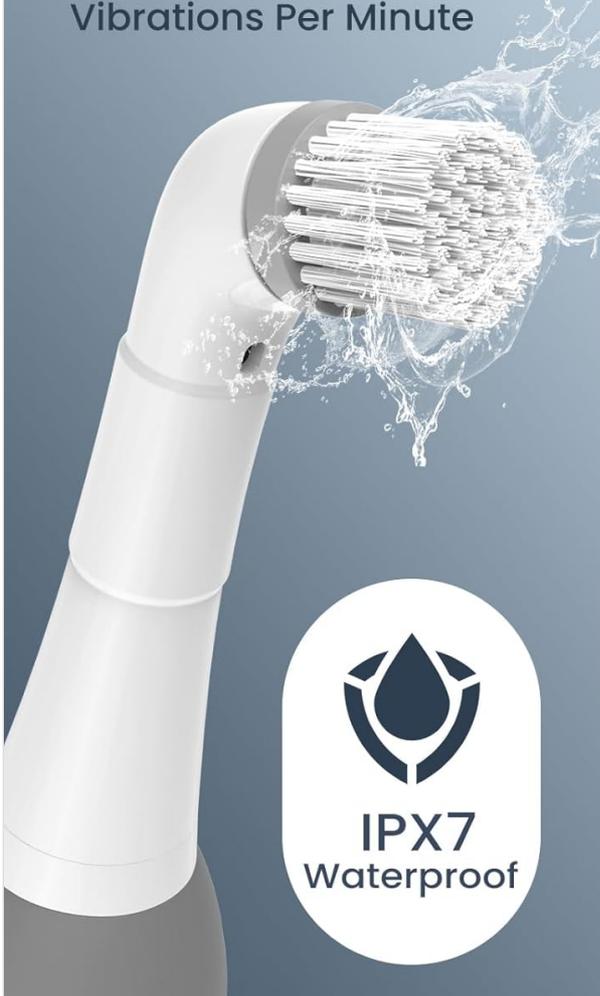

How To Install Brush Head

01



1. Select a brush head and insert it into the handle by aiming at the Snap-Fit Joint.

02



2. Grip the head and rotate it clockwise.

03



3. Installation is complete when the vertical line engraved on the brush head and handle are on the same line

*** To remove the brush, rotate it counter clockwise and pull it out.**

Step-by-step instructions demonstrating how to securely attach a brush head: align with the snap-fit joint, rotate clockwise to lock, and ensure alignment of engraved lines.

3.2 Charging the Device

The LifeBasis Power Scrubber Mini is equipped with a built-in rechargeable battery. Before first use, fully charge the device.

- Open the protective cover at the bottom of the handle to reveal the Type-C charging port.
- Connect the provided Type-C charging cable to the port and a suitable USB power adapter (not included).
- The LED indicator light will show the charging status:
 - **Green:** Fully charged
 - **Yellow:** Low battery
 - **Red:** Charging
- A full charge typically takes 3-4 hours and provides 90-150 minutes of working time.
- Ensure the protective cover is securely closed after charging to maintain IPX7 water resistance.



USB-C

Rechargeable Power Scrubber



**Built-in
battery**



**90-150 Minutes
Long Work Time**



**3-4 Hours
Fast Charging**



LED Indicators

When it is fully charged it is green,
gradually changing to yellow and finally
to red means it needs to be recharged.

The LifeBasis Power Scrubber connected to a USB-C charging cable, illustrating the green LED indicator for a fully charged battery.



A visual explanation of the battery indicator light: green signifies a full charge, yellow indicates low battery, and red means the device is currently charging.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To turn the scrubber on or off, simply press the power button located on the handle. The device features high-frequency vibration up to 5,800 per minute for efficient cleaning.

4.2 Brush Head Functions

Choose the appropriate brush head for your cleaning task:

- **Large Brush:** Ideal for large flat surfaces such as hard floors, walls, doors, windows, counters, patio furniture, pools, and for removing soap scum or carpet stains.
- **Grout Brush:** Designed for tile grout, edges, corners, and other hard-to-reach places.
- **Soft Bristle Brush:** Suitable for delicate and fragile surfaces like glass or shoes.
- **Shoe Brush:** Specifically shaped for cleaning shoes and other similar items.

- **Velcro Head:** Use with the included scrubber pads (for tough stains) or microfiber pads (for gentle cleaning) on tableware, gas ranges, sinks, bathtubs, and ceramic surfaces.

5 Replacement Brush



A visual guide to the five specialized brush heads included: Large Brush for broad surfaces, Grout Brush for narrow spaces, Shoe Brush for footwear, Soft Bristle Brush for delicate items, and a Velcro Head for attaching pads.



Stainless Steel Wire Brush Head

PP bristles lift dirt, steel wires scrub tough grime—interlocked for durability. Stains don't stand a chance!



Upgraded Brush Head

Shoe Brush Head

Smartly designed to easily clean any corner of your shoes—from toe to heel, sparking clean!

Detailed view of the brush head attachment point, highlighting the robust stainless steel wire bristles and the design of the shoe brush head for effective cleaning.



**One Tool
Multiple
Uses**



Grout & Corner



Stovetops



Hard-to-reach Areas



Sinks

Illustrations of the scrubber's diverse applications, showing its effectiveness in cleaning grout and corners, stovetops, tight spaces, and sink areas.

Your browser does not support the video tag.

This official video from LifeBasis USA provides a comprehensive overview of the Rechargeable Power Scrubber. It showcases the unboxing experience, details each component, explains how to attach brush heads, demonstrates the charging process, and illustrates the scrubber's versatility across different cleaning tasks in the home.

5. MAINTENANCE

5.1 Cleaning the Device and Brush Heads

- After each use, remove the brush head from the power handle.
- Rinse the brush head thoroughly under running water to remove any cleaning solution or debris.
- Wipe the power handle with a damp cloth. Do not immerse the entire power handle in water, as only the brush head is designed for direct water contact.
- Allow all components to air dry completely before reassembling or storing.

5.2 Storage

Store the LifeBasis Power Scrubber Mini and its accessories in a cool, dry place away from direct sunlight and extreme temperatures. Keep out of reach of children.

6. TROUBLESHOOTING

- **Device does not turn on:** Ensure the battery is charged. Check the LED indicator for charging status. If the battery is fully charged and the device still doesn't turn on, contact customer support.
- **Reduced power/performance:** The battery may be low. Recharge the device. If performance remains low after a full charge, contact customer support.
- **Brush head detaches during use:** Ensure the brush head is correctly installed and rotated clockwise until securely locked.
- **Excessive noise:** Some brush heads, particularly the shoe brush, may produce more noise due to their design and thorough cleaning action. This is normal. If the noise is unusual or excessive, ensure the brush head is properly attached.

7. SPECIFICATIONS

Feature	Detail
Brand	LifeBasis
Model Number	KS-2626E
Color	White
Handle Material	Rubber
Material	Nylon, Rubber
Special Feature	Non Abrasive
Surface Recommendation	Indoor
Item Weight	14.4 ounces
Battery	Built-in 2500mAh (Rechargeable)
Charging Time	3-4 Hours
Working Time	90-150 Minutes
Vibration Frequency	Up to 5,800 per minute
Water Resistance	IPX7 (Do not immerse the whole cleaning brush in water)

8. WARRANTY & SUPPORT

LifeBasis is committed to providing high-quality products. While specific warranty details are not provided in this manual, if you have any questions or encounter issues with your LifeBasis Power Scrubber Mini, please contact our customer support team. We are dedicated to providing a solution as soon as possible. For further assistance, please refer to the contact information provided on the product packaging or the official LifeBasis website.