

enya INSPIRE

ENYA INSPIRE Electric Guitar Compact Foot Pedal Controller

User Manual

1. INTRODUCTION

Thank you for choosing the ENYA INSPIRE Electric Guitar Compact Foot Pedal Controller. This device is designed to provide guitarists with smart app integration and instant tone switching capabilities, enhancing your performance and creative control. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your new controller.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power source (Battery Powered) for this device. Do not attempt to open or modify the battery compartment.
- **Environment:** Avoid exposing the device to extreme temperatures, humidity, or direct sunlight. Keep it away from water and other liquids.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays.
- **Handling:** Handle the device with care. Avoid dropping or subjecting it to strong impacts.
- **Repairs:** Do not attempt to repair the device yourself. Refer all servicing to qualified personnel.

3. PRODUCT OVERVIEW

The ENYA INSPIRE Foot Pedal Controller is a compact and robust device designed for seamless integration into your guitar setup. It features four hyper-responsive metal footswitches for quick command execution and a sleek, portable design.

3.1 Components

- **Footswitches:** Four tactile metal footswitches for controlling effects and presets.
- **LED Indicators:** Small LED lights near each footswitch to indicate status or active preset.

- **Charging Port:** For recharging the internal battery.
- **Bluetooth Module:** For wireless connection to the dedicated mobile application.

3.2 Product Views



Figure 1: Top-down view of the ENYA INSPIRE Foot Pedal Controller. This image highlights the four footswitches and the sleek design of the unit.



Figure 2: Side view of the ENYA INSPIRE Foot Pedal Controller. This perspective emphasizes the compact and ultra-portable build of the

4. SETUP

4.1 Initial Charging

Before first use, fully charge the ENYA INSPIRE controller. Connect the provided charging cable to the charging port on the device and to a suitable USB power adapter. A full charge takes approximately 90 minutes and provides up to 8 hours of continuous use.

4.2 Pairing with the App

1. Download the official ENYA INSPIRE application from your device's app store (iOS/Android).
2. Ensure Bluetooth is enabled on your mobile device.
3. Power on the ENYA INSPIRE controller. The LED indicators will flash, indicating pairing mode.
4. Open the ENYA INSPIRE app and follow the on-screen instructions to connect to your controller. Once connected, the LED indicators will become solid.

5. OPERATING INSTRUCTIONS

The ENYA INSPIRE controller offers versatile control over your guitar tones and effects through its physical footswitches and integrated smart app.

5.1 Basic Footswitch Operation

The controller features four footswitches. Each button pair can be assigned to 4 DIY presets. Pressing a footswitch activates or deactivates its assigned function or switches to a specific preset.

- **Instant Tone Switching:** The advanced pedal matrix allows for instant cycling across three customizable tone presets.
- **Response Time:** Experience lightning-fast 0.3-second command execution for smooth effect transitions.

5.2 App Integration and Customization

The dedicated ENYA INSPIRE app unlocks the full potential of your controller, providing access to hundreds of preset tones and extensive customization options.

- **Preset Management:** Browse and select from a vast library of preset tones.
- **Customizable EQ Parameters:** Fine-tune your sound with detailed equalizer adjustments.
- **Modular Effect-Chain Configurations:** Create and save your unique effect chains.
- **Assigning Functions:** Assign specific effects, presets, or commands to each footswitch via the app.

Refer to the in-app help section for detailed guidance on advanced customization features.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your ENYA INSPIRE controller.

- **Cleaning:** Regularly wipe the device with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or strong chemicals.
- **Storage:** When not in use for extended periods, store the controller in a cool, dry place, away from direct sunlight and

extreme temperatures.

- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge it periodically even if not in regular use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low or no battery charge.	Charge the device for at least 90 minutes.
Cannot connect to the app.	Bluetooth is off; device is out of range; app issue.	Ensure Bluetooth is on. Bring device closer. Restart the app and controller. Check app permissions.
Footswitches unresponsive.	Not properly connected to app; firmware issue.	Verify app connection. Check for firmware updates in the app.
Short battery life.	Battery degradation; frequent heavy use.	Ensure full charge. Reduce usage time or charge more frequently. Contact support if issue persists.

8. SPECIFICATIONS

Feature	Detail
Brand	enya
Model	INSPIRE
Item Weight	0.28 Kilograms (280g)
Audio Output Effects	Multi-Effect (via app integration)
Controls Type	Footswitch
Power Source	Battery Powered
Charging Time	Approx. 90 minutes
Battery Life	Up to 8 hours
Response Time	0.3 seconds (footswitch execution)

9. WARRANTY AND SUPPORT

ENYA provides a limited warranty for the INSPIRE Electric Guitar Compact Foot Pedal Controller against defects in materials and workmanship under normal use. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or service, please visit the official ENYA website or contact their customer service department. Contact information can typically be found on the product packaging or the official ENYA website.

Official ENYA Website: [Visit the ENYA Store on Amazon](#) (for general brand information)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question