



Manuals.plus /

› WOPET /

› WOPET Automatic Pet Feeder User Manual

WOPET CL11

WOPET Automatic Pet Feeder User Manual

Model: CL11

1. INTRODUCTION

Thank you for choosing the WOPET Automatic Pet Feeder. This device is designed to provide a convenient and reliable feeding solution for your cats and dogs, ensuring they receive their meals on schedule, even when you are away. Please read this manual thoroughly before operating the feeder to ensure proper use and maintenance.



Figure 1: WOPET Automatic Pet Feeder (Model CL11)

2. KEY FEATURES

- **Accurate Feeding Schedule:** Program 1-6 meals per day, with up to 8 portions (10g per portion) per meal.
- **4L Food Storage Capacity:** Holds approximately 4L (17 cups) of dry kibble, suitable for several days of feeding.

- **Reliable Twist-Lock Storage:** Secure lid design preserves food freshness and prevents pet access. Supports dry kibble sized 0.07-0.47 inches (2-12mm).
- **Easy Assembly and Maintenance:** Simple to disassemble for cleaning. Hopper and bowl are dishwasher-safe.
- **Dual Power Supply:** Operates via Type-C socket power supply or battery power (3 x D batteries, not included) for up to 180 days of battery life. Automatically switches to battery power during outages.
- **10-Second Voice Record:** Record a personalized message to call your pet at meal times.
- **Eye-Friendly LCD Screen:** Automatically turns off at night for convenience.

Stay Connected with Your Pet

10s Voice Recording



Hey, Baby
it's time to eat!



Figure 2: Voice Recording Feature

Detachable For Thorough Clean

Make sure the food is clean and fresh



Washing



Figure 3: Detachable Components for Easy Cleaning

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present and undamaged:

- WOPET Automatic Pet Feeder Unit
- Food Bowl

- USB Type-C Power Adapter
- User Manual (this document)

4. SETUP GUIDE

1. **Unpack the Feeder:** Carefully remove all components from the packaging.
2. **Assemble the Bowl:** Attach the food bowl to the main feeder unit. Ensure it clicks securely into place.
3. **Power Connection:**
 - Connect the Type-C power adapter to the feeder and plug it into a wall outlet.
 - For battery backup, insert 3 x D-size alkaline batteries (not included) into the battery compartment at the bottom of the unit. Ensure correct polarity.

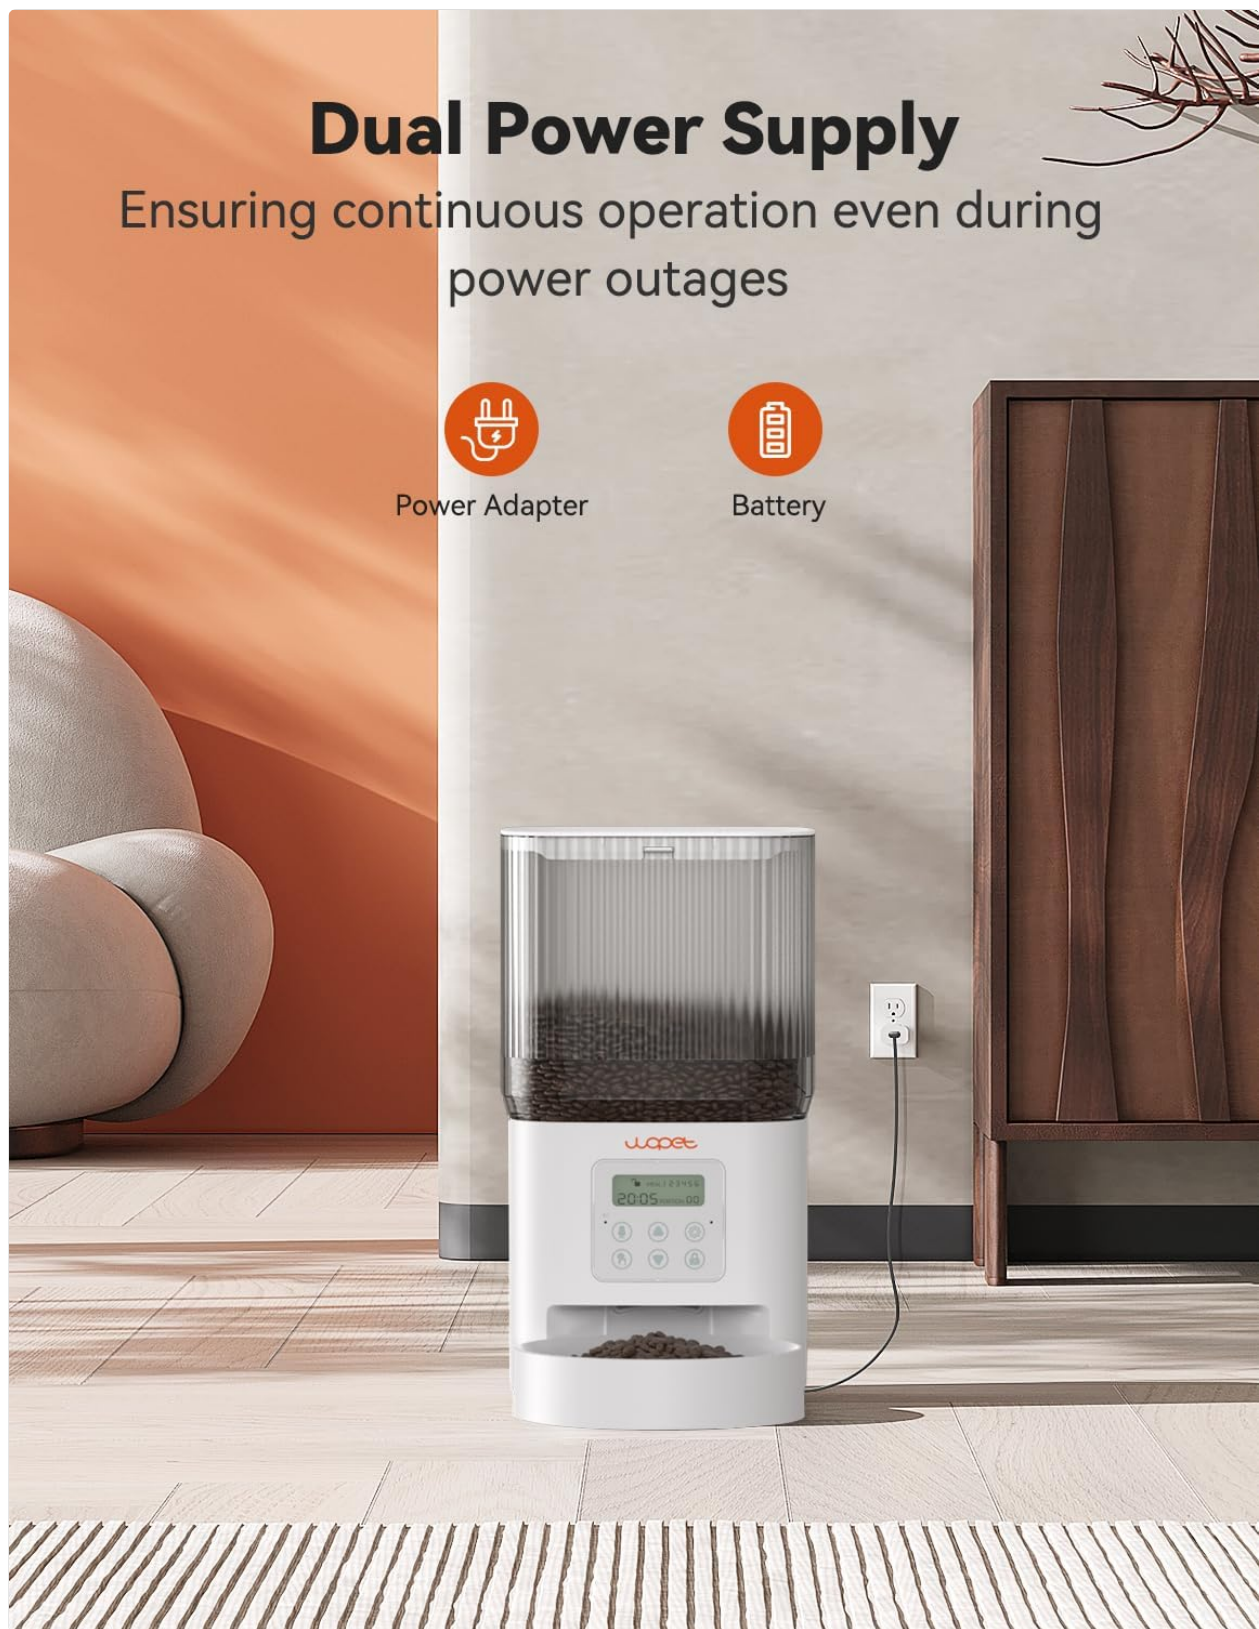


Figure 4: Dual Power Supply Connection

4. **Fill the Food Hopper:** Open the twist-lock lid and pour dry pet kibble into the hopper. Ensure the kibble size is between 0.07-0.47 inches (2-12mm) to prevent clogging. Close the lid securely.

5. OPERATING INSTRUCTIONS

5.1. Setting the Time

Refer to the LCD screen and control buttons on the front of the feeder. Use the navigation buttons to set the current time (hour and minute).

5.2. Programming Feeding Schedule

The feeder allows for up to 6 meals per day. For each meal, you can set the time and the number of portions (1-8 portions, 10g per portion).

1. Press the "Program" button to enter programming mode.
2. Use the "Up/Down" buttons to select the meal number (e.g., Meal 1).
3. Set the desired feeding time for that meal.
4. Set the number of portions for that meal.
5. Repeat for additional meals as needed.
6. Save settings and exit programming mode.

Control of Feeding Schedule

Fresh food for each meal



1-6

Meals/Day



0-8

Portions/Meal



5L

Capacity



Figure 5: Control Panel and Feeding Schedule Display

5.3. Recording Voice Message

Press and hold the "Record" button. Speak your message (up to 10 seconds). Release the button to save. The message will play at each scheduled feeding time.

5.4. Manual Feeding

Press the "Manual Feed" button to dispense one portion of food immediately. This will not affect your programmed schedule.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your feeder.

1. **Disassembly:** Unplug the feeder and remove any remaining food. Detach the food hopper and the food bowl from the main unit.
2. **Cleaning:** The food hopper and bowl are dishwasher-safe. Alternatively, wash them with warm soapy water and rinse thoroughly.
3. **Main Unit:** Wipe the main unit with a damp cloth. Do not submerge the main unit in water.
4. **Drying:** Ensure all parts are completely dry before reassembling and refilling with food.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	No power. Food hopper empty. Food clogged. Incorrect kibble size.	Check power adapter connection or battery installation. Refill food hopper. Clear any blockages in the dispenser mechanism. Ensure kibble size is within 0.07-0.47 inches (2-12mm).
Voice recording not playing.	No recording saved. Volume too low.	Re-record the voice message. Check volume settings (if applicable, or ensure recording was clear).
Feeder not turning on.	No power. Faulty power adapter/batteries.	Ensure power adapter is securely plugged in. Replace batteries or try a different power outlet.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Model Name	CL11
Brand	WOPET
Capacity	4L (approx. 17 cups)
Material	BPA Free
Dimensions (LxWxH)	8 x 7.02 x 7 inches
Item Weight	3.06 pounds (1.39 Kilograms)
Power Supply	Type-C Adapter, 3 x D Batteries (not included)
Battery Life	Up to 180 days (on battery power)
Kibble Size	0.07-0.47 inches (2-12mm)
Meals Per Day	1-6 meals
Portions Per Meal	1-8 portions (10g per portion)
Voice Recording	10 seconds
Target Species	Cat, Dog

9. WARRANTY AND SUPPORT

WOPET provides a standard warranty for this product. For detailed warranty information, please refer to the warranty card included in your package or visit the official WOPET website. If you encounter any issues or have questions regarding your WOPET Automatic Pet Feeder, please contact our customer support team:

- **Email:** support@wopet.com
- **Website:** WOPET Official Store on Amazon

Please have your model number (CL11) and purchase date ready when contacting support.