

MOMILLA SR01

MOMILLA Alarm Clock User Manual

Brand: MOMILLA | Model: SR01

INTRODUCTION

Thank you for choosing the MOMILLA Alarm Clock, Model SR01. This digital alarm clock is designed to provide a vibrant display, customizable alarms, and a built-in white noise sound machine to enhance your daily routine and improve sleep. This manual will guide you through the setup, operation, and maintenance of your new alarm clock.



Image: The MOMILLA SR01 Smart Alarm Clock, highlighting its dual function as an alarm clock and sleep aid.

KEY FEATURES

- **Vibrant 2.8" Color LCD Display:** Features a bright IPS screen with 8 vibrant color themes, enhancing the ambiance of any room.

Vibrant

2.8" IPS Display

Rich, vivid colors for a superior viewing experience



8 Customizable home screen displays



Image: Close-up of the MOMILLA alarm clock's vibrant 2.8-inch IPS display, showcasing its rich, vivid colors and various customizable home screen displays.

- **Simple Design, Easy to Use:** Compact size (3.4 x 1.8 x 3.9 inches) with 2 tactile buttons and a central twist/press knob for simple setup and daily use.

Super Easy Operation

Easy-to-press and rotatable button
Tactile bumps buttons

Clear on-screen guidance



Image: A hand demonstrating the easy operation of the MOMILLA alarm clock using its central knob and tactile buttons, with clear on-screen guidance for setting alarms.

- **Customizable 4 Alarm Clocks:** Set up to four 7-day programmable alarms with 10 alarm sounds and 10 volume levels. Features gradual sound increase and a 9-minute snooze (up to 5 times).

4 Alarms

for Any Day of the Week



- ① Weekends
- ② Weekdays
- ③ Mon, Tues
- ④ Tues, Thur, Friday

Image: The MOMILLA alarm clock on a bedside table, with an overlay indicating the ability to set 4 alarms for any day of the week, including weekends, weekdays, and specific day combinations.

- **All-in-One Display & Hourly Chime:** Screen shows date, day of the week, indoor temperature (°C/°F), with 10 adjustable brightness levels. The hourly chime feature helps keep you on track.

Compact Clock with Hourly Chime



2 Ringtone



Customize
Quiet Time



Image: The MOMILLA alarm clock displaying time and date, with its compact dimensions (3.9"H x 1.8"D x 3.4"W) and icons representing its hourly chime feature with 2 ringtones and customizable quiet time.

- **White Noise Sound Machine:** Includes 10 relaxing sounds (e.g., white noise, rain, fan noise) to block distractions and create a peaceful environment for better sleep. Timer settable for 5-120 minutes or continuous play.

Sleep Aid



Image: The MOMILLA alarm clock showing a sleep aid display with a moon and star, accompanied by a list of 10 available relaxing sounds such as Twinkle, Shh, White Noise, Rain, StarGlow, Ocean, Piano, Fireplace, Fan Noise, and CalmMind.

SETUP GUIDE

1. **Unpack the Device:** Carefully remove the alarm clock and all accessories from the packaging.
2. **Connect Power:** Plug the provided USB-C power cable into the alarm clock's power port and connect the other end to a suitable AC adapter (not included) and then to a power outlet. The clock requires continuous power to operate.



Image: The MOMILLA alarm clock plugged into a wall outlet via a USB-C cable and AC adapter, emphasizing that it is for plug-in use only.

3. **Initial Power On:** The display will light up once power is connected.
4. **Set Time and Date:** Use the central knob and tactile buttons to navigate the on-screen menu and set the current time, date, and day of the week. Refer to the 'Operating Instructions' section for detailed steps.

OPERATING INSTRUCTIONS

Setting Time and Date

1. Press the central knob to enter the main menu.
2. Navigate to 'Time Settings' using the knob and press to select.
3. Adjust hours, minutes, and AM/PM (if 12-hour format) using the knob. Press the knob to confirm each setting.
4. Proceed to set the year, month, and day in a similar manner.
5. Select your preferred time format (12H/24H) and temperature unit (°C/°F).

Your Display, Your Way

Adjustable Screen Brightness



Image: The MOMILLA alarm clock's display showing options to switch between 12-hour and 24-hour time formats, and Fahrenheit and Celsius temperature units, allowing users to customize their display.

Setting Alarms

1. From the main menu, navigate to 'Alarm Settings'.
2. Select one of the four available alarms (Alarm 1-4).
3. Set the desired alarm time (hour and minute).
4. Choose the repeat option: Weekends, Weekdays, Mon-Tues, Tues-Thurs-Fri, or specific days.
5. Select an alarm sound from the 10 available options and adjust the volume level (1-10).

Alarm Clock Customizable



Image: The MOMILLA alarm clock displaying customizable alarm settings, including options for 10 alarm sounds, 10 volume levels, a 9-minute repeating snooze, and a gradual volume increase feature.

6. Confirm your settings. The alarm icon will appear on the main display when an alarm is active.
7. To snooze, press the central knob when the alarm sounds. The alarm will sound again after 9 minutes (up to 5 times).

Using White Noise / Sleep Aid

1. From the main menu, select 'Sleep Aid'.
2. Choose from the 10 available white noise sounds.
3. Set the timer for 5, 15, 30, 60, 90, 120 minutes, or select 'All Night' for continuous play.
4. Press the central knob to start the sleep aid.

Adjusting Display Brightness

1. From the main menu, select 'Display Settings'.
2. Adjust the brightness level (1-10) using the central knob. The clock also supports auto-adjustment based on ambient light.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the alarm clock. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing for an extended period, unplug the device and keep it in a cool, dry place.
- **Power:** Ensure the clock is always connected to a stable power source. It does not have a battery backup for operation, though settings are retained after unplugging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not powering on / Display is blank.	Not plugged in; Power adapter issue; Cable issue.	Ensure the USB-C cable is securely connected to the clock and the AC adapter, and the adapter is plugged into a working power outlet. Try a different outlet or USB-C cable/adapter if available.
Alarm not sounding.	Alarm not activated; Volume too low; Incorrect alarm time.	Check that the alarm is enabled in the settings. Increase the alarm volume. Verify the alarm time is set correctly for AM/PM and the desired days.
Difficulty setting time/date or alarms.	Unfamiliarity with controls; Incorrect button usage.	Refer to the 'Operating Instructions' section. The central knob is used for navigation and selection, while the tactile buttons are for specific functions (e.g., back, confirm). Practice navigating the menus.
Display too bright or too dim.	Brightness setting is not optimal.	Adjust the display brightness in 'Display Settings'. Disable auto-brightness if it's not meeting your needs.
White noise not playing.	Sleep aid not activated; Volume too low.	Ensure the sleep aid function is started and the volume is adjusted to an audible level.

SPECIFICATIONS

Feature	Detail
Brand	MOMILLA
Model Number	SR01

Feature	Detail
Display Type	Digital, 2.8" Color LCD IPS
Color	White
Product Dimensions	3.9"W x 2"H (Note: Feature bullet states 3.4 x 1.8 x 3.9 inches, using spec for consistency)
Item Weight	10.6 ounces (300 Grams)
Power Source	Corded Electric (USB-C)
Special Features	Adjustable Brightness, Adjustable Volume, Hourly Chime, Snooze, Temperature Display, White Noise Sound Machine
Material	Acrylonitrile Butadiene Styrene (ABS)
Mounting Type	Tabletop
Number of Alarms	4 (7-day programmable)
Alarm Sounds	10 options
White Noise Sounds	10 options

WARRANTY AND SUPPORT

MOMILLA products are designed for reliability and performance. For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official MOMILLA website. If you encounter any issues not covered in this manual, please contact MOMILLA customer service for assistance.

For further assistance, you may also visit the [MOMILLA Store on Amazon](#).