

[Manuals.plus](#) /

› [Homleke](#) /

› Homleke 47.2" 2-Tier Solid Wood Shoe Rack Bench with Flip-Top Storage Manual

Homleke BS59Z

Homleke 47.2" 2-Tier Solid Wood Shoe Rack Bench with Flip-Top Storage Manual

Model: BS59Z

INTRODUCTION

Thank you for choosing the Homleke 47.2" 2-Tier Solid Wood Shoe Rack Bench. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

WARNING:

- Please ensure the bench is assembled correctly and does not exceed the weight limit of 250 lbs (113 kg) for safe and proper use.
- Keep all small parts and packaging materials away from children.
- Do not stand on the bench.
- Place the bench on a flat, stable surface.
- Regularly check all connections and tighten as necessary.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact Homleke customer support.

- Shoe Rack Bench components
- Accessory Kit (hardware)
- Assembly Instructions

SETUP AND ASSEMBLY INSTRUCTIONS

The Homleke Shoe Rack Bench is designed for straightforward assembly. All necessary tools and clear instructions are included in the package. It is recommended to have two people for assembly to ensure stability during construction.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Follow the step-by-step instructions provided in the included assembly manual. Pay close attention to the orientation of each piece.
3. Use the provided Allen wrench for tightening screws. Avoid over-tightening to prevent damage to the wood.
4. Once assembled, ensure all connections are secure and the bench is stable.

Key Features for Assembly and Setup:



Product Dimensions: This image illustrates the overall dimensions of the shoe rack bench, including its length, width, height, and the depth of the flip-top storage compartment.



Adjustable Shelf: The internal shelf can be adjusted to three different height positions, allowing customization for various shoe sizes or other items.



Adjustable Feet: The bench features adjustable feet to ensure stability on uneven floors. Rotate the feet to level the bench.

OPERATING INSTRUCTIONS (USAGE)

Your Homleke Shoe Rack Bench offers versatile functionality for organizing your entryway, bedroom, or closet.

- **Shoe Storage:** The two tiers provide space for approximately 11-12 pairs of shoes, depending on their size. The adjustable shelf allows you to accommodate taller boots or other items.
- **Flip-Top Storage:** The top of the bench lifts to reveal a hidden compartment, ideal for storing small essentials like keys, gloves, scarves, or shoe care products.
- **Seating:** The padded artificial leather cushion provides a comfortable surface for sitting while putting on or taking off shoes.



Flip-Top Storage in Use: The top lid opens to provide convenient hidden storage for various small items, keeping your space tidy.



Comfortable Cushion: The bench features a soft PU leather cushion, offering a comfortable seating experience.



Entryway Organization: The bench effectively organizes shoes in an entryway, providing both storage and a seating area.

MAINTENANCE

Proper care will extend the life and appearance of your shoe rack bench.

- **Cleaning:** Wipe the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For the PU leather cushion, use a mild soap solution and a soft cloth, then wipe dry.
- **Dusting:** Regularly dust the bench with a dry, soft cloth.
- **Protection:** Avoid placing hot items directly on the wood surface. Use coasters or protective pads if necessary. Keep the bench away from direct sunlight and excessive moisture to prevent warping or fading.
- **Hardware:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if any looseness is detected.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bench is wobbly or unstable.	Uneven floor; loose connections.	Adjust the leveling feet on the bottom of the legs. Check and tighten all assembly screws.
Flip-top lid does not close properly.	Obstruction in the storage compartment; misaligned hinges.	Remove any items blocking the lid. Check hinge alignment and re-tighten screws if loose.
Shelf is not holding items securely.	Shelf pins not fully inserted; shelf not seated correctly.	Ensure shelf pins are fully inserted into the desired holes. Re-seat the shelf firmly on the pins.

SPECIFICATIONS

Feature	Detail
Product Dimensions	11.8"D x 47.2"W x 17.3"H

Feature	Detail
Material	Solid Wood (Rubberwood)
Color	Walnut
Style	Classic
Weight Capacity	250 lbs (113 kg)
Storage Capacity	Up to 12 pairs of shoes (2 tiers)
Special Features	Flip-Top Storage, Padded Cushion, Adjustable Shelf, Adjustable Feet
Model Number	BS59Z

WARRANTY AND SUPPORT

Homleke stands behind the quality of its products. For any questions regarding assembly, missing parts, or product defects, please contact Homleke customer support. Please have your model number (BS59Z) and purchase information ready when contacting support.

For further assistance, please visit the [Homleke Store on Amazon](#).