

MEGELIN B1

MEGELIN Music Boxing Machine Model B1 User Manual

Wall Mounted, Bluetooth Boxing Training Punching Equipment

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your MEGELIN Music Boxing Machine Model B1. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Music Boxing Machine
- 1 x Pair of Boxing Gloves
- 1 x Type-C Charging Cable
- 2 x Velcro Tape (for installation)
- 1 x User Manual (this document)



Image: Contents of the MEGELIN Music Boxing Machine package.

3. SETUP AND INSTALLATION

The MEGELIN Music Boxing Machine offers two installation methods: adhesive back glue or Velcro. No drilling is required for either method.

3.1 Wall Surface Compatibility

The machine can be securely mounted on various wall surfaces, including marble, wood, and tile. Ensure the chosen surface is clean and dry before installation.

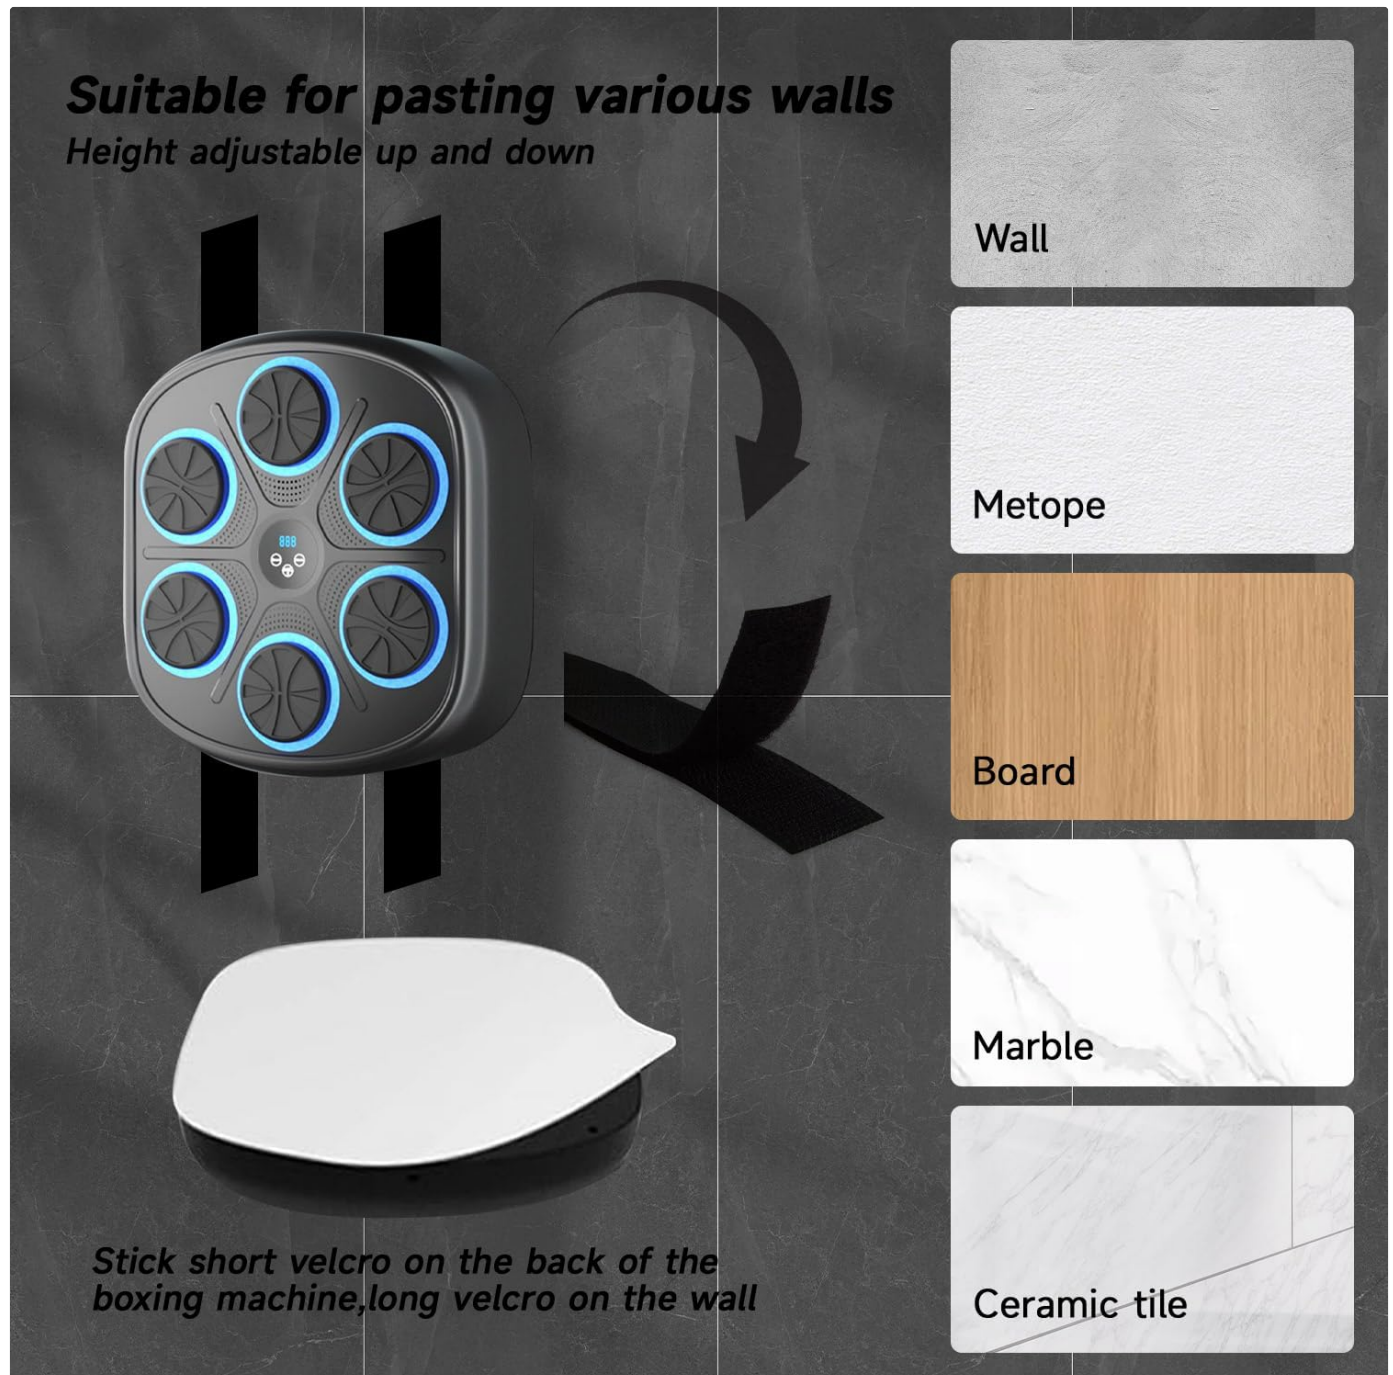


Image: Compatible wall surfaces for installation.

3.2 Installation Steps (Velcro Method)

Follow these steps for Velcro installation:

1. Tear off the protective sticker from the back of the boxing machine.
2. Stick the short Velcro strip horizontally onto the back of the machine.

3. Tear off the protective stickers from the two long Velcro strips.
4. Stick the two long Velcro strips vertically on the wall at your desired height.
5. Align the machine with the Velcro strips on the wall and firmly press to secure.

INSTALLATION STEPS



Tear off the sticker on the back



Stick the short Velcro horizontally
on the back



Stick two long Velcro strips vertically
on the wall



Then paste the machine and Velcro
together

Image: Step-by-step guide for Velcro installation.

Two Installation Method

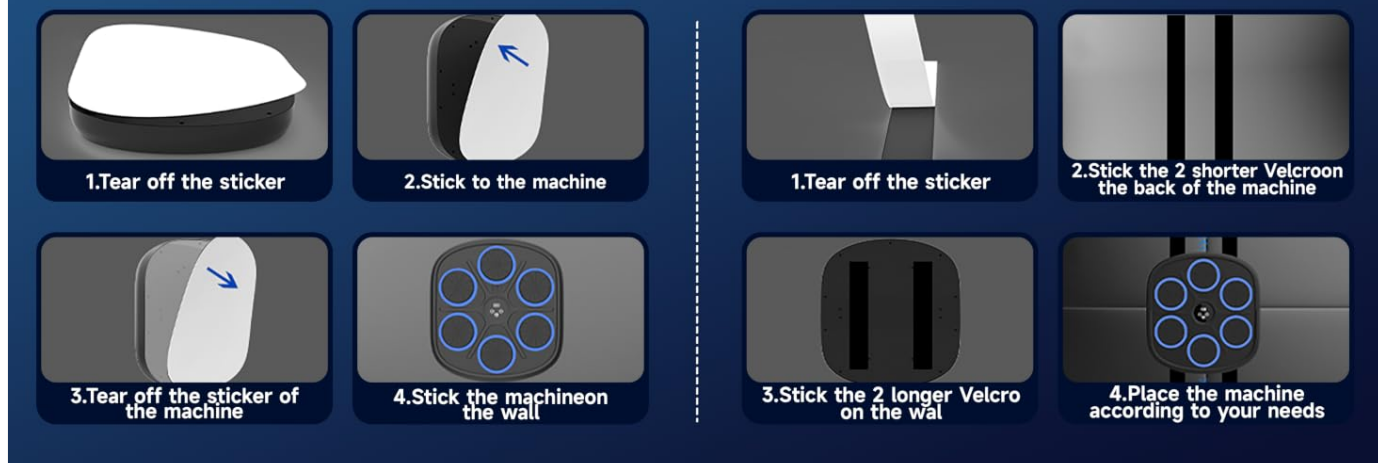


Image: Overview of two installation methods.

4. OPERATING INSTRUCTIONS

The MEGELIN Music Boxing Machine features a multifunctional display and Bluetooth connectivity for an interactive workout experience.

4.1 Power On/Off

- **Power On:** Long press the switch button to turn on the device. Music will play upon activation.
- **Power Off:** Long press the switch button again to turn off the device.

4.2 Bluetooth Connection

When the boxing machine is turned on, the Bluetooth function is automatically activated. To connect your device:

1. Enable Bluetooth on your smartphone or other audio device.
2. Search for available devices and select the device named "Gerden 03".
3. Once connected, you can play your preferred music through the machine's speaker.



Image: Bluetooth connectivity for music playback.

4.3 Modes and Speeds

The machine offers 9 adjustable modes and 9 speed settings. The display shows the current mode (P01-P09) and speed (H01-H09).

- **Mode Button:** Press to cycle through the 9 available modes (e.g., Adult Mode, Children's Mode, Training Mode, High-Speed Mode). Each mode can be individually adjusted for speed.
- **Speed Button:** Press to adjust the speed within the selected mode (H01-H09).
- **Punch Counter:** The display accurately records the number of punches, providing real-time feedback on your performance.

4.4 Volume Control

- **Volume Down:** Long press the volume '-' button to decrease the volume.

- **Volume Up:** Long press the volume '+' button to increase the volume.



Operating instructions

Bluetooth	Turn on the boxing machine means the bluetooth function is automatically switched on. Set your phone's bluetooth, search and connect the device named with "Gerden 03"
On/off	Long press the switch button to turn on the device and music will play.
Mode	9 Modes display: P01-P09, each mode can be individually adjusted to different speeds.
Speed	9 Speeds display: H01-H09, each speed can be individually adjusted to different modes
Volume-	Long press the volume- button to decrease the volume.
Volume+	Long press the volume+ button to increase the volume.

Image: Detailed operating instructions for controls.

4.5 Usage Examples



Professional boxing training



Women's Sweating Fitness



Children's boxing play



Exercise for middle-aged and elderly people

Image: Various users engaging with the boxing machine.



Image: Adult and child using the boxing machine.

Your browser does not support the video tag.

Video: Demonstration of the Megelin musical boxing machine for girls, showcasing its interactive features and ease of use.

Your browser does not support the video tag.

Video: Overview of the Megelin music boxing machine, highlighting its features and functionality.

5. MAINTENANCE

5.1 Cleaning

To maintain the boxing machine, wipe its surface with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the material or electronic components.

5.2 Charging

The boxing machine supports wireless use and is charged via the included Type-C USB cable. Connect the cable to the charging

port on the machine and to a standard USB power source. Ensure the machine is fully charged before extended use.

5.3 Storage

Store the machine in a cool, dry place away from direct sunlight and extreme temperatures when not in use for prolonged periods.

6. TROUBLESHOOTING

If you encounter issues with your MEGELIN Music Boxing Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not power on.	Low battery or power button not pressed correctly.	Charge the machine using the Type-C cable. Ensure the power button is long-pressed.
Bluetooth connection fails.	Bluetooth not enabled on device, machine not discoverable, or incorrect device selected.	Ensure Bluetooth is active on your phone. Turn the boxing machine off and on again. Select "Gerden 03" from your device's Bluetooth list.
Machine falls from the wall.	Inadequate adhesion of Velcro/adhesive, unsuitable wall surface, or excessive force during use.	Ensure wall surface is clean and dry before installation. Apply Velcro/adhesive firmly. Consider additional reinforcement for high-impact use, especially on drywall.
Modes or speeds are not changing.	Buttons not pressed correctly or a temporary software glitch.	Ensure buttons are pressed firmly. Try restarting the machine. If the issue persists, contact customer support.
Sound is too low or distorted.	Volume settings are low or Bluetooth connection issue.	Adjust volume using the '+' button on the machine. Check volume on your connected device. Reconnect Bluetooth if necessary.

7. SPECIFICATIONS

Key technical specifications for the MEGELIN Music Boxing Machine Model B1:

Feature	Detail
Model Name	B1
Brand Name	MEGELIN
Color	Black
Material	PU foam polyurethane and ABS materials
Item Package Dimensions (L x W x H)	19 x 17.5 x 4.63 inches
Product Dimensions (Approx.)	16.46" x 17.56" x 2.95"
Package Weight	2.34 Kilograms

Feature	Detail
Connectivity	Bluetooth
Display	Multifunctional display with punch counter
Modes	9 adjustable modes (e.g., Adult, Children's, Training, High-Speed)
Speeds	9 adjustable speed settings
Charging	Type-C USB cable



Image: Product dimensions.

8. WARRANTY INFORMATION

The MEGELIN Music Boxing Machine Model B1 comes with a **1-year warranty** from the date of purchase. This warranty covers

manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by:

- Improper installation or use not in accordance with this manual.
- Accidental damage, misuse, abuse, or neglect.
- Unauthorized repairs or modifications.
- Normal wear and tear.

9. CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your MEGELIN Music Boxing Machine, please contact our customer support team. Refer to the contact information provided with your purchase or visit the official MEGELIN website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question