

ZWILLING 1029302

ZWILLING Xtend Cordless Hand Blender (Model 1029302) Instruction Manual

Brand: ZWILLING

Model: 1029302

INTRODUCTION

The ZWILLING Xtend Cordless Hand Blender is a versatile kitchen tool designed for blending, pureeing, and mixing a variety of ingredients. This manual provides essential information for safe operation, proper maintenance, and optimal performance of your appliance. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the motor unit in water or other liquids. Clean only with a damp cloth.
- Always remove the battery from the motor unit before cleaning or attaching/detaching parts.
- Avoid contact with moving parts. Keep hands, hair, and clothing away from the blending shaft and attachments during operation.
- Use only ZWILLING-approved attachments and accessories.
- Do not operate any appliance with a damaged cord, plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Exercise caution when handling sharp blades.

PACKAGE CONTENTS

Your ZWILLING Xtend Cordless Hand Blender set includes the following components:

- ZWILLING Xtend Hand Blender Motor Unit
- Blending Arm
- Chopper Attachment

- Whisk Attachment
- Ricer Attachment
- 20-ounce (591 ml) Beaker with Capacity Scale

Note: The battery and charger are sold separately and are not included with this specific hand blender set.

SETUP

Battery Installation and Charging

The ZWILLING Xtend Hand Blender is powered by a rechargeable lithium-ion battery (not included). Ensure your battery is fully charged before initial use.



Insert the fully charged battery into the top of the hand blender motor unit until it clicks securely into place. The LED indicators will illuminate to show the battery level.

This video demonstrates the battery installation and various uses of the ZWILLING Xtend Cordless System.

Attaching the Blending Arm

Align the blending arm with the motor unit. Twist the blending arm clockwise until it locks securely into position. To detach, twist counter-clockwise and pull apart.



The blending arm securely attached to the motor unit, ready for use.

OPERATING INSTRUCTIONS

General Operation

Once the battery is installed and the desired attachment is secured, press the unlock button on the motor unit. The LED indicators will light up, showing the current battery level. Then, select one of the three available speed levels (7000 to 11000 RPM) by pressing the corresponding speed button. The blender will operate as long as the speed button is held down.

Blending with the Immersion Blending Arm

For best results, immerse the blending arm into the ingredients before starting the motor. Use the included 20-ounce beaker or a suitable deep pot/container. Move the blender up and down gently to ensure all ingredients are evenly processed. Avoid lifting the blending head completely out of the ingredients while operating to prevent splashing.



The hand blender effectively processes ingredients within the included beaker, allowing for easy movement up and down.

This video demonstrates how to prepare smoothies using the ZWILLING Xtend Hand Blender, showcasing its cordless convenience.

Using Attachments

The ZWILLING Xtend system offers various attachments to expand its functionality. Ensure the motor unit is detached from the battery and the appliance is off before changing attachments.

Whisk Attachment

Attach the whisk to the motor unit for whipping cream, beating eggs, or creating light batters. Use a suitable bowl that allows the whisk to move freely without touching the sides.

This video shows the whisk attachment in action, ideal for whipping and aerating ingredients.

Ricer/Masher Attachment

Use the ricer attachment for creating smooth mashed potatoes or purees. Place cooked ingredients in a pot and press the ricer down while operating the motor unit.

Watch how to use the masher attachment to create smooth mashed potatoes directly in the pot.

Chopper Attachment

The chopper attachment is designed for quickly chopping herbs, nuts, onions, and other small ingredients. Place ingredients into the chopper bowl, attach the motor unit, and operate.

5,2 cm


2,1 cm

19,0 cm

9,8 cm

40,0 cm

20,8 cm

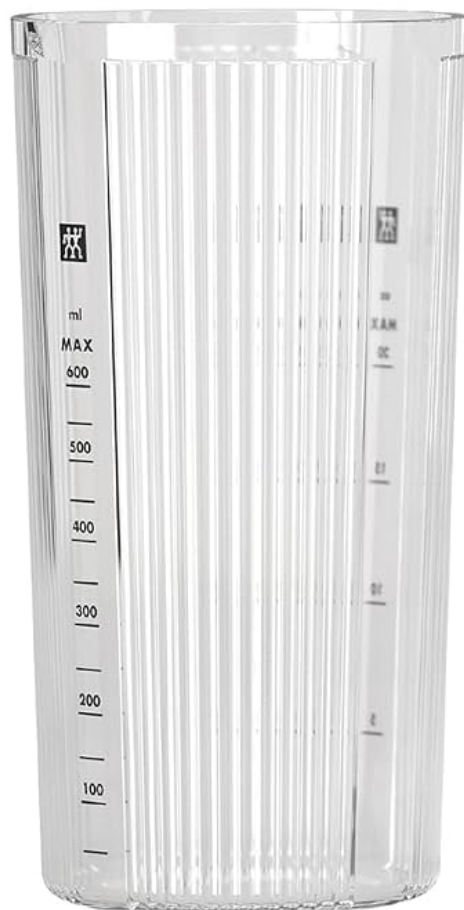

The chopper attachment is suitable for processing smaller quantities of ingredients efficiently.

Vacuum Sealer Attachment

The ZWILLING Xtend system also includes a vacuum sealer attachment (sold separately or as part of a larger set) for preserving food. Attach the vacuum unit to the motor and use with compatible vacuum bags or containers.

This video demonstrates the vacuum sealer attachment, showing how it can be used to remove air for food preservation.

MAINTENANCE AND CLEANING

Always ensure the battery is removed from the motor unit before cleaning any part of the appliance.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Blending Arm & Attachments (Chopper, Whisk, Ricer):** Detach these parts from the motor unit. Wash them with warm, soapy water and rinse thoroughly. Be careful when handling the sharp blades of the blending arm and chopper.
- **Beaker:** The 20-ounce beaker is dishwasher safe (top rack recommended) or can be hand washed with warm, soapy water.
- **Battery:** Wipe the battery with a dry cloth. Do not immerse in water.

TROUBLESHOOTING

If you encounter any issues with your ZWILLING Xtend Hand Blender, refer to the following common problems and solutions:

- **Blender not turning on:**
 - Ensure the battery is fully charged and properly inserted into the motor unit.
 - Press the unlock button before pressing the speed button.
- **Poor blending performance:**
 - Ensure there is sufficient liquid in your ingredients for proper blending.
 - Do not overfill the container.
 - Check for any blockages around the blending blade.
- **Motor stops during operation:**
 - The battery may be low. Recharge the battery.
 - The appliance may have overheated. Allow it to cool down before resuming use.

SPECIFICATIONS

Brand	ZWILLING
Model Number	1029302
Power Source	Battery Powered (Lithium-ion)
Number of Speeds	3
RPM Range	7000 to 11000 RPM
Blending Arm Material	Stainless Steel
Beaker Capacity	591 Milliliters (20 oz)

Product Dimensions (D x W x H)	1.97" x 1.57" x 11.81"
Item Weight	1.7 Pounds

WARRANTY AND SUPPORT

This ZWILLING Xtend Cordless Hand Blender comes with a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official ZWILLING website.

For technical support, replacement parts, or any other inquiries, please contact ZWILLING customer service or visit their online support portal.

Online Support: www.zwilling.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question