

[manuals.plus](#) /

- › [SKMEI](#) /
- › [SKMEI Digital Talking Watch Model 2322 User Manual](#)

**SKMEI 2322**

## SKMEI Digital Talking Watch Model 2322 User Manual

Your guide to operating and maintaining your SKMEI 2322 Digital Talking Watch.

### 1. PRODUCT OVERVIEW

The SKMEI Digital Talking Watch Model 2322 is a multi-functional sports watch designed for daily and outdoor use. It features a clear digital display, time announcement, alarm, stopwatch, and backlight. Its durable TPU strap and water-resistant design make it suitable for various activities.

# Key Features

Display

**Digital**

Dial Shape

**Round**

Features

**Talking & Chrono**

Strap Material

**TPU**

Water Resistance

**10 m**



Front view of the SKMEI Digital Talking Watch Model 2322, showing the digital display and control buttons.

## Key Features:

- Talking Time Feature:** Announces the current time and date.
- Multi-Functional:** Includes 12/24-hour time formats, stopwatch, alarm, and calendar.
- Water-Resistant:** Designed to withstand up to 10 meters of water exposure.
- Backlit Digital Display:** Ensures clear visibility in low-light conditions.
- Durable Design:** Features a TPU strap and stainless-steel buckle.

## 2. WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and their primary functions:

- LIGHT Button (Top Left):** Activates the backlight for the display.
- MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- START Button (Top Right):** Used to start/stop stopwatch, adjust settings in setting mode.
- RESET Button (Bottom Right):** Used to reset stopwatch, adjust settings in setting mode.
- TALKING WATCH Button (Front Center, below display):** Activates the time announcement feature.

## 3. INITIAL SETUP

---

### 3.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the setting options: seconds, hour, minute, month, date, day of the week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit setting mode.

### 3.2 12/24 Hour Format

In normal time display mode, press the **START** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Time Announcement Feature

To hear the current time announced, simply press the **TALKING WATCH** button located on the front of the watch below the display.

### 4.2 Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm mode.
2. Press the **START** button to adjust the hour, then press **RESET** to move to minutes, and use **START** again to adjust minutes.
3. Press **MODE** to exit Alarm setting.
4. To activate/deactivate the alarm, press the **START** and **RESET** buttons simultaneously in Alarm mode. An alarm icon will appear/disappear on the display.

### 4.3 Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode.
2. Press the **START** button to begin timing.
3. Press **START** again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. Press **MODE** to exit Stopwatch mode.

### 4.4 Backlight

Press the **LIGHT** button (top left) to illuminate the display for a few seconds, improving visibility in dark environments.

## 5. MAINTENANCE AND CARE

---

### 5.1 Water Resistance

This watch is water-resistant up to 10 meters. This means it is suitable for splashes, rain, and brief immersion in water. It is **not** recommended for swimming, diving, or showering, as steam and direct water pressure can compromise the seals.

### 5.2 Cleaning

Clean the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the finish or seals.

### 5.3 Battery Replacement

When the display dims or the watch functions become erratic, the battery may need replacement. The watch uses a CR2450 battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Rear view of the watch, showing the stainless steel back cover and battery code.

## 6. TROUBLESHOOTING

- Display is blank or dim:** Check the battery. If the battery is low, replace it. Ensure the watch has not been exposed to extreme temperatures.
- Time is incorrect:** Re-set the time and date following the instructions in Section 3.1. Ensure the 12/24-hour format is set as desired.
- Alarm does not sound:** Verify that the alarm is activated (alarm icon visible on display) and that the alarm time is set correctly.
- Talking feature not responding:** Ensure the battery is not low. If the issue persists, a reset may be required (consult support).

- **Water inside the watch:** If water appears inside the watch, stop using it immediately and seek professional service to prevent further damage.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	2322
Display Type	Digital
Movement Type	Quartz
Case Diameter	50.2 mm
Case Thickness	19 mm
Strap Material	Thermoplastic Polyurethane (TPU)
Water Resistance	10 meters
Item Weight	65.7 grams
Battery Type	CR2450 (as indicated on watch back)



Diagram illustrating the dimensions of the SKMEI Digital Talking Watch Model 2322.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This SKMEI Digital Talking Watch Model 2322 comes with a 9-month manufacturer's warranty. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

### 8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact SKMEI customer support through the retailer where the product was purchased or refer to the official SKMEI website for contact details.