

PHILIPS 929004738801

Philips LED Remote-Controlled Round Ceiling Light

Model: 929004738801

Brand: PHILIPS

INTRODUCTION

This manual provides comprehensive instructions for the Philips LED Remote-Controlled Round Ceiling Light, Model 929004738801. It covers installation, operation, maintenance, and troubleshooting to ensure optimal performance and user experience. Please read this manual carefully before installation and use, and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when installing and using electrical products to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply is disconnected before installation or maintenance.
- Installation should be performed by a qualified electrician if you are unsure.
- Do not attempt to modify the product.
- Keep the product away from water and high humidity.
- This product is for indoor use only.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Philips LED Ceiling Light fixture
- 1 x Remote Control
- Installation hardware (screws, wall plugs)
- User Manual



Image: The Philips LED ceiling light, its remote control, and the product packaging, illustrating the main components included.

SETUP AND INSTALLATION

The Philips LED ceiling light is designed for easy installation. Follow these steps:

1. **Prepare for Installation:** Ensure the main power supply to the installation area is turned off at the circuit breaker.
2. **Fix the Base:** Securely attach the mounting base to the ceiling using the provided screws and wall plugs. Ensure it is firmly fixed.
3. **Wire Connection:** Connect the electrical wires from your ceiling to the light fixture's connection cable. Ensure proper polarity (Live, Neutral, Earth) as per local electrical codes. The easy connection cable simplifies this step.
4. **Attach the Luminaire:** Align the light fixture with the mounted base. Twist and lock the luminaire into place until it is securely fastened.
5. **Restore Power:** Once the fixture is securely installed, restore power at the circuit breaker.



SceneSwitch vous permet de régler la luminosité à l'aide de votre interrupteur existant.



Image: Visual guide showing the three easy steps for installation: 1) Securely fix the base to the ceiling, 2) Connect the wiring, and 3) Twist and lock the luminaire into place.

OPERATING INSTRUCTIONS

The Philips LED ceiling light offers flexible control options for brightness and color temperature.

Using the Remote Control

The included remote control allows you to manage your lighting settings from up to 10 meters away.

- **Power On/Off:** Use the 'ON' and 'OFF' buttons to switch the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light intensity.
- **Color Temperature Adjustment:** Buttons with sun icons (e.g., warm, cool) allow you to cycle through different white light temperatures, from warm white (2700K) to cool white (6500K).
- **Scene Selection:** Dedicated buttons may offer pre-set lighting scenes for convenience.



Image: An illustration demonstrating how to dim and adjust the light's color temperature using the remote control, showing warm (2700K), neutral (4300K), and cool (6500K) white light options.

SceneSwitch Functionality

The SceneSwitch feature allows you to cycle through three different brightness levels using your existing wall switch, without needing the remote control.

- Turn the light **ON** for the first brightness level (e.g., 100%).
- Turn the light **OFF** and then **ON** again quickly to switch to the second brightness level (e.g., 50%).

- Repeat the **OFF/ON** sequence to access the third brightness level (e.g., 10%).



Image: Visual representation of the SceneSwitch function, showing how to adjust brightness to 10%, 50%, and 100% using a standard wall switch.

Adjustable White Light (2700K to 6500K)

The light offers a wide range of white light temperatures to suit your mood or activity:

- **Warm White (2700K):** Ideal for relaxation and creating a cozy atmosphere.
- **Cool White (6500K):** Suitable for tasks requiring concentration or for a more energetic environment.
- Intermediate temperatures provide a neutral white light for general illumination.

Light Quality and Eye Comfort

The Philips LED ceiling light is designed to provide high-quality, comfortable illumination:

- **Uniform Light Distribution:** Ensures consistent and even lighting across your space, reducing shadows and enhancing visual comfort.
- **EyeComfort Technology:** Engineered to minimize visible flicker and glare, providing a more comfortable experience for your eyes.
- **High Color Rendering Index (CRI 80):** Ensures colors appear natural and vibrant under the light.



Image: Comparison illustrating the benefit of uniform light distribution for consistent illumination and visual comfort, showing a well-lit room versus one with uneven lighting.



Image: Demonstration of EyeComfort technology, showing how it reduces glare and visible flicker for enhanced eye comfort, with examples of good and poor light quality.

MAINTENANCE

To ensure the longevity and optimal performance of your Philips LED ceiling light, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the surface of the light fixture. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Bulb Replacement:** This LED fixture contains integrated LED light sources that are not user-replaceable. If the light source fails, the entire fixture may need to be replaced.
- **Remote Control:** Replace the AAA battery in the remote control when its performance diminishes. Ensure correct polarity when inserting new batteries.

TROUBLESHOOTING

If you encounter issues with your Philips LED ceiling light, refer to the following common problems and solutions:

- **Light does not turn on:**
 - Check if the power supply is connected and the wall switch is ON.
 - Verify that the circuit breaker has not tripped.
 - Ensure the light fixture is correctly installed and wired.
- **Remote control is not working:**
 - Check and replace the AAA battery in the remote control.
 - Ensure there are no obstructions between the remote control and the light fixture.
 - Make sure you are within the 10-meter operating range.
- **Light flickers or dims unexpectedly:**
 - Ensure the electrical connections are secure.
 - If using SceneSwitch, ensure you are not rapidly toggling the switch, which can cause unintended changes.
 - This product is designed with EyeComfort to reduce visible flicker. If flickering persists, consult a qualified electrician.

SPECIFICATIONS

Feature	Specification
Brand	PHILIPS
Model Number	929004738801
Manufacturer	Signify
Product Dimensions (L x W x H)	30 x 30 x 30 cm
Item Weight	840 grams
Style	Classical
Color	Black
Finish Type	Painted
Number of Light Sources	1 (Integrated LED)
Components Included	Light Bulb, Remote Control
Voltage	230 Volts
Specific Uses	Home
Shade Material	Plastic
Light Angle	LED
Power Source	DC
Switch Style	Rotary (for SceneSwitch)
Installation Type	Ceiling Mount / Surface Mount
Batteries Required	Yes (1 AAA for remote)
Luminous Flux	800 lumen
Wattage	24 Watts
Color Temperature	2700K - 6500 Kelvin (Adjustable)
CRI	80
Energy Efficiency Class	F

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Philips website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Philips customer service through their official channels. Details can typically be found on the product packaging or the Philips brand website.