

RadioShack 1202267

RadioShack AM/FM 2-Band Vintage Radio with Bluetooth and USB/TF Ports (Model 1202267)

User Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your RadioShack AM/FM 2-Band Vintage Radio, Model 1202267. This device features AM/FM radio reception, Bluetooth connectivity for wireless audio streaming, and playback capabilities for MP3 files via USB and TF card ports. It also includes an AUX-in port for connecting external audio sources and is designed for portability with a rechargeable battery and carry handle.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the casing. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources or in direct sunlight.
- Ensure proper ventilation; do not block ventilation openings.
- Use only the specified power adapter for charging.
- Keep out of reach of children.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your radio.



Image 1: Front view of the RadioShack AM/FM 2-Band Vintage Radio. This image displays the main unit with its white and black casing, the digital display showing "93.6 MHz FM", and various control knobs for AM, FM, SW bands, as well as buttons for USB, BT (Bluetooth), EQ, play/pause, and track navigation. A silver tuning knob is prominent on the right side, and a retractable antenna is visible at the top.

Key features include a rechargeable battery, Bluetooth connectivity, AM/FM radio, and an AUX input for versatile audio playback.

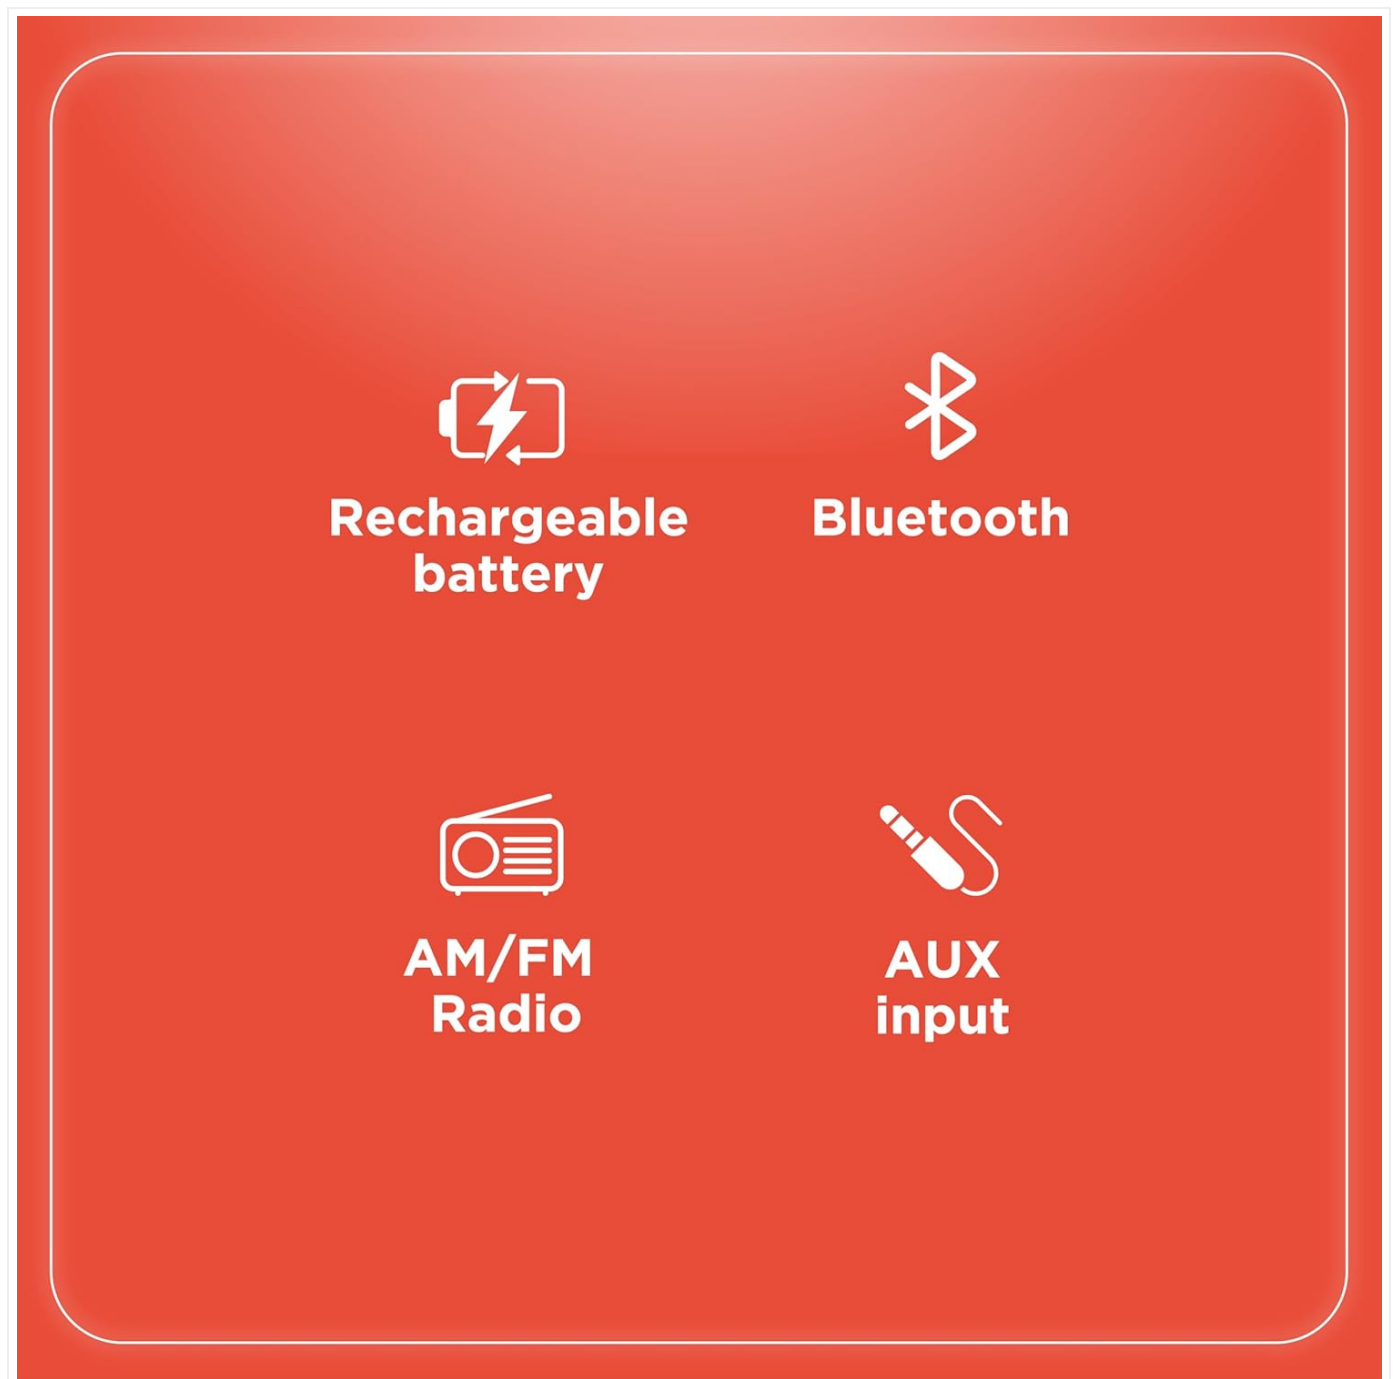


Image 2: A graphic illustrating the primary features of the radio. Four white icons are displayed on a red background: a lightning bolt over a battery for "Rechargeable battery", a Bluetooth symbol for "Bluetooth", a radio icon for "AM/FM Radio", and a headphone jack symbol for "AUX input".

Controls and Ports:

- **AM/FM/SW Knobs:** For band selection and tuning.
- **Tuning Knob:** Adjusts radio frequency.
- **Volume Knob:** Controls audio output level.
- **LED Display:** Shows frequency, mode, and other information.
- **USB Port:** For USB flash drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **BT Button:** Activates Bluetooth mode.
- **EQ Button:** Selects preset equalizer modes.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Navigates media tracks.
- **AUX-in Port:** Connects external audio devices.
- **Power Switch:** Turns the unit on/off.

- **DC Input:** For charging the internal battery.
- **Telescopic Antenna:** For improved radio reception.

SETUP

1. Powering the Device:

The radio operates on a built-in rechargeable battery. Before first use, fully charge the battery.

1. Connect the provided charging cable to the DC Input port on the radio.
2. Connect the other end of the charging cable to a suitable USB power adapter (not included) or a powered USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.

2. Antenna Adjustment:

For optimal AM/FM/SW reception, extend the telescopic antenna fully and adjust its direction until the signal is clear.

OPERATING INSTRUCTIONS

1. Power On/Off:

Slide the **Power Switch** to the "ON" position to turn on the radio. Slide it to "OFF" to power down.

2. Radio Mode (AM/FM/SW):

1. Turn on the radio.
2. Rotate the **AM/FM/SW Knob** to select your desired radio band (AM, FM, or SW).
3. Rotate the **Tuning Knob** to scan for stations. The frequency will be displayed on the LED screen.
4. Adjust the **Volume Knob** to your preferred listening level.

3. Bluetooth Mode:

1. Turn on the radio.
2. Press the **BT Button** to switch to Bluetooth mode. The LED display will indicate "BT" and a pairing indicator will flash.
3. On your mobile device, enable Bluetooth and search for available devices. Select "RadioShack 1202267" (or similar) from the list.
4. Once paired, the indicator light will stop flashing, and you can stream audio from your device to the radio.
5. Use the Play/Pause and Previous/Next Track buttons on the radio or your connected device to control playback.

4. USB/TF Card Playback:

1. Turn on the radio.
2. Insert a USB flash drive into the **USB Port** or a TF (MicroSD) card into the **TF Card Slot**. The radio will automatically switch to USB or TF mode and begin playing MP3 files.
3. Use the Play/Pause and Previous/Next Track buttons to control playback.

5. AUX-in Mode:

1. Turn on the radio.
2. Connect one end of a 3.5mm audio cable (not included) to the **AUX-in Port** on the radio.
3. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., smartphone, MP3 player).
4. The radio will automatically switch to AUX mode. Control playback and volume from your external device.

6. Equalizer (EQ) Function:

Press the **EQ Button** to cycle through available preset equalizer modes (e.g., Pop, Rock, Jazz, Classic, Flat) to customize the audio output.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the battery regularly, even if the unit is not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged; Power switch off.	Charge the battery; Ensure power switch is in "ON" position.
Poor radio reception	Antenna not extended/adjusted; Weak signal area.	Extend and adjust the telescopic antenna; Try moving the radio to a different location.
Bluetooth not pairing	Radio not in Bluetooth mode; Device too far; Already paired with another device.	Press BT button; Ensure device is within range (10m); Disconnect from other devices.
USB/TF card not playing	Incorrect file format; Card/drive not inserted correctly; Corrupted media.	Ensure files are MP3 format; Reinsert card/drive; Try a different card/drive.
No sound from AUX-in	Cable not connected properly; External device volume low.	Check cable connections; Increase volume on external device.

SPECIFICATIONS







- Model Number:** 1202267
- Brand:** RadioShack
- Connectivity:** Bluetooth, USB, TF Card, AUX-in
- Radio Bands:** AM/FM/SW (2-Band)
- Power Source:** Rechargeable Battery (2 Nonstandard Battery batteries included)
- Product Dimensions:** 12.4 x 4.53 x 10.04 inches (31.5 x 11.5 x 25.5 cm)
- Item Weight:** 1.6 ounces (45 grams)
- Special Feature:** Retro design, LED display

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official RadioShack website. Keep your proof of purchase for warranty claims.

Manufacturer: RadioShack



	<p>RadioShack 4001942 & 4001944 Dual PA Speaker User Manual</p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p>Radioshack Vintage Radio Model 1202266, 1202268 User Manual</p> <p>User manual for the Radioshack Vintage Radio, model 1202266 and 1202268, covering features, operation, precautions, and FCC compliance.</p>
	<p>Radioshack Dual 10" 2-Way PA Speaker 4001958 User Manual</p> <p>User manual for the Radioshack Dual 10" 2-Way PA Speaker, model 4001958. Includes setup, controls, specifications, and safety precautions.</p>
	<p>RadioShack 2.1 Sound Bar Model 4001949 User Manual</p> <p>User manual for the RadioShack 2.1 Sound Bar (Model 4001949), detailing specifications, features, operation, remote control functions, panel descriptions, connection diagram, placement advice, and troubleshooting.</p>
	<p>RadioShack 2607174 Office Keyboard User Manual</p> <p>User manual for the RadioShack 2607174 Office Keyboard, detailing specifications, pairing instructions, system compatibility, and troubleshooting.</p>
	<p>RadioShack GT-KB36GCM Wireless Keyboard and Mouse Combo - Product Overview and Specifications</p> <p>Detailed specifications and features for the RadioShack GT-KB36GCM wireless keyboard and mouse combo, including 2.4GHz technology, ergonomic design, multimedia keys, and FCC compliance information.</p>