



Manuals.plus /

› **Ninja /**

› Ninja Woodfire ProXL Outdoor Grill & Smoker OG851H Series Instruction Manual

Ninja OG851H Series

Ninja Woodfire ProXL Outdoor Grill & Smoker (OG851H Series) Instruction Manual

Model: OG851H Series

INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and care of your Ninja Woodfire ProXL Outdoor Grill & Smoker. This versatile appliance combines the functions of a grill, smoker, air fryer, and baker, designed for outdoor use only. Please read all instructions thoroughly before initial use.



Image: The Ninja Woodfire ProXL Outdoor Grill & Smoker, showcasing its compact design and control panel.

The Ninja Woodfire ProXL is an electric outdoor cooking system that utilizes Woodfire Technology to infuse authentic smoky flavors into your food. It features an integrated thermometer for precise temperature monitoring and a large cooking capacity suitable for various meals.



4-in-1 outdoor grill & smoker

Grill, Smoke, Air Crisp, and Bake all in one.

Image: A variety of dishes, including grilled meats, smoked poultry, and side dishes, prepared using the 4-in-1 functions of the Ninja Woodfire ProXL.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Placement:** Place the grill on a stable, level, heat-resistant surface outdoors. Ensure adequate clearance from combustible materials (minimum 3 feet from walls or railings). The unit requires a standard electrical outlet.
3. **Initial Cleaning:** Before first use, wash the grill grate, crisper basket, and grease tray with warm, soapy water. Rinse thoroughly and dry all parts. Wipe the interior and exterior of the main unit with a damp cloth.
4. **Pellet Hopper:** For smoking functions, ensure the Woodfire Technology pellet hopper is empty and clean. Only use Ninja Woodfire Pellets.



**Grill in more places
with electric power**
Get all the flavor without the pitfalls
of charcoal, propane, or an open flame.

Image: The Ninja Woodfire ProXL positioned on an outdoor stand, connected to an electrical power source, demonstrating its portability and outdoor electric operation.

OPERATING INSTRUCTIONS

General Operation

- Connect the power cord to a grounded outdoor outlet.
- Turn the main power switch ON.
- Select your desired cooking function using the control dial.
- Adjust temperature and time as needed.
- Press START/STOP to begin preheating or cooking.

Grilling

The grill function provides high heat for searing and charring, similar to a traditional gas grill.

1. Place the grill grate into the unit.
2. Select the 'GRILL' function. Set desired temperature and preheat.

3. Once preheated, place food on the grill grate. Close the lid.
4. Monitor cooking progress and internal temperature using the integrated thermometer.



Master grill

All the performance of a full-size gas grill
with the same char and searing.

Image: Steaks being grilled on the Ninja Woodfire ProXL, demonstrating the unit's master grill capability for achieving char and searing.



Built-in thermometer

Get the perfect cook without the guesswork.
Unit automatically shuts off when cooking is done.

Image: Several burger patties cooking simultaneously on the grill, illustrating the increased cooking capacity of the ProXL model.

Smoking

Utilize Woodfire Technology to infuse authentic smoky flavor.

1. Fill the Woodfire Technology pellet hopper with Ninja Woodfire Pellets (approximately ½ cup for most smokes).
2. Select the 'SMOKER' function. Set desired temperature and time.
3. Place food on the grill grate or crisper basket. Close the lid.
4. The unit will ignite the pellets to produce smoke.



Foolproof BBQ smoker

Creating authentic BBQ bark and smoky flavor is fast and easy—½ cup of pellets is all you need.

Image: Two whole chickens being smoked in the Ninja Woodfire ProXL, with visible smoke emanating from the unit, highlighting its BBQ smoker function.

Outdoor Air Frying & Baking

Achieve crispy results or bake various items outdoors.

- For air frying, place food in the crisper basket. For baking, use an oven-safe dish on the grill grate.
- Select 'AIR CRISP' or 'BAKE' function. Set desired temperature and time.
- Preheat the unit, then place food inside and close the lid.



Outdoor air fryer

Add smoky flavor to your air-fried favorites and create crispy sides outdoors.

Image: A person removing a basket of air-fried chicken wings from the Ninja Woodfire ProXL, demonstrating its outdoor air fryer capability.

Using the Integrated Thermometer

The integrated thermometer ensures precise cooking by monitoring the internal temperature of your food.

1. Insert the thermometer probe horizontally into the thickest part of the food, avoiding bone or gristle.
2. Connect the probe to the port on the side of the unit.
3. Set your desired internal temperature on the control panel. The unit will automatically shut off when the target temperature is reached.



Easy to clean

Nonstick grill grate for easy cleanup.

Image: A thermometer probe inserted into a whole chicken cooking in the Ninja Woodfire ProXL, illustrating the use of the built-in thermometer for precise cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Ninja Woodfire ProXL.

- **Always unplug the unit and allow it to cool completely before cleaning.**
- **Grill Grate & Crisper Basket:** These are nonstick. Wash with warm, soapy water and a non-abrasive sponge. For stubborn residue, soak in warm water before cleaning.
- **Grease Tray:** Remove and empty the grease tray after each use. Wash with warm, soapy water.
- **Pellet Hopper & Ash Tray:** After smoking, allow the unit to cool. Remove any remaining pellets and dispose of ash. Wipe clean. Do not wash the pellet igniter area with water.
- **Main Unit:** Wipe the exterior and interior surfaces with a damp cloth. Do not immerse the main unit in water.



Now 30% larger than before

Feed a crowd with up to 10 burgers, 10 steaks,
a 10-lb brisket, or two 7-lb chickens.

Image: A person cleaning the nonstick grill grate in a sink with a sponge, demonstrating the ease of cleanup for the Ninja Woodfire ProXL.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure unit is securely plugged into a working outlet. Check the main power switch. Reset circuit breaker if necessary.
No smoke produced during 'SMOKER' function.	Pellet hopper empty; pellets wet; igniter issue.	Add dry Ninja Woodfire Pellets. Ensure pellets are stored in a dry place. If issue persists, contact customer support.
Food not cooking evenly.	Overcrowding; lid not fully closed; uneven heat distribution.	Avoid overcrowding the cooking surface. Ensure the lid is fully closed during cooking. Allow adequate preheating time.
Thermometer reading appears inaccurate.	Probe not inserted correctly; probe damaged.	Ensure the probe is inserted into the thickest part of the food, avoiding bone. Check probe for visible damage.

SPECIFICATIONS

Brand: Ninja

Model Name: Ninja Woodfire Pro XL Outdoor Grill & Smoker

Model Number: OG851H Series

Power Source: Electric (wood_pellet for flavor)

Color: Navy

Outer Material: Stainless Steel

Item Weight: Approximately 38.9 pounds

Fuel Type: Wood Pellet (for smoking)

Product Dimensions: 22.28 x 20.03 x 15.82 inches (L x W x H)

UPC: 732388017416

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product at the time of purchase or visit the official Ninja website. Warranty terms and conditions may vary.

For customer support, product registration, or to purchase accessories, please visit the official Ninja website or contact their customer service department directly. Contact details are typically found in the product packaging or on the manufacturer's website.