

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY Replacement Remote Control for SANDSTROM Sound Bar SSBDA13E 105000313 User Manual](#)

VINABTY 105000313 SSBDA13E

VINABTY Replacement Remote Control

MODEL: 105000313 SSBDA13E

For SANDSTROM Sound Bar Systems

Introduction

This manual provides comprehensive instructions for the VINABTY Replacement Remote Control, model 105000313 SSBDA13E. This remote is designed as a direct replacement for SANDSTROM Sound Bar remote controls, specifically compatible with models SSBDA13E and 105000313. It features an ergonomic design for comfortable handling and requires no programming or complex setup; simply insert batteries to begin operation.

Safety Information

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly to prevent leakage and damage.
- Dispose of batteries according to local regulations.

Package Contents

- 1 x VINABTY Replacement Remote Control (Model: 105000313 SSBDA13E)

Product Overview

The VINABTY Replacement Remote Control is a compact and lightweight device, measuring approximately 12 x 6 x 1 cm and weighing 50 grams. It operates using infrared technology and has a maximum effective range of 10 meters. Below is an illustration of the remote control with its key buttons and their functions.



Image 1: Front view of the VINABTY Replacement Remote Control, highlighting its ergonomic design and button layout. Dimensions are approximately 8.6 cm (3.39 in) in length and 4 cm (1.57 in) in width.





Image 2: Side view of the VINABTY Replacement Remote Control, illustrating its slim profile.

Button Functions

- **Power** (): Turns the sound bar on or off.
- **DIM**: Adjusts the brightness of the sound bar's display.
- **SCAN**: Initiates scanning for radio stations.
- **PROG**: Accesses programming functions.
- **SOURCE**: Selects the input source (e.g., AUX, Bluetooth, Optical).
- **MENU**: Opens the sound bar's main menu.
- **INFO**: Displays information about the current track or settings.
- **Navigation Buttons** (▲, ▼, ◀, ▶): Navigates through menus and options.
- **OK**: Confirms selections.
- **Rewind** (): Skips to the beginning of the current track or previous track.
- **Fast Forward** (): Skips to the next track.
- **EQ**: Cycles through equalizer presets.
- **BASS**: Adjusts bass levels.
- **MUTE**: Mutes or unmutes the sound.
- **VOL- / VOL+**: Decreases or increases the volume.
- **SLEEP**: Sets the sleep timer.
- **TIMER**: Accesses timer settings.
- **CLOCK**: Sets or displays the clock.

Setup

Battery Installation

This remote control requires batteries for operation (batteries are not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use with your compatible SANDSTROM Sound Bar.

Operating Instructions

This replacement remote control functions identically to your original SANDSTROM Sound Bar remote. No programming or pairing is required.

- **Power On/Off**: Press the **Power** button to turn your sound bar on or off.
- **Volume Control**: Use the **VOL+** and **VOL-** buttons to adjust the audio volume.

- **Source Selection:** Press the **SOURCE** button to cycle through available input sources (e.g., Bluetooth, Optical, AUX).
- **Mute Audio:** Press the **MUTE** button to temporarily silence the sound. Press again to restore audio.
- **Menu Navigation:** Use the **MENU** button to access settings, and the navigation arrows (▲, ▼, ◀, ▶) with the **OK** button to make selections.

Refer to your SANDSTROM Sound Bar's original manual for specific functions and advanced settings.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

Troubleshooting

Problem	Solution
Remote control is not working.	<p>Ensure batteries are inserted correctly with the correct polarity (+/-).</p> <p>Replace old batteries with new ones.</p> <p>Check for any obstructions between the remote and the sound bar's infrared receiver.</p> <p>Ensure the remote is pointed directly at the sound bar.</p>
Remote control range is reduced.	<p>Replace batteries.</p> <p>Ensure there are no strong light sources (e.g., direct sunlight) interfering with the infrared signal.</p>

Specifications

Brand	VINABTY
Model	105000313 SSBDA13E
Compatible Devices	SANDSTROM Sound Bar (SSBDA13E, 105000313)
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 Meters
Color	Black
Batteries Required	Yes (2x AAA, not included)
Product Dimensions	12 x 6 x 1 cm
Item Weight	50 Grams

Support

For any product or service issues, please contact us for assistance. We aim to provide a satisfactory response within 24 hours.