

Vexilar V8PRO

Vexilar V8PRO Cordless Vacuum Cleaner User Manual

Model: V8PRO

1. INTRODUCTION

Thank you for choosing the Vexilar V8PRO Cordless Vacuum Cleaner. This manual provides important information on how to assemble, operate, maintain, and troubleshoot your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using your vacuum cleaner:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors.
- Do not immerse the vacuum cleaner in water or other liquids.

3. PACKAGE CONTENTS

Carefully unpack your Vexilar V8PRO and ensure all components are present and in good condition. The package should include:

- Main Motor Unit
- Extension Wand (Purple)
- Motorized Floor Brush
- 2-in-1 Brush Tool
- Crevice Tool
- Wall Mount Dock
- Power Adapter
- User Manual

Pannello Touch LED

Informazioni in tempo reale sullo stato di funzionamento, sulla modalità operativa e sul livello della batteria.



Image: Vexilar V8PRO Cordless Vacuum Cleaner with its full set of accessories, including the main unit, extension wand, floor brush, 2-in-1 brush, crevice tool, and wall mount.

4. PRODUCT OVERVIEW

The Vexilar V8PRO is a powerful and versatile cordless vacuum cleaner designed for efficient home cleaning. Key features include:

- **Powerful Suction:** Equipped with a 450W motor, delivering up to 40KPa suction power for deep cleaning

on various surfaces.

- **Long Battery Life:** Offers up to 50 minutes of runtime in ECO mode, sufficient for cleaning an entire home (approx. 150 square meters) on a single charge.
- **Smart LED Touch Screen:** Provides real-time display of power status, operating mode, and allows easy adjustment of suction power.
- **Ergonomic & Lightweight Design:** Weighs only 2.5 kg and features a self-standing body for convenient storage. The retractable metal tube and 180° rotating brush ensure easy maneuverability and reach under furniture.
- **6-in-1 Multifunctionality:** Easily converts into a handheld vacuum with various attachments (2-in-1 brush, crevice tool, telescopic tube) for cleaning sofas, curtains, car interiors, and more.
- **7-Stage CycloneFlow™ Filtration System:** Advanced filtration system captures 99.97% of microscopic dust (as small as 0.1 microns), featuring a washable and reusable HEPA H10 filter for cleaner air.
- **LED Floor Brush:** The motorized floor brush includes 4 built-in LED lights to illuminate dark corners, ensuring no dust is missed.

Potente aspirazione da 40 KPA

Motore potente + Spazzola per pavimenti migliorata
Cattura facilmente capelli, polvere e detriti.



Image: The Vexilar V8PRO cordless vacuum cleaner in its full stick configuration, ready for use on a hard floor.

Sistema di Filtrazione Tecnologia CycloneFlow™

Filtro HEPA

Filtro a cono multiplo



Filtro a rete metallica

Filtrazione a separazione ciclonica

Image: An exploded view diagram illustrating the Vexilar V8PRO's 7-stage CycloneFlow filtration system, highlighting the HEPA filter, multi-cone filter, and metallic mesh filter.

5. SETUP

5.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.

2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand, ensuring it locks firmly.
3. **Alternative Attachments:** For handheld use, attach the 2-in-1 brush tool or crevice tool directly to the main motor unit.

5.2 Charging the Battery

Before first use, fully charge the vacuum cleaner for approximately 4 hours.

1. Connect the power adapter to the charging port on the main motor unit.
2. Plug the adapter into a wall outlet. The LED screen will indicate charging status.
3. Once fully charged, the indicator will show a full battery icon.



Fino a **50 minuti**
di autonomia



4 ore di ricarica
rapida

Up to
50 min



Image: A close-up view of the Vexilar V8PRO's battery compartment, illustrating the charging process and estimated 50-minute runtime.

5.3 Wall Mount Installation

The included wall mount dock allows for convenient storage and charging.

1. Choose a suitable location near a power outlet.
2. Mark the drilling points for the wall mount.
3. Drill holes and secure the wall mount using the provided screws and anchors.

4. Hang the vacuum cleaner on the wall mount for storage and charging.

Disposizione verticale

Liberate le vostre mani, potete posizionare l'aspirapolvere ovunque desideriate.



Image: A woman demonstrating the installation of the Vexilar V8PRO cordless vacuum cleaner onto its wall-mounted storage and charging dock.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button on the LED touch screen to turn the vacuum cleaner on or off.



Multifunzione con Vari Accessori

Adatto a diversi scenari di pulizia



Image: A close-up of the Vexilar V8PRO's LED touch panel, showing real-time information on power status, operating mode, and suction level.

6.2 Suction Modes

The V8PRO features two suction modes: MAX and ECO. Use the mode selection button on the LED screen to switch between them.

- **ECO Mode:** Ideal for everyday cleaning, light dust, and extended runtime.
- **MAX Mode:** Provides maximum suction power for stubborn dirt, pet hair, and deep cleaning carpets.

6.3 Using Attachments

The V8PRO comes with various attachments for different cleaning tasks:

- **Motorized Floor Brush:** For carpets, hard floors, and tiles. Its LED lights illuminate dark areas.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like upholstery or curtains, and the nozzle for general dusting.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.



Image: A woman using the Vexilar V8PRO in handheld configuration with an accessory to clean a sofa, demonstrating its versatility.



Multifunzione con Vari Accessori

Adatto a diversi scenari di pulizia



Image: A woman using the Vexilar V8PRO cordless vacuum cleaner in its full stick configuration to clean a hard floor, highlighting its maneuverability.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Vexilar V8PRO.

7.1 Emptying the Dustbin

Empty the dustbin after each use or when the MAX fill line is reached.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach it from the main unit.
3. Hold the dustbin over a trash can and press the bottom release latch to open and empty its contents.
4. Close the dustbin lid and reattach it to the main unit.

7.2 Cleaning Filters

The V8PRO features a washable HEPA H10 filter and other filtration components. Clean them regularly to maintain suction power.

1. Twist and pull to remove the filter assembly from the dustbin.
2. Separate the HEPA filter and other filter components.
3. Rinse all washable filters under cold running water until the water runs clear.
4. Allow all filter parts to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a hairdryer or other heating methods.

7.3 Cleaning the Brush Roll

Periodically check the motorized floor brush for tangled hair or debris.

1. Turn off the vacuum and detach the floor brush.
2. Use a coin or screwdriver to unlock the brush roll cover.
3. Remove the brush roll and cut away any tangled hair or fibers using scissors.
4. Clean any debris from the brush roll housing.
5. Reinsert the brush roll and secure the cover.

8. TROUBLESHOOTING

If you encounter any issues with your Vexilar V8PRO, refer to the following table for common problems and solutions.

| Problem | Possible Cause | Solution |
|-------------------------|---|--|
| Vacuum does not turn on | Battery is not charged Power button not pressed correctly | Charge the battery fully Ensure the power button is pressed firmly |
| Low suction power | Dustbin is full Filters are clogged Brush roll is blocked Hose/wand is blocked | Empty the dustbin Clean or replace filters Remove tangled hair/debris from brush roll Check and clear any blockages in the hose or wand |

| Problem | Possible Cause | Solution |
|-------------------------|---|--|
| Brush roll not spinning | Brush roll is jammed Floor brush is not properly attached | Clear any obstructions from the brush roll Ensure the floor brush is securely connected to the wand |
| Short battery runtime | Battery not fully charged Operating in MAX mode continuously Battery life degradation | Fully charge the battery Use ECO mode for longer runtime Contact customer support for battery replacement if necessary |
| Unusual noise | Blockage in the air path Foreign object in brush roll | Check for and remove any blockages Inspect and clear the brush roll |

If the problem persists after trying these solutions, please contact Vexilar customer support.

9. SPECIFICATIONS

| Feature | Specification |
|--------------------|---|
| Brand | Vexilar |
| Model Name | V8PRO |
| Motor Power | 450W |
| Suction Power | Up to 40KPa |
| Battery Type | Lithium-ion |
| Voltage | 26 Volts |
| Runtime | Up to 50 minutes (ECO mode) |
| Charging Time | 4 Hours |
| Dustbin Capacity | 500 Milliliters |
| Filtration System | 7-Stage CycloneFlow™ with washable HEPA H10 filter |
| Noise Level | 58 Decibels |
| Weight | 7 Pounds (approx. 3.17 kg) |
| Dimensions (LxWxH) | 20.9L x 24.1W x 11.9H cm |
| Control Method | Touchpad Control |
| Special Features | LED Touch Screen, 4 LED lights on floor brush, Self-standing design |

10. WARRANTY AND SUPPORT

Vexilar offers a 2-year warranty for the V8PRO Cordless Vacuum Cleaner. For any warranty claims, technical assistance, or customer service inquiries, please contact our support team.

Our customer service is available 24 hours a day in Italian to assist you with any questions or concerns.

Replacement filters are also available.

For support, please visit the official Vexilar website or refer to the contact information provided with your purchase.