

Jadfezy J-03series

Jadfezy Action Camera User Manual

Model: J-03series

INTRODUCTION

The Jadfezy Action Camera FHD 1080P is designed to capture high-quality video and photos in various environments, including underwater. It features a 1080P/30FPS video resolution, 12MP photo quality, a 2-inch LCD screen for real-time viewing, and comes with a waterproof case allowing dives up to 30 meters (98 feet). This manual provides essential information for setting up, operating, and maintaining your camera.

WHAT'S IN THE BOX

Upon opening your Jadfezy Action Camera package, you should find the following items:

- 1 * Jadfezy action camera
- 1 * 32GB Card (pre-installed in the camera)
- 2 * Rechargeable batteries (one is installed in the camera)
- 1 * Waterproof case
- 1 * USB cable
- 1 * User Manual (Multilingual language)
- and a variety of installation accessories to adapt to various sports equipment such as bicycle, helmet, self stick etc.



Figure 1: Jadfezy Action Camera and its comprehensive accessory kit.

Video 1: An overview of the Jadfezy Action Camera and its included accessories, demonstrating the unboxing experience and showcasing each component.

Key Features

- **FHD 1080P/30FPS Action Camera:** Captures high-definition video at 30 frames per second and 12MP photo quality.
- **2 Batteries Action Cam:** Equipped with two rechargeable 900mAh batteries for extended use.
- **2 inches LCD screen:** Provides a real-time display for easy framing and playback.
- **30M/98FT waterproof case:** Allows the camera to be used underwater up to 30 meters (98 feet).
- **32GB Memory Card & Tons of Free Accessories:** Includes a 32GB memory card and various mounts for bicycles, helmets, skateboards, and self-sticks.



Figure 2: The Jadfezy Action Camera, showcasing its compact design and integrated screen.



Figure 3: The camera enclosed in its waterproof case, suitable for underwater activities.

SETUP

1. Charging the Batteries

Before first use, fully charge both included batteries. Insert a battery into the camera and connect the camera to a USB power source using the provided USB cable. The charging indicator light will show the charging status. A full charge typically takes 2-3 hours.



Figure 4: The two rechargeable 900mAh batteries provided with the camera.

2. Inserting the Memory Card

Your camera comes with a 32GB memory card pre-installed. If you need to remove or replace it:

1. Open the battery compartment cover on the bottom of the camera.
2. Locate the microSD card slot.
3. Gently push the card until it clicks into place. To remove, push again until it springs out.

Ensure the camera is powered off before inserting or removing the memory card to prevent data corruption.

Video 2: Demonstration of opening the waterproof case, installing the battery, and inserting the 32GB memory card into the action camera.

3. Attaching Mounts and Accessories

The camera includes various mounts for different activities. Refer to the specific accessory's instructions for proper attachment. For example, the bicycle bracket attaches to handlebars, and the helmet mount uses 3M adhesives for secure placement.



Figure 5: The action camera shown with different mounting options for diverse sports and activities.

OPERATING THE CAMERA

1. Power On/Off

- To power on: Press and hold the **Power/Mode** button on the front of the camera for 3 seconds.
- To power off: Press and hold the **Power/Mode** button for 3 seconds again.

2. Mode Switching

Press the **Power/Mode** button repeatedly to cycle through different modes: Video Recording, Photo Mode, Playback Mode, and Settings Mode.

3. Video Recording

1. Switch to Video Recording Mode (indicated by a video camera icon on the screen).
2. Press the **OK/Shutter** button on top of the camera to start recording. A red dot will flash on the screen.
3. Press the **OK/Shutter** button again to stop recording.

4. Taking Photos

1. Switch to Photo Mode (indicated by a camera icon on the screen).
2. Frame your shot using the 2-inch LCD screen.

3. Press the **OK/Shutter** button to take a photo.

5. Menu Navigation

In Settings Mode, use the **Up/Down** buttons (usually on the side) to navigate through options. Press the **OK/Shutter** button to select an option.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screen. For the waterproof case, rinse with fresh water after saltwater use and ensure seals are free of debris.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. If storing for extended periods, charge them to about 50% capacity.
- **Storage:** When not in use, store the camera and accessories in a protective case to prevent damage from dust, moisture, and impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't turn on.	Low battery; battery not inserted correctly.	Charge the battery; re-insert the battery correctly.
Cannot record video/take photos.	Memory card full; memory card error; incorrect mode.	Delete old files or replace card; format card (backup data first); switch to correct mode.
Poor image/video quality.	Dirty lens; low light conditions; incorrect settings.	Clean the lens; ensure adequate lighting; adjust resolution settings.
Water leakage in waterproof case.	Seal not properly closed; debris on seal; damaged seal.	Ensure case is securely latched; clean seal thoroughly; inspect seal for damage and replace if necessary.

SPECIFICATIONS



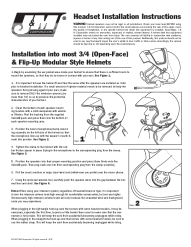


Feature	Detail
Brand Name	Jadfezy
Item Model Number	J-03series
Video Capture Resolution	1080p
Photo Sensor Technology	CMOS
Screen Size	2 Inches
Waterproof Depth	Up to 30M / 98FT (with waterproof case)
Batteries	2 Lithium Ion batteries (900mAh each)
Flash Memory Type	Micro SD (32GB card included)
Connectivity Technology	HDMI, USB

Feature	Detail
Item Weight	12.1 ounces
Package Dimensions	8.35 x 4.05 x 2.6 inches

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or service, please refer to the official Jadfezy website or contact their customer service directly. Details are typically provided on the product packaging or the manufacturer's official online resources.

Related Documents - J-03series

	<p>WOLFANG GA120 Action Camera Quick Start Guide</p> <p>Concise guide to setting up and using the WOLFANG GA120 Action Camera, including package contents, assembly instructions for various mounts, button functions, and app integration.</p>
	<p>130R HIRO CARBON P/J Motorcycle Helmet User Manual Safety & Care Guide</p> <p>Official user manual for the 130R HIRO CARBON P/J motorcycle helmet. Find detailed instructions on fitting, maintenance, safety features, and warranty from 130R Helmets.</p>
	<p>J&M Corporation Headset Installation Guide for Motorcycle Helmets</p> <p>Comprehensive installation instructions for J&M Corporation motorcycle headsets in open-face, flip-up, and full-face helmets. Includes audio specifications and warranty information.</p>
	<p>HJC i80 Motorcycle Helmet Owner's Manual Safety, Features, and Maintenance</p> <p>Comprehensive owner's manual for the HJC i80 motorcycle helmet, covering safety information, features, proper usage, maintenance, and replacement parts. Includes multilingual support and detailed instructions.</p>
	<p>Caberg HORUS X Flip-Up Motorcycle Helmet: User Manual and Features</p> <p>Comprehensive guide to the Caberg HORUS X flip-up motorcycle helmet, covering features like the panoramic visor, P/J homologation, and detailed instructions for assembly, disassembly, cleaning, and maintenance.</p>



[R&J Batteries Automotive Application Guide V8: Find Your Perfect Car Battery](#)

Explore the R&J Batteries V8 Automotive Application Guide. Find cross-reference data, safety information, and replacement guides for R&J Batteries, ACDelco, and Delkor automotive batteries for a wide range of vehicles.