

LOUTOC B0F2SSM183

LOUTOC Replacement for Sony Bravia TV Remote Control

Model: B0F2SSM183

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides instructions for the LOUTOC Replacement Remote Control for Sony Bravia Smart LED OLED Series TVs. This remote is designed to offer a seamless replacement experience, featuring voice control and dedicated shortcut buttons for popular streaming services.

Suitable for Sony Smart TV models

BRAVIA XR OLED 4K HDR Google TV:

A75L Series: XR-55A75L / XR-65A75L
A80CL Series: XR-55A80CL / XR-65A80CL / XR-77A80CL / XR-83A80CL
A80L Series: XR-83A80L / XR-77A80L / XR-65A80L / XR-55A80L
A95L Series: XR-55A95L / XR-65A95L / XR-77A95L

BRAVIA OLED 4K HDR Google TV:

BRAVIA 8 Series: K-55XR80 / K-65XR80 / K-77XR80

BRAVIA XR Mini LED 4K HDR Google TV:

X93CL Series: XR-75X93CL / XR-65X93CL
X93L Series: XR-65X93L / XR-75X93L / XR-85X93L
X95L Series: XR-85X95L

BRAVIA 4K HDR Google TV:

BRAVIA 3 Series: K-43S30 / K-50S30 / K-55S30 /
K-65S30 / K-75S30 / K-85S30

BRAVIA Mini LED QLED 4K HDR Google TV:

BRAVIA 7 Series: K-55XR70 / K-65XR70 / K-75XR70 / K-85XR70
BRAVIA 9 Series: K-65XR90 / K-75XR90 / K-85XR90

BRAVIA XR Full Array LED 4K HDR Google TV:

X90CL Series: XR-85X90CL / XR-75X90CL / XR-65X90CL / XR-55X90CL
X90L Series: XR-55X90L / XR-65X90L / XR-75X90L / XR-85X90L / XR-98X90L



Image: The LOUTOC replacement remote control, highlighting the central voice activation button. This remote is designed for Sony Bravia TVs.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -). **Batteries are not included.**
4. Close the battery compartment cover securely.

2.2. Pairing Instructions for Voice Function

To activate the voice function and ensure full compatibility, the remote control must be paired with your Sony Bravia TV. Follow these steps:



Image: A visual guide illustrating the six steps required to pair the remote control with a Sony Smart TV, showing on-screen menus and remote button presses.

1. Turn on your TV using the **Power** button on the remote or the TV itself.
2. On your TV's homepage, navigate to **Settings**.
3. Select **Remotes & Accessories** from the Settings menu.
4. Choose **Connect a new remote**. Your TV may display a message indicating that the currently connected remote will be disconnected. Confirm to proceed.
5. On the LOUTOC remote, press and hold the **VOL(-)** button and the **VOICE** (Google Assistant) button simultaneously for approximately 3 seconds.
6. The TV screen will display a "Connecting..." message. Once connected, a confirmation message "The new remote has been connected" will appear.
7. Press the **OK** button on the remote to finalize the pairing process.

3. OPERATION

3.1. Button Functions



Image: A detailed diagram labeling each button on the remote control and describing its primary function, including power, navigation, volume, channel, and app shortcuts.

Button	Function
Power	Turns the TV on or off.
TV	Displays TV channel list or switches to TV input.
Input	Displays and selects the input source (e.g., HDMI 1, HDMI 2).
MENU (Control menu)	Displays the Control menu for on-screen navigation.
Home	Returns to the TV's home screen.
Back	Goes back to the previous screen or menu.

Button	Function
Google Assistant / Microphone	Activates voice search and commands.
Volume (+/-)	Adjusts the TV volume up or down.
Channel (+/-)	Changes TV channels up or down.
Mute	Mutes or unmutes the TV audio. (Accessibility shortcut by pressing and holding).
Dashboard	Displays the TV's dashboard.
Guide	Displays the digital program guide for TV or cable/satellite box.
App Buttons	One-touch access to Netflix, Prime Video, Disney+, YouTube, Bravia Core, and Crunchyroll.

Note: The remote control shape, layout, availability, and function of remote control buttons may vary depending on your region/country/TV model/TV settings. Google Assistant requires an internet connection.

3.2. Voice Control Function

After successful pairing, the voice control function allows you to operate your TV using spoken commands. Press the **Google Assistant / Microphone** button and speak clearly into the remote.



Image: A family watching TV, demonstrating the use of the voice remote control to issue commands such as "Turn on the sports channel."

Examples of voice commands include:

- "Turn on the sports channel"
- "Play some music"

- "Open Netflix"
- "Go home"
- "Volume set to 10"

3.3. Shortcut App Access

The remote features dedicated buttons for quick access to popular streaming applications. Simply press the desired app button to launch it directly.

This smart alternative remote control with voice control makes it easy to change programs for the whole family, adding to the fun times



Family gathering



Night viewing



Children's entertainment

Image: The remote control shown with logos of streaming services like Netflix, Prime Video, Disney+, YouTube, Bravia Core, and Crunchyroll, indicating one-touch access.

Available shortcut apps:

- Netflix
- Prime Video
- Disney+
- YouTube
- Bravia Core
- Crunchyroll

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately. Avoid using harsh chemicals, abrasive cleaners, or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning.

Always replace both batteries at the same time with new ones of the same type (AAA).

- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

5.1. Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity. Replace old or depleted batteries with new AAA batteries.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
- **Distance:** Operate the remote within a reasonable distance from the TV.

5.2. Voice Function Not Working

- **Pairing:** Confirm that the remote control has been successfully paired with your TV as described in the "Pairing Instructions" section. The voice function requires pairing.
- **Internet Connection:** Ensure your Sony Smart TV has an active internet connection, as Google Assistant functionality relies on it.
- **Speak Clearly:** Speak clearly and directly into the microphone on the remote control.

5.3. App Shortcut Buttons Not Working

- **Internet Connection:** Ensure your TV has an active internet connection to access streaming services.
- **App Installation:** Verify that the respective applications (Netflix, Prime Video, etc.) are installed and updated on your Sony Smart TV.

6. SPECIFICATIONS

6.1. Product Details

- **Brand:** LOUOC
- **Model:** B0F2SSM183
- **Manufacturer:** LOUOC
- **Color:** for Sony Voice Remote
- **Special Feature:** Voice Search
- **Material:** High-quality ABS material
- **Max Number of Supported Devices:** 18
- **Compatible Devices:** Television
- **Item Weight:** 2.39 ounces
- **Package Dimensions:** 7.44 x 2.09 x 0.59 inches

- **Date First Available:** March 28, 2025

6.2. Compatible Sony TV Series

This remote control is compatible with Sony Bravia Google Smart TVs, including but not limited to the following series and models:



Image: A visual representation detailing the compatibility of the remote control with different Sony Bravia Smart TV series, including OLED, Full Array LED, and Mini LED models.

- **BRAVIA XR OLED 4K HDR Google TV:**A75L, A80L, A80CL, A95L series (e.g., XR-55A75L, XR-65A80CL, XR-77A80CL, XR-83A80CL, XR-55A95L)
- **BRAVIA OLED 4K HDR Google TV:**BRAVIA 8 series (e.g., K-55XR80, K-65XR80, K-77XR80)
- **BRAVIA XR Mini LED 4K HDR Google TV:**X93CL, X93L, X95L series (e.g., XR-75X93CL, XR-65X93L, XR-95X95L)
- **BRAVIA 4K HDR Google TV:**BRAVIA 3 series (e.g., K-43S30, K-50S30, K-55S30, K-65S30, K-75S30, K-85S30)
- **BRAVIA Mini LED QLED 4K HDR Google TV:**BRAVIA 7, BRAVIA 9 series (e.g., K-55XR70, K-65XR70, K-75XR70, K-85XR70, K-90XR90)
- **BRAVIA XR Full Array LED 4K HDR Google TV:**X90CL, X90L series (e.g., XR-85X90CL, XR-75X90CL, XR-65X90CL, XR-55X90CL, XR-90X90L)

6.3. Compatible Sony Remote Models

This remote serves as a universal replacement for the following Sony TV remote models:

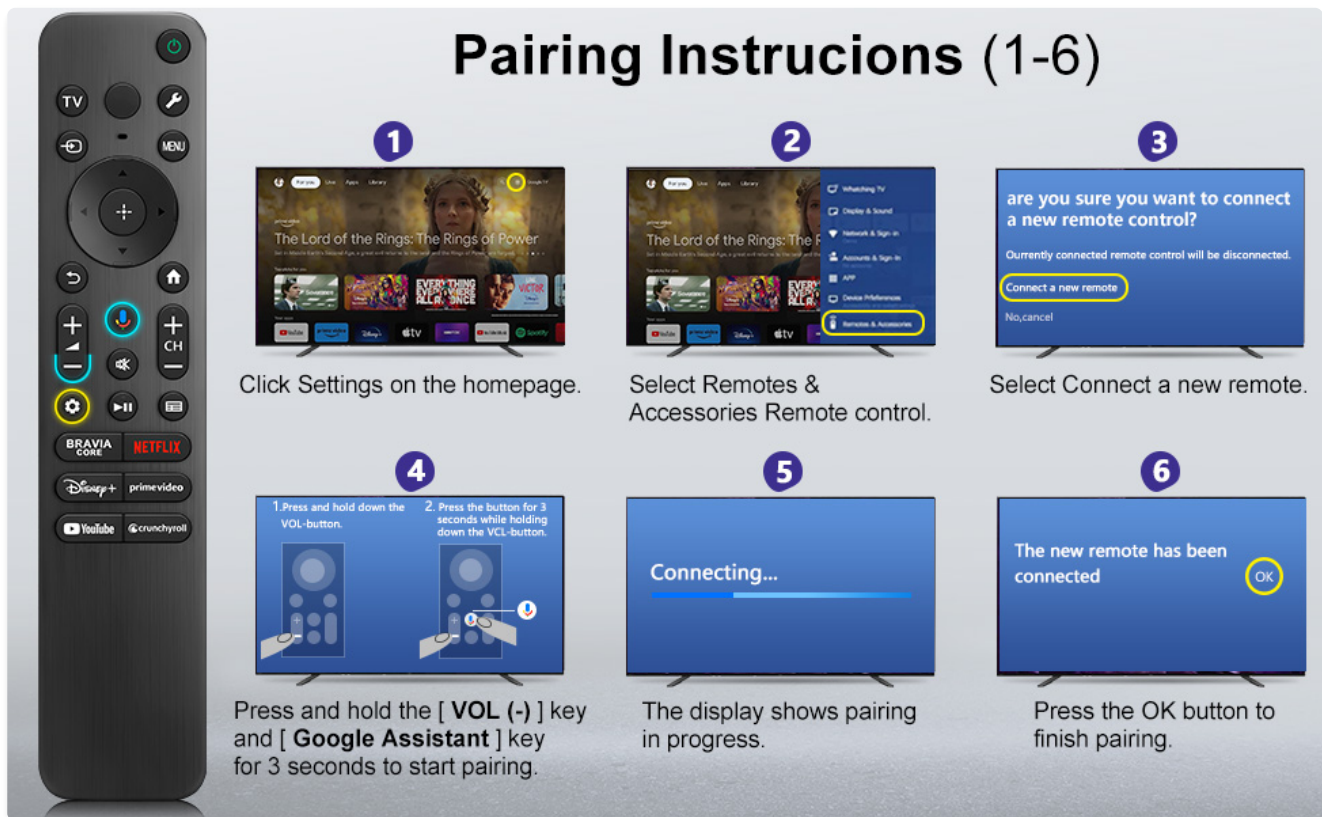


Image: A visual comparison showing the LOUTOC replacement remote alongside several original Sony Voice Remotes, illustrating its compatibility.

- RMF-TX810U
- RMF-TX820U
- RMF-TX910U
- RMF-TX920U

7. WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your LOUTOC Replacement Remote Control, please contact the manufacturer directly through their official support channels. Refer to the product packaging or the LOUTOC brand store on Amazon for specific contact information.