

[Manuals.plus](#) /

› [PlayHot](#) /

› PlayHot Portable Handheld Turbo Fan User Manual

PlayHot N607

PlayHot Portable Handheld Turbo Fan User Manual

Model: N607

INTRODUCTION

Thank you for choosing the PlayHot Portable Handheld Turbo Fan. This compact and powerful fan is designed to provide ultimate cooling comfort in various settings. With its advanced motor, multiple speed settings, and versatile design, it's an ideal companion for indoor and outdoor activities. Please read this manual thoroughly before use to ensure proper operation and maintenance.

PRODUCT FEATURES

- **Powerful Airflow:** Equipped with a high-speed three-phase brushless motor and 6-blade design, reaching up to 13,550 RPM and a maximum wind speed of 10m/s.
- **5-Speed Settings:** Easily adjust airflow from a gentle breeze to a strong turbo wind to suit your cooling needs.
- **Long Battery Life:** Integrated 5000mAh rechargeable battery provides 3 to 12 hours of operation depending on the speed setting.
- **Portable & Foldable Design:** Ultra-lightweight at 190g (0.6lb) and features a 180° rotatable body for compact storage and versatile positioning.
- **3-in-1 Functionality:** Can be used as a handheld fan, worn as a neck fan with the included lanyard, or placed on a surface as a desk fan.
- **LED Display:** Digital display shows current speed setting and battery level.
- **USB-C Charging:** Convenient and fast charging via USB Type-C port.

SPEED 5 3 Hours

SPEED 4 5 Hours

SPEED 3 8 Hours

SPEED 2 10 Hours

SPEED 1 12 Hours

5000mAh

Can Provide Duration 3-12 Hours

Image Description: This image illustrates the powerful internal components of the fan, highlighting the three-phase brushless motor and its ability to reach 13,550 RPM for superior airflow. It contrasts the high speed of this turbo fan with a general fan.

SMALL AND PORTABLE



Image Description: This graphic displays the impressive battery life of the 5000mAh battery across its five speed settings, ranging from 12 hours on Speed 1 to 3 hours on Speed 5.



3 IN 1 USAGE

Image Description: This image emphasizes the fan's small and portable design, showing its dimensions (6.7 inches extended, 2.3 inches folded) and how easily it fits into a bag or can be used as a desk fan.



Image Description: This composite image showcases the fan's versatility, illustrating its use as a desk fan, a neck fan (with lanyard), and a traditional handheld fan.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x PlayHot Portable Handheld Turbo Fan (Model N607)
- 1 x USB Type-C Charging Cable

- 1 x Lanyard
- 1 x User Manual

SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please adhere to the following safety guidelines:

- Do not insert fingers or any objects into the fan grille when it is operating.
- Keep the fan away from water, moisture, and high temperatures.
- Do not disassemble, repair, or modify the fan yourself. Contact customer support if service is required.
- Keep out of reach of small children and pets.
- Use only the provided USB Type-C cable or a certified equivalent for charging.
- Avoid dropping or subjecting the fan to strong impacts.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the fan. Connect the USB Type-C cable to the fan's charging port and the other end to a USB power source (e.g., wall adapter, computer, power bank). The LED display will indicate charging status.
3. **Attach Lanyard (Optional):** If desired, thread the included lanyard through the designated loop on the fan's handle.

OPERATING INSTRUCTIONS

The PlayHot Portable Handheld Turbo Fan offers versatile usage modes and simple controls.

Power On/Off and Speed Adjustment:

- **Power On:** Press the power button once to turn on the fan at Speed 1.
- **Adjust Speed:** Each subsequent press of the power button will cycle through the speeds: Speed 1 → Speed 2 → Speed 3 → Speed 4 → Speed 5.
- **Power Off:** After Speed 5, pressing the button again will turn the fan off. Alternatively, press and hold the power button for 2 seconds at any speed to turn it off directly.
- **LED Display:** The digital LED display on the fan head will show the current speed setting (1-5) and the battery level.

Usage Modes:

The fan's unique 180° rotatable design allows for three convenient usage modes:

1. **Handheld Fan:** Hold the fan by its handle for direct personal cooling.
2. **Neck Fan:** Attach the lanyard and wear the fan around your neck. Adjust the fan head to direct airflow upwards towards your face.
3. **Desk Fan:** Fold the fan's handle at a 90-degree angle to create a stable base. Place it on any flat surface like a desk, table, or nightstand.



Image Description: This image displays the pink portable turbo fan in two primary configurations: extended for handheld use and folded into a compact desk fan, showcasing its versatility.

CHARGING

The fan is equipped with a built-in rechargeable battery. When the battery is low, the LED display will show a low battery indicator.

- Connect the provided USB Type-C cable to the charging port on the side of the fan.
- Connect the other end of the cable to a USB power adapter (5V/2A recommended), a computer USB port, or a power bank.
- The LED display will show a charging animation. Once fully charged, the battery indicator will show full.
- A full charge typically takes approximately 3 hours.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your fan.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the fan. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the fan every 3 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using the USB Type-C cable.
Weak airflow.	Fan is on a low speed setting.	Press the power button to increase the speed setting.
Fan not charging.	Cable or adapter issue; charging port obstruction.	Ensure the USB-C cable is securely connected. Try a different USB port or power adapter. Check for debris in the charging port.
Unusual noise during operation.	Obstruction in fan blades; internal issue.	Turn off the fan and check for any foreign objects near the blades. If the noise persists, contact customer support.

SPECIFICATIONS

Brand	PlayHot
Model Name	Playhot Portable Turbo Fan (N607)
Color	Pink
Power Source	Battery Powered (5000mAh Lithium Ion)
Product Dimensions	2.36"D x 6.89"W x 2.17"H
Item Weight	190 Grams (0.6 lb)
Number of Blades	6
Max Speed	13550 RPM
Voltage	5 Volts
Control Method	Touch
Connector Type	USB Type C
Number of Power Levels	5
Manufacture Year	2024

WARRANTY AND SUPPORT

PlayHot is committed to providing high-quality products and excellent customer service.

- **Technical Support:** We offer lifetime technical support for our products.
- **Replacement Service:** Enjoy a 365-day replacement service for any manufacturing defects.
- **Fast Response:** Our customer service team aims to respond to inquiries within 12 hours.

For assistance, please contact us through the platform where you purchased the product or visit the official PlayHot store page.



Image Description: This image depicts a customer service center, emphasizing PlayHot's commitment to responsible and reliable support, including lifetime technical support, 365-day replacement service, and a 12-hour fast response time.

