

## P959

# P959 Wireless Bluetooth Headphones User Manual

Model: P959

## INTRODUCTION

---

Thank you for choosing the P959 Wireless Bluetooth Headphones. These over-ear headphones are designed to provide a versatile and immersive audio experience with multiple connectivity options and comfortable wear. This manual will guide you through the setup, operation, and maintenance of your new headphones.

## IMPORTANT SAFETY INFORMATION

---

- Do not expose the headphones to extreme temperatures or humidity.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This will void the warranty.
- Clean the headphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Listen at moderate volume levels to prevent hearing damage.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

Please check that all items are present in your package:

- P959 Wireless Bluetooth Headphones
- Type-C Charging Cable
- User Manual (This document)

## PRODUCT OVERVIEW

---

Familiarize yourself with the different parts of your P959 headphones:



*Figure 1: P959 Wireless Bluetooth Headphones (Blue variant)*

This image displays the P959 over-ear headphones in blue. Key features visible include the padded earcups, adjustable headband, and the general ergonomic design. The 'R' marking on the right earcup indicates the right side of the headphones.

### **Key Components:**

- **Adjustable Headband:** For a comfortable and secure fit.
- **Padded Earcups:** Soft PU cushions for extended wear comfort.
- **Control Buttons:** (*Specific button functions will be detailed in Operating Instructions*) Typically include Power, Volume, Play/Pause, Mode.
- **Type-C Charging Port:** For recharging the internal battery.
- **3.5mm AUX Input:** For wired connection to audio devices.
- **TF Card Slot:** For playing music directly from a memory card.
- **Microphone:** For hands-free calls.

## **SETUP**

---

## 1. Charging the Headphones

1. Connect the provided Type-C charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red light for charging, light off when fully charged).
4. A full charge takes approximately 2 hours and provides over 8 hours of playback time.

## 2. Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the Power button for a few seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "P959" from the list of found devices.
5. Once connected, the LED indicator will typically show a solid blue light or flash slowly.
6. The headphones have a Bluetooth range of approximately 33 feet (10 meters).

## 3. AUX Input Connection

For wired listening, use the 3.5mm AUX input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the headphones.
2. Connect the other end to the audio output jack of your device.
3. The headphones will automatically switch to AUX mode.

## 4. TF Card Playback

To play music directly from a TF (MicroSD) card:

1. Insert a TF card with MP3 audio files into the TF card slot on the headphones.
2. The headphones will automatically detect the card and begin playing music.
3. Use the control buttons to manage playback.

## 5. FM Radio Function

To use the built-in FM radio:

1. Power on the headphones.
2. Press the Mode button (if available) to switch to FM radio mode.
3. Use the volume/track buttons to scan for stations or change frequencies.
4. For better reception, ensure you are in an open area.

---

## OPERATING INSTRUCTIONS

The P959 headphones feature intuitive controls for easy operation.

### Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED indicator turns off.

## Volume Control

- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

## Music Playback Control

- **Play/Pause:** Short press the Play/Pause button (often the Power button or a dedicated button).
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

## Call Management

- **Answer/End Call:** Short press the Play/Pause button when a call comes in.
- **Reject Call:** Long press the Play/Pause button when a call comes in.
- **Redial Last Number:** Double-press the Play/Pause button.

## Mode Switching

- **Switch Modes:** Short press the Mode button (if available) to cycle between Bluetooth, TF Card, AUX, and FM Radio modes.

## MAINTENANCE

---

Proper care will extend the life and performance of your headphones.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earcups and headband. Do not use liquids or aerosol cleaners directly on the headphones.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long period, charge the headphones to about 50% every few months.
- **Water Resistance:** The headphones have basic water resistance, protecting against everyday moisture exposure. Do not submerge them in water or expose them to heavy rain.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn Bluetooth on/off on your device. Move headphones closer to the device (within 33 feet).
No sound.	Volume too low; incorrect mode; device not playing audio.	Increase headphone and device volume. Ensure correct mode (Bluetooth, AUX, TF, FM). Check if audio is playing on the source device.

Problem	Possible Cause	Solution
Poor sound quality/static.	Interference; low battery; out of Bluetooth range.	Move away from other wireless devices. Charge headphones. Move closer to the Bluetooth device.
FM radio reception is poor.	Weak signal; environmental interference.	Try moving to an open area. Re-scan for stations.

## SPECIFICATIONS

Feature	Detail
Model Name	P959
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm AUX), TF Card, FM Radio
Bluetooth Version	5.4
Bluetooth Range	Up to 33 feet (10 meters)
Audio Driver Size	40 mm
Frequency Response	20-20000 Hz
Impedance	32 Ohm
Sensitivity	88 dB
Battery Capacity	350mAh Polymer Lithium Battery
Playback Time	8+ hours
Charging Time	Approx. 2 hours
Charging Interface	Type-C
Material	Acrylonitrile Butadiene Styrene (ABS), PU
Product Dimensions	8.27 x 8.27 x 2.32 inches
Item Weight	1.05 pounds (475 grams)
Water Resistance Level	Not Water Resistant (Basic moisture exposure protection)
Included Components	Headphones

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact the seller directly through the platform where the product was purchased. Keep your proof of purchase for any warranty claims.

