

Tekswamp RMC-R2001

User Manual for Tekswamp Replacement Remote Control

Model: RMC-R2001

1. INTRODUCTION

This manual provides instructions for the Tekswamp Replacement Remote Control, model RMC-R2001, designed for Insignia AM/FM Stereo Receivers, specifically the RMC-R2001 model. This remote is engineered to provide most of the original commands for your device without requiring additional programming.

Key functions include turning the device on and off, accessing and navigating menus, and selecting input signals. Please note that some specific functions, such as page flip, keystone correction, video adjustment, and number inputs, may not work properly with all devices. This remote does not include a laser pointer function.



Figure 1: Top view of the Tekswamp Replacement Remote Control, showing the button layout and "Tekswamp" branding.

2. SETUP

2.1 Battery Installation

The Tekswamp Replacement Remote Control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: The remote features a security screw to prevent unauthorized access to the battery compartment, enhancing child safety. If present, unscrew it before opening the compartment.



Figure 2: Bottom view of the remote control, illustrating the battery compartment location.

3. OPERATING INSTRUCTIONS

This remote control is designed to replicate the primary functions of your original Insignia RMC-R2001 AM/FM Stereo Receiver remote. Point the remote directly at the infrared (IR) receiver on your stereo receiver for optimal performance.

3.1 Basic Functions

- **Power Button (●):** Press to turn the stereo receiver on or off.
- **Menu Navigation:** Use the directional arrow buttons (Up, Down, Left, Right) and the **OK** button to navigate through the receiver's on-screen menus.
- **Input Signal Selection (SRC):** Press the **SRC** button to cycle through available input sources (e.g., CD, Tuner, AUX).
- **Volume Control (V+, V-):** Use the **V+** button to increase volume and **V-** to decrease volume.
- **Mute:** The mute button (often represented by a speaker with a cross through it) will silence the audio output.



Figure 3: Angled view highlighting the main operational buttons including power, navigation, and volume controls.

3.2 Indicator Light

The ON Indicator light on the remote illuminates after any active button is pressed. This indicates that the remote is functioning correctly and sending an infrared (IR) signal to your device.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality, clean it periodically with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote's performance degrades or the ON Indicator light no longer illuminates consistently. Refer to Section 2.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none"> Batteries are dead or incorrectly installed. Remote is not pointed at the receiver's IR sensor. Obstruction between remote and receiver. 	<ul style="list-style-type: none"> Replace batteries, ensuring correct polarity. Ensure direct line of sight to the receiver. Remove any obstructions.
Some functions do not work.	<ul style="list-style-type: none"> Function is not supported by this replacement remote. Device model incompatibility for specific functions. 	<ul style="list-style-type: none"> This remote provides most, but not all, original commands. Refer to the product description for known limitations (e.g., page flip, keystone correction, video adjustment, numbers). Verify the specific function is expected to work with this replacement remote.
ON Indicator light does not illuminate.	<ul style="list-style-type: none"> Batteries are low or dead. Internal circuit issue. 	<ul style="list-style-type: none"> Replace batteries. If new batteries do not resolve the issue, contact support.

6. SPECIFICATIONS

- **Brand:** Tekswamp
- **Model Number:** RMC-R2001
- **Compatible Devices:** Insignia RMC-R2001 AM/FM Stereo Receiver (Audio System)
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Item Weight:** 2 ounces (approx. 56.7 grams)
- **Package Dimensions:** 8.39 x 3.46 x 1.14 inches (approx. 21.3 x 8.8 x 2.9 cm)
- **Special Feature:** Universal (for specified models)
- **Max Number of Supported Devices:** 1

7. WARRANTY AND SUPPORT

This replacement remote control is designed to provide reliable operation for the specified Insignia RMC-R2001 AM/FM Stereo Receiver. While no explicit warranty period is detailed in the product information, the remote is guaranteed to perform its core functions as described: turning the device on and off, providing

menu access and navigation, and allowing input signal selection.

For further assistance, technical support, or inquiries regarding specific functionalities, please refer to the [Tekswamp Store on Amazon](#) or contact the seller directly through the Amazon platform.