

## Amkette 540

# Amkette Wi-Key Mini 2 Wireless Keyboard and Mouse Combo User Manual

Model: 540

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Amkette Wi-Key Mini 2 Multi-Device Wireless Keyboard and Mouse Combo. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

## 2. KEY FEATURES

- **Seamless Multi-Device Connectivity:** Connect up to 3 devices (1x USB 2.4GHz + 2x Bluetooth) and switch effortlessly.
- **Silent & Comfortable Typing:** Features tear-drop concave Scissor keys and Huano silent switches for a noise-free experience.
- **Productivity-Boosting Shortcuts:** Dedicated buttons for AI Assistant (Copilot, SIRI, Gemini), Emoji, Screenshots, Calculator, and multimedia keys.
- **Fn Lock Functionality:** Easily switch between Function and Multimedia keys for customized typing.
- **Multi-Device & OS Compatibility:** Works with Windows, macOS, iOS, and Android.
- **High-Precision Mouse:** 4 Level Adjustable DPI up to 3200 (800-1200, 1600, 3200) for smooth and accurate tracking.
- **Energy-Efficient Design:** Long-lasting performance with 2 x AAA batteries for the keyboard and 1 x AA battery for the mouse (included).

## 3. PACKAGE CONTENTS

Please ensure all items are present in the package:

- Amkette Wi-Key Mini 2 Wireless Keyboard
- Amkette Wireless Mouse
- USB 2.4GHz Receiver (typically stored inside the mouse)

- 2 x AAA Batteries (for keyboard)
- 1 x AA Battery (for mouse)
- User Manual (this document)



Image: The Amkette Wi-Key Mini 2 Wireless Keyboard and Mouse Combo, showing both devices.

## 4. SETUP GUIDE

### 4.1. Battery Installation

1. **Keyboard:** Locate the battery compartment on the underside of the keyboard. Insert 2 AAA batteries, ensuring correct polarity (+/-).
2. **Mouse:** Locate the battery compartment on the underside of the mouse. Insert 1 AA battery, ensuring correct polarity (+/-). The USB 2.4GHz receiver is typically stored here.

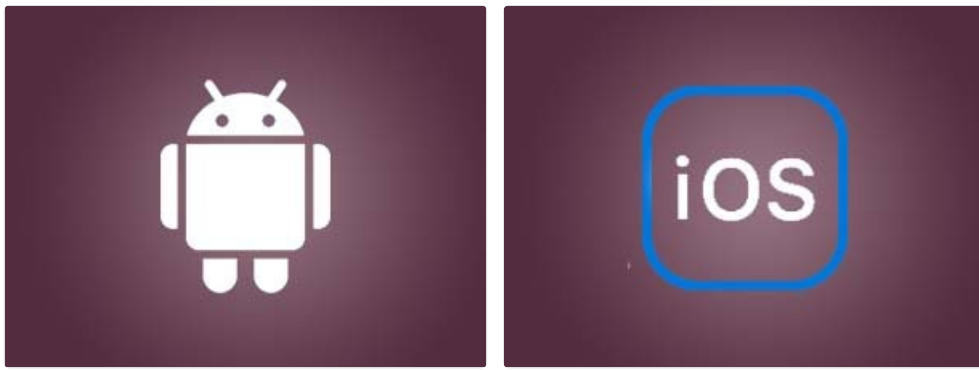


Image: Illustrations showing the AAA batteries for the keyboard and AA battery for the mouse.

## 4.2. Connecting to Devices

The combo supports three connection modes: 2.4GHz USB receiver and two Bluetooth channels (BT1, BT2).

### 4.2.1. 2.4GHz USB Connection (Default)

1. Remove the USB 2.4GHz receiver from the mouse's battery compartment.
2. Plug the USB receiver into an available USB port on your computer or device.
3. The keyboard and mouse should automatically connect. The keyboard's 2.4G indicator light will illuminate briefly.

# Seamless Multi-Device Connectivity

DEVICE SWITCHING  
BUTTONS



**2x BT**  
**2.4G**



Effortlessly connect and toggle between your laptop, tablet, and smartphone with dedicated BT1, BT2, and 2.4G keys. Enjoy smooth, uninterrupted workflow across multiple devices with just one press.

Image: Diagram illustrating the multi-device connectivity options, including 2.4Ghz USB and Bluetooth.

## 4.2.2. Bluetooth Connection (BT1 / BT2)

1. On the keyboard, press the **BT1** or **BT2** key to select the desired Bluetooth channel. The corresponding indicator light will blink rapidly, indicating pairing mode.
2. On your device (e.g., laptop, tablet, smartphone), enable Bluetooth and search for new devices.
3. Select "Amkette Wi-Key Mini 2" from the list of available devices.
4. Follow any on-screen prompts to complete the pairing process. The indicator light on the keyboard will stop blinking once connected.
5. For the mouse, ensure it is powered on. It will automatically attempt to connect to the selected Bluetooth channel on the keyboard.



Image: Close-up of the keyboard highlighting the device switching buttons (BT1, BT2, 2.4G).

## 5. OPERATING INSTRUCTIONS

### 5.1. Device Switching

To switch between connected devices, simply press the corresponding key on the keyboard:

- **2.4G:** Switches to the device connected via the USB receiver.
- **BT1:** Switches to the device connected via Bluetooth Channel 1.
- **BT2:** Switches to the device connected via Bluetooth Channel 2.

### 5.2. Keyboard Functions

The keyboard features dedicated function keys and multimedia shortcuts.

#### Keyboard Function Keys Overview

Key	Function	Description
F1	Mute	Mutes/unmutes audio output.
F2	Volume Down	Decreases audio volume.
F3	Volume Up	Increases audio volume.
F4	Play/Pause	Plays or pauses media playback.
F5	AI Assistant	Launches AI Assistant (Copilot, Siri, Gemini) based on OS.
F6	Screenshot	Captures a screenshot.
F7	Emoji	Opens emoji picker.
F8	Show Desktop	Minimizes all open windows to show desktop.
F9	Lock Screen	Locks the device screen.
Fn Lock	Toggle Fn/Multimedia	Switches between standard F-key functions and multimedia shortcuts.

# One Click Access to your Favourite AI Assistant



Switch between MacOS, Windows, Android, or iOS with a dedicated OS switch keys — and launch the right AI assistant like Copilot, Siri, or Gemini based on your setup.

Image: Close-up of the keyboard showing the dedicated AI Assistant key (F5).



# Quick Action Keys

One-Tap Access to Essential Functions



With specially designed Quick Action Keys for everyday tasks, Instantly access functions like screenshot, emoji picker, show desktop, lock screen, or switch devices with a single press.

Image: Close-up of the keyboard showing various quick action keys like Screenshot, Emoji, and Show Desktop.

# Sleek • Silent • Wireless



DPI 3200

Huano Switches



On/Off Switch

Silent Clicks

Designed For Precision and Ease, The Wireless Mouse Ensures Smooth & Silent Navigation for Everyday Tasks.

Image: Close-up of the keyboard showing the Fn Lock key for toggling function and multimedia keys.

## 5.3. Mouse Functions

- **DPI Adjustment:** The mouse features 4 adjustable DPI levels (800, 1200, 1600, 3200). Press the DPI button (usually located near the scroll wheel) to cycle through the settings.
- **Silent Clicks:** The mouse is designed with Huano silent switches for a quiet user experience.
- **On/Off Switch:** A power switch is located on the underside of the mouse to conserve battery life when not in use.



# Power That Lasts

3 40 PM

2x AAA Battery  
For Keyboard

1x AA Battery  
For Mouse

With just 2 AAA batteries for the keyboard and 1 AA battery for the mouse, enjoy long-lasting, energy-efficient performance—ready when you are.

Image: The Amkette Wi-Key Mini 2 mouse, highlighting its DPI adjustment, silent clicks, and on/off switch.

## 6. MAINTENANCE AND CARE

---

- **Cleaning:** Use a soft, dry cloth to clean the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device.
- **Battery Replacement:** Replace batteries when performance degrades. Ensure correct polarity during installation.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the keyboard or mouse to liquids. While the keyboard features scissor keys, it is not waterproof.

## 7. TROUBLESHOOTING

---

Common Issues and Solutions

Problem	Possible Cause	Solution
Keyboard/Mouse not responding (2.4GHz)	Low battery; USB receiver not properly connected; Interference.	Replace batteries. Re-insert USB receiver. Try a different USB port. Move closer to the receiver.
Keyboard/Mouse not responding (Bluetooth)	Low battery; Not paired; Bluetooth off on device; Interference.	Replace batteries. Ensure Bluetooth is enabled on your device. Re-pair the device. Ensure correct BT channel is selected.
Lag or delayed response	Distance from receiver/device; Interference; Low battery.	Move closer to the receiver/device. Ensure no large metal objects are between the devices. Replace batteries.
Keys not typing correctly (e.g., Alt/Windows key swapped)	OS layout mismatch.	Ensure the correct OS mode is selected on the keyboard (if applicable, check keyboard layout for specific OS keys). Refer to your device's OS settings for keyboard layout adjustments.

8. PRODUCT SPECIFICATIONS

Amkette Wi-Key Mini 2 Specifications

Feature	Detail
Brand	Amkette
Model Number	540
Connectivity Technology	2.4GHz Wireless, Bluetooth (BT1, BT2)
Operating System Compatibility	Windows, macOS, iOS, Android, Linux
Keyboard Key Type	Scissor Keys
Mouse DPI Levels	800, 1200, 1600, 3200
Keyboard Batteries	2 x AAA (included)
Mouse Batteries	1 x AA (included)
Product Dimensions (Keyboard)	28.5 x 11.7 x 1.7 cm
Item Weight	260 g
Colour	Grey

9. WARRANTY AND SUPPORT

The Amkette Wi-Key Mini 2 Multi-Device Wireless Keyboard and Mouse Combo comes with a **1 Year Warranty** from the date of purchase.

For technical support, warranty claims, or any other inquiries, please contact Amkette customer service through their official website or the contact information provided with your purchase documentation.  
Manufacturer: Allied Electronics And Magnetics Private Limited, C-64/4, Okhla Phase - 2, New Delhi - 110020



Image: Icons representing 1 Year Warranty and Top Brand status.

Related Documents - 540

	<p><a href="#">Amkette Primus NXT Wireless Keyboard and Mouse Combo Quick Start Guide</a></p> <p>Quick start guide for the Amkette Primus NXT Wireless Keyboard and Mouse Combo, covering setup, features, troubleshooting, and technical specifications.</p>
	<p><a href="#">AMKETTE Hush Pro ASTRA Wireless Mouse - Quick Start Guide</a></p> <p>Get started with your AMKETTE Hush Pro ASTRA Wireless Mouse. This guide covers setup, features like power saving and DPI adjustment, specifications, and warranty information.</p>
	<p><a href="#">Waterway Renegade Gunit Skimmer Operating and Installation Guide</a></p> <p>Comprehensive guide for operating, installing, and maintaining Waterway Renegade Gunit Skimmers, including parts lists, dimensions, and troubleshooting tips.</p>
	<p><a href="#">Waterway Renegade In-Ground Vinyl Liner Skimmer Installation and Operating Instructions</a></p> <p>Comprehensive guide for installing and operating the Waterway Renegade In-Ground Vinyl Liner Skimmer, covering standard and wide mouth models, mounting options, operational features, winterizing, troubleshooting, and replacement parts.</p>
	<p><a href="#">EvoFox Elite X2 Pro Wireless Gamepad Quick Start Guide</a></p> <p>This guide provides instructions for setting up and using the EvoFox Elite X2 Pro Wireless Gamepad, including charging, Bluetooth and USB connectivity, button functions, and advanced features like macros and vibration control.</p>
	<p><a href="#">Amkette EvoFox One S Universal Wireless Gamepad Quick Start Guide</a></p> <p>A comprehensive guide to setting up and using the Amkette EvoFox One S Universal Wireless Gamepad, covering features like macros, turbo settings, vibration levels, and connectivity modes for various platforms including PC, PS3, PS4, Switch, Android, and iOS.</p>

no relevant documents