

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD Bohemian Style Wooden Dollhouse Instruction Manual \(Model: ROD-WDH18\)](#)

ROBUD ROD-WDH18

ROBUD Bohemian Style Wooden Dollhouse

MODEL: ROD-WDH18

Brand: ROBUD

1. Important Safety Information

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **WARNING:** Not suitable for children under 3 years due to small parts. Choking hazard.
- To be used under direct adult supervision.
- Ensure all parts are securely fastened during assembly to prevent injury.
- Regularly inspect the dollhouse for any loose or damaged parts. Discontinue use if damage is found.
- Keep away from fire and heat sources.

2. Product Overview

The ROBUD Bohemian Style Wooden Dollhouse (Model ROD-WDH18) offers a multi-level play experience with various rooms and miniature furniture. Designed to encourage imaginative play, this dollhouse provides a detailed and engaging environment for children aged 3 and above.



Image 2.1: Fully assembled ROBUD Bohemian Style Wooden Dollhouse.

3. Package Contents

Before beginning assembly, please verify that all components listed below are present and undamaged. Refer to the diagram for visual identification of the included furniture pieces.



PRODUCT SIZE



Image 3.1: Overview of the 37 included doll furniture pieces.

The package includes:

- Wooden dollhouse panels and structural components.
- A set of 37 miniature furniture pieces for various rooms (bedroom, living room, kitchen, bathroom).
- Assembly hardware (screws, connectors, etc.).
- Instruction manual (this document).

If any parts are missing or damaged, please contact customer support.

4. Setup and Assembly Instructions

The ROBUD Dollhouse requires adult assembly. Please follow these general steps. A detailed diagrammatic instruction sheet is included in the package for specific part identification and connection points.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface. Identify each panel and piece of furniture.
2. **Assemble Base Structure:** Begin by connecting the base panel to the side walls according to the included diagrams. Ensure all connections are firm.
3. **Build Floors and Walls:** Progress upwards, attaching floor panels and interior walls for each level. Pay attention to the orientation of each piece as indicated in the specific assembly guide.
4. **Install Roof and Balcony:** Secure the roof panels and any external features like the balcony or awning.
5. **Place Furniture:** Once the main structure is complete and stable, arrange the miniature furniture within the rooms as desired.
6. **Final Check:** Before allowing children to play, ensure all screws are tightened and the entire structure is stable and secure.

Assembly typically takes approximately 50 minutes. Adult assistance is recommended throughout the process.

5. Operating Instructions (Play Guide)

The ROBUD Dollhouse is designed for imaginative play. Children can create various scenarios and stories using the different rooms and furniture pieces.

37
pcs

EXQUISITE DOLL FURNITURE

Simulation Design



Image 5.1: Overview of the dollhouse rooms and features.

- **Room Exploration:** Encourage children to explore the different areas: bedroom, living room, kitchen, and bathroom.
- **Furniture Arrangement:** The furniture can be rearranged to suit different play scenarios, fostering creativity.
- **Storytelling:** Use dolls or small figures (not included, except for a small wooden dog) to act out daily routines, special events, or fantasy adventures.
- **Interactive Features:** Utilize features like the balcony or awning for extended play possibilities.

Always supervise children during play, especially with smaller accessories.

6. Maintenance and Care

Proper care will ensure the longevity of your ROBUD Dollhouse.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Drying:** Ensure the dollhouse is completely dry after cleaning to prevent warping or damage to the wood.
- **Storage:** Store the dollhouse in a dry environment, away from direct sunlight or extreme temperature changes.
- **Inspection:** Periodically check all joints and connections for tightness. Re-tighten screws if necessary.

7. Troubleshooting

If you encounter any issues with your dollhouse, please refer to the following common solutions:

- **Instability:** If the dollhouse feels wobbly, check all assembly points. Ensure screws are fully tightened and panels are correctly aligned.
- **Missing Parts:** If you find any parts missing upon unboxing, compare with the package contents list and contact customer support with the specific part number or description.
- **Damaged Parts:** If any part is damaged during shipping or assembly, do not attempt to force it. Contact customer support for a replacement.

8. Specifications

Detailed specifications for the ROBUD Bohemian Style Wooden Dollhouse, Model ROD-WDH18.

DOLLHOUSE PLAY



Image 8.1: Product dimensions of the ROBUD Dollhouse.

Feature	Detail
Brand	ROBUD
Model Number	ROD-WDH18
Product Dimensions (L x W x H)	62.7 x 29.7 x 66 cm
Weight	8.47 kg
Main Material	Wood
Color	Wood/Brown

Style	Classic, Bohemian
Theme	Fantasy
Manufacturer Recommended Age	3 years and up (36 months minimum)
Assembly Required	Yes
Batteries Required	No

9. Warranty and Support Information

ROBUD stands behind the quality of its products. For specific warranty details, please refer to the warranty card included in your product packaging or visit the official ROBUD website.

For customer support, including inquiries about missing parts, assembly assistance, or product issues, please contact:

- **Email:** support@robud.com (Example)
- **Website:** www.robud.com (Example)

Please have your model number (ROD-WDH18) and purchase date ready when contacting support.