

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PHENSEN](#) /

› [PHENSEN 4-in-1 Turbo Handheld Fan User Manual](#)

## PHENSEN F15

# PHENSEN 4-in-1 Turbo Handheld Fan

USER MANUAL - MODEL F15

## Introduction

---

Thank you for choosing the PHENSEN 4-in-1 Turbo Handheld Fan. This versatile and powerful fan is designed to provide optimal cooling in various scenarios, from intense workouts to quiet office work. With its 100-speed precision control, long-lasting battery, and ultra-portable design, it's your perfect companion for staying cool. Please read this manual carefully to ensure proper use and maintenance of your device.



The PHENSEN 4-in-1 Turbo Handheld Fan, showcasing its compact and versatile design in pink.

## Product Features

- **4-in-1 Turbo Cooling:** Features a 7-blade turbo fan (10,000 RPM) for 3X more airflow than standard fans. Functions as a neck fan, desk fan, or handheld cooler with a 160° adjustable head.
- **100-Speed Precision Control:** Offers 100 adjustable speed levels with quick presets (1/20/40/60/80/100) and fine-tuning capability. Operates quietly at under 30dB.
- **5000mAh Long-Lasting Battery:** Provides up to 15 hours of continuous cooling on a single charge. Supports USB-C fast charging from various sources.
- **Ultra-Portable Design:** Weighs only 197g (0.43 lbs), foldable, and includes a metal carabiner clip for easy attachment to bags, belts, or tents.
- **Smart LED Display:** Shows real-time wind speed and battery percentage for easy monitoring.

# 7-Blade Turbo Design & Brushless Motor

2X Airflow of Traditional Fans



Turbo Handheld Fan

Maximum Speed up to **10,000 RPM**



General Fan

Maximum Speed up to **5,000 RPM**

The fan's advanced 7-blade turbo design and brushless motor deliver superior airflow.

## 5,000mAh High-Capacity Battery







Visual LED Screen for Easy Monitoring Check speed levels and remaining battery at a glance



Equipped with a 5000mAh battery for extended use and an LED screen for battery monitoring.

# 6 PRESET WIND MODES

Meeting your various wind power needs in any scene

	<b>2m/s</b>
Sleep Mode (01)	<b>15h</b>
	<b>4m/s</b>
Eco Mode (20)	<b>7h</b>
	<b>6m/s</b>
Balance Mode(40)	<b>6h</b>
	<b>8m/s</b>
Turbo Mode (60)	<b>5h</b>
	<b>10m/s</b>
Storm Mode(80)	<b>4h</b>
	<b>12m/s</b>
Xtreme Mode (100)	<b>3h</b>



Choose from 6 preset wind modes to suit various cooling needs.

## Package Contents

Please check the box for the following items:

- PHENSEN 4-in-1 Turbo Handheld Fan
- Adjustable Strap
- USB-C Charging Cable
- User Manual

## Setup

1. **Initial Charge:** The product is not fully charged at purchase. For optimal performance and battery longevity, fully charge the fan before its first use. Connect the provided USB-C cable to the fan's

charging port and a compatible power source (wall charger, power bank, laptop, or car charger). The LED display will show charging progress.

2. **Attach Strap/Carabiner:** If desired, attach the adjustable strap or use the integrated metal carabiner clip for hands-free carrying or securing the fan.

## Operating Instructions

1. **Power On/Off:** Locate the power switch on the side of the fan. Press and hold the power switch to turn the fan on or off.
2. **Adjusting Speed:**
  - **Quick Presets:** Tap the power switch to cycle through preset speed levels (1, 20, 40, 60, 80, 100).
  - **Fine-Tune Control:** Press and hold the power switch to continuously adjust the speed between 1 and 100. Release when the desired speed is reached.
3. **Adjusting Head Angle:** The fan head can be adjusted up to 160° to direct airflow precisely where needed. Gently pivot the fan head to your preferred angle.
4. **Digital Display:** The integrated LED display shows the current wind speed (01-100) and the remaining battery percentage.

## Product Maintenance

### Initial Use:

The product is not fully charged at purchase. Please charge it completely before first use.

### Long-Term Storage:

If not using the product for extended periods, recharge it at least once a month to prevent battery damage from over-discharge.

**Note:** Remove protective film before use for maximum wind power.

Issue	Possible Cause	Solution
Weak airflow	Blocked rear intake	Ensure the intake is unobstructed
Slow charging	Low-output adapter	Use a 5V/2A or higher adapter
Loud noise	Unstable placement (desk use)	Place on a flat, stable surface
Debris	Foreign objects in the Fan blades	Inspect the fanblades for any foreign objects and remove all

Key controls and display features of the PHENSEN fan.



The digital display provides real-time information on fan settings and battery status.



The fan head can be adjusted up to 160 degrees for flexible cooling.

## Charging

---

The PHENSEN fan is equipped with a 5000mAh battery, providing extended usage. A full charge takes approximately 3 hours and can deliver up to 15 hours of continuous use, depending on the speed setting.

- Connect the fan to any standard USB-C power source.
- Compatible charging methods include: wall chargers, power banks, laptops, and car chargers.
- The LED display will indicate charging status and battery percentage.

# Support Multiple Charging Methods

Full charged in 3 hours



Wall Charger



Power Bank



Laptop



Car Charger

The fan supports multiple convenient USB-C charging methods.

## Maintenance

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior. For the fan blades, use a soft brush or compressed air to gently remove dust and debris. Do not use harsh chemicals or abrasive materials.
- **Long-Term Storage:** If not using the product for extended periods, recharge it at least once a month to prevent battery damage from over-discharge. Store in a cool, dry place away from direct sunlight.
- **Protective Film:** Remember to remove any protective film from the fan's display or body before first use for maximum wind power and clear visibility.



### Smart LED Display

Shows mode and battery instantly



Refer to this table for common maintenance tips and solutions.

## Troubleshooting

If you encounter any issues with your PHENSEN fan, please refer to the table below for common problems and their solutions:

Issue	Possible Cause	Solution
Weak airflow	Blocked rear intake	Ensure the intake is unobstructed.
Slow charging	Low-output adapter	Use a 5V/2A or higher adapter.
Loud noise	Unstable placement (desk use)	Place on a flat, stable surface.
Debris	Foreign objects in the fan blades	Inspect the fan blades for any foreign objects and remove all.

If the issue persists after trying these solutions, please contact customer support.

## Specifications

Feature	Detail
Brand	PHENSEN
Model Name	F15
Color	Pink

Feature	Detail
Power Source	Battery Powered
Battery Capacity	5000mAh
Max Runtime	Up to 15 Hours
Charge Time	Approx. 3 Hours
Product Dimensions	1.97"D x 2.44"W x 7.87"H
Item Weight	1.13 ounces (197g / 0.43 lbs)
Special Features	Portable, LED Light, Lightweight, Vortex Action, Foldable, 160° Adjustable Head
UPC	743456322936

## Warranty & Support

Your PHENSEN 4-in-1 Turbo Handheld Fan comes with a **1-Year Warranty**, ensuring free replacement for any manufacturing defects.

PHENSEN is committed to providing excellent customer service. We offer:

- Lifetime Technical Support
- 365 Days Replacement Service
- 12 Hours Fast Response to inquiries

For any questions, concerns, or support needs, please contact our customer service team via the contact information provided on the product packaging or our official website.



PHENSEN offers a 1-year warranty and dedicated customer support.

