

[Manuals.plus](#) /

> [Voltas Beko](#) /

> Voltas Beko 8 kg 5 Star Fully-Automatic Top Loading Washing Machine (WTL8006UEA / OBS1060) User Manual

## Voltas Beko WTL8006UEA / OBS1060

# Voltas Beko 8 kg 5 Star Fully-Automatic Top Loading Washing Machine

Model: WTL8006UEA / OBS1060

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Voltas Beko 8 kg 5 Star Fully-Automatic Top Loading Washing Machine, model WTL8006UEA / OBS1060. Please read these instructions carefully before using the appliance and retain them for future reference.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not open the lid during the spin cycle.

## 3. PRODUCT OVERVIEW

Your Voltas Beko washing machine is designed for efficient and convenient laundry care. Key features include:

- **8 kg Capacity:** Suitable for large family loads.
- **5 Star Energy Rating:** Ensures best-in-class energy efficiency.
- **Double Waterfall Technology:** Enhances detergent mixing for better wash quality.
- **PureStream Pulsator:** Designed to remove tough stains effectively.
- **Stainless Steel Gentle Wave Drum:** Provides a thorough yet gentle wash.
- **Soft Closing Lid:** For safe, smooth, and silent operation.

- **Magic Filter:** Efficiently collects lint, threads, and buttons.
- **Ideal Zero-Pressure Technology:** Operates efficiently even with low water pressure (0.03MPa).
- **Child Lock:** Prevents accidental program changes.



A TATA Product

# Reasons to Buy



**Ideal Zero-Pressure Technology\***  
Experience powerful wash performance with near-zero water pressure (0.03MPa)



**PureStream Pulsator**  
Removes tough stains easily using special pulsator technology.



**Soft Closing Lid**  
Safe, smooth and silent lid operation



**Rear Control Panel**  
It offers convenience, durability and splash resistance



**Double Waterfall**  
Enables effective mixing of detergent.



**10 Wash Programs**  
Customized settings for different fabric types and laundry needs

## Capacity: 8 kg

\*T&C apply.

## 5 Year Motor Warranty

Figure 3.1: Front view of the Voltas Beko 8 kg Fully-Automatic Top Loading Washing Machine.

**VOLTAS**  
**beko**

A TATA Product

Powerful cleaning that's  
**smarter, faster, and efficient!**



Figure 3.2: Voltas Beko Washing Machine highlighting the Jumbo Drum and IPX4 Waterproof Rear Control Panel.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

### 4.1 Unpacking

Carefully remove all packaging materials. Check for any damage during transit. The package includes the washing machine, 2-inlet hoses, 1-drain hose, and a rat mesh.

### 4.2 Location

- Place the machine on a firm, level surface.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.

### 4.3 Leveling

Use the adjustable feet to ensure the machine is perfectly level. This prevents excessive vibration and noise during operation. The machine features Auto Balance Detection to assist in proper leveling.



*Figure 4.1: Auto Balance Detection helps in leveling the machine properly.*

#### **4.4 Water Connection**

- Connect the inlet hoses to the water supply taps (hot and cold, if applicable) and to the corresponding inlets on the machine.
- Ensure connections are tight to prevent leaks.
- The machine is designed with Ideal Zero-Pressure Technology, allowing efficient operation even with low water flow (0.03MPa).



*Figure 4.2: Ideal Zero Pressure Technology ensures efficient washing even with low water pressure.*

#### **4.5 Drain Hose Installation**

Securely attach the drain hose to a suitable drain pipe or sink, ensuring it is not kinked or blocked.

#### **4.6 Rat Mesh Installation**

Install the provided rat mesh at the bottom of the machine to protect it from rodents.

**VOLTAS**  
**beko**

A TATA Product

**Auto  
Balance  
Detection**  
Helps in levelling the  
machine properly.



Figure 4.3: Rear view of the washing machine with the rat mesh installed for protection against rodents.

## 5. OPERATING INSTRUCTIONS

Follow these steps for a typical wash cycle:

### 5.1 Loading Laundry

- Sort clothes by fabric type, color, and soil level.
- Open the soft closing lid and load clothes loosely into the drum. Do not overload.



Figure 5.1: The soft closing lid ensures gentle and silent operation.

### 5.2 Adding Detergent and Softener

Use the dedicated detergent and softener drawers for precise dispensing.



Figure 5.2: Detergent and softener drawers for easy and precise addition of laundry agents. Also shows the Dual Magic Filter and Stainless Steel Drum.

### 5.3 Selecting a Wash Program

Refer to the control panel and the Wash Programs section for details on selecting the appropriate cycle.



Figure 5.3: The rear control panel features a Red LED Digital Display and options for 10 wash programs.

### 5.4 Starting the Wash

- Press the Power button to turn on the machine.
- Select your desired wash program.
- Adjust additional settings like water level (4 levels available) or delay wash (up to 24 hours) if needed.
- Press the Start/Pause button to begin the cycle.

### 5.5 Child Lock Function

To activate the Child Lock, press and hold the designated buttons (refer to your control panel for specific button combination, usually a combination of two buttons) for a few seconds until the indicator lights up. This prevents children from accidentally changing settings or opening the lid during operation.

## 6. WASH PROGRAMS

Your washing machine offers 10 specialized wash programs:

- **Auto:** General purpose wash for mixed loads.
- **Tub Clean:** For cleaning the washing machine drum.
- **Air-Dry / Spin:** For drying clothes using air circulation and high-speed spin.
- **Synthetics:** Gentle wash for synthetic fabrics.
- **Cotton 30'c:** Standard wash for cotton items at 30 degrees Celsius.
- **Heavy Wash:** For heavily soiled items.
- **Jeans/Deep Clean:** Optimized for denim and deep cleaning.
- **Baby Wear:** Gentle and hygienic wash for baby clothes.
- **Quick Wash:** For lightly soiled items requiring a fast cycle.
- **Delicate/Saree:** Extra gentle wash for delicate garments and sarees.



Figure 6.1: The Air Dry function helps dry clothes in under 30 minutes.

## 7. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your washing machine.

### 7.1 Cleaning the Magic Filter

The Magic Filter collects lint and debris during the wash cycle. Clean it regularly to maintain wash performance.

1. Open the filter cover.
2. Remove the filter and rinse it under running water.

3. Reinsert the clean filter and close the cover securely.



Figure 7.1: The Magic Filter efficiently collects threads, lint, and buttons from the water.

## 7.2 Tub Cleaning

Use the dedicated "Tub Clean" program periodically to clean the inner drum and prevent odor buildup.

## 7.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners.

## 7.4 Detergent and Softener Drawer Cleaning

Remove and clean the detergent and softener drawers regularly to prevent residue buildup.

## 8. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, lid not closed, power outage.	Check power connection, ensure lid is fully closed, check household power.
No water filling	Water taps closed, inlet hoses kinked, water pressure too low.	Open water taps, straighten hoses, check water supply pressure.
Excessive vibration/noise	Machine not level, load unbalanced.	Adjust leveling feet, redistribute laundry evenly in the drum.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check and clear drain hose, clean drain pump filter (if accessible).
Poor wash results	Overloading, incorrect detergent amount, Magic Filter clogged.	Reduce load size, use correct detergent, clean Magic Filter.

## 9. SPECIFICATIONS

Feature	Detail
Model Name	WTL8006UEA / OBS1060
Capacity	8 Kilograms
Energy Rating	5 Star
Product Dimensions (D x W x H)	62D x 60.5W x 104H Centimeters
Item Weight	39500 Grams
Voltage	230 Volts
Spin Speed	700 RPM

Feature	Detail
Drum Material	Stainless Steel
Access Location	Top Load
Control Type	Push Button
Included Components	Washing machine, 2-inlet hose, 1-drain hose, Rat mesh



Figure 9.1: Product dimensions and energy efficiency guide for the Voltas Beko washing machine.

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information

Your Voltas Beko washing machine comes with a manufacturer's warranty:

- **1 Year** on the product.

- **5 Years** on the motor.

*\*Terms and Conditions apply. Please retain your Amazon invoice to avail warranty services.*

## **10.2 Customer Support**

For any queries, assistance, or to schedule a service, please contact Voltas Beko customer support:

- **Telephone/WhatsApp:** [9818994444](tel:9818994444) / [18605994444](tel:18605994444)
- **Email:** [wecare@voltasbeko.com](mailto:wecare@voltasbeko.com)

When contacting support, please provide the product's model name (WTL8006UEA / OBS1060) and details from your purchase invoice.