

SKMEI 2427

SKMEI Digital Sports Watch Model 2427 User Manual

Model: 2427

1. INTRODUCTION

Thank you for choosing the SKMEI Digital Sports Watch Model 2427. This watch is designed for active individuals, featuring a durable construction and multiple functions including time display, stopwatch, countdown timer, alarm, and EL backlight. Please read this manual carefully to understand the watch's operation and ensure proper use and maintenance.

Key Features

Display
Digital

Dial Shape
Round

Features
Reset Time

Strap Material
Silica Gel

Water Resistance
50 m



Figure 1: Front view of the SKMEI Digital Sports Watch Model 2427, highlighting the digital display and control buttons.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Digital Display:** Clear and easy-to-read time, date, and function information.
- **50M Water Resistance:** Suitable for swimming, handwashing, and rain. Not recommended for hot water activities or diving.
- **Multi-Functionality:** Includes 12/24-hour time format, stopwatch, countdown timer, alarm, date, and week display.
- **EL Backlight:** Electro-Luminescent backlight for visibility in low-light conditions.
- **Durable Construction:** High-strength ABS case, glass crystal display, and soft silicone band.

2.2 Watch Components

The watch features four primary buttons for navigation and function control:

- **LIGHT Button:** Activates the EL backlight.
- **MODE Button:** Cycles through different modes (Time, Stopwatch, Alarm, Countdown).
- **RESET Button:** Used for resetting values or confirming settings.

- **START Button:** Used for starting/stopping functions or adjusting values.



Figure 2: Rear view of the watch, indicating the model number (2427) and 50M water resistance.

3. SETUP

3.1 Initial Power On

The watch comes with a pre-installed battery. If the display is blank, press any button to activate it. If it remains blank, the battery may need replacement (refer to Maintenance section).

3.2 Setting Time and Date

1. From the Time Display mode, press the **MODE** button three times to enter Time Setting mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value. Hold **START** to increase values rapidly.
4. To switch between 12-hour and 24-hour format, adjust the hour while in Time Setting mode. The 'A' (AM) or 'P' (PM) indicator will appear for 12-hour format.
5. Once all settings are correct, press the **MODE** button to exit Time Setting mode and return to the

normal time display.



Figure 3: The watch display in normal time mode, showing hours, minutes, seconds, and day of the week.

4. OPERATING INSTRUCTIONS

4.1 Mode Switching

Press the **MODE** button to cycle through the following functions:

- Time Display → Stopwatch → Alarm → Countdown Timer → Time Display

4.2 Using the Stopwatch

1. From Time Display mode, press **MODE** once to enter Stopwatch mode. The display will show '00:00:00'.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to '00:00:00'.
5. To resume timing after pausing, press **START**.

4.3 Setting and Using the Alarm

1. From Time Display mode, press **MODE** twice to enter Alarm mode. The alarm time will be displayed.
2. Press **RESET** to select the hour or minute to set. The selected digit will flash.
3. Use the **START** button to adjust the flashing value.
4. Press **MODE** to exit Alarm setting.
5. To turn the alarm ON/OFF, press **START** while in Alarm mode (without any digits flashing). An alarm icon will appear/disappear.

4.4 Using the Countdown Timer

1. From Time Display mode, press **MODE** three times to enter Countdown Timer mode.
2. Press **RESET** to select the hour or minute to set. The selected digit will flash.
3. Use the **START** button to adjust the flashing value.
4. Press **MODE** to exit Countdown Timer setting.
5. Press **START** to begin the countdown.
6. Press **START** again to pause the countdown.
7. Press **RESET** to reset the countdown to the set time.

4.5 Activating the EL Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds.

5. MAINTENANCE

5.1 Cleaning

Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the case or strap.

5.2 Water Resistance

The watch is 50M water-resistant. This means it can withstand splashes, rain, and brief immersion in water, such as during swimming. Do not press buttons underwater. Avoid exposure to hot water, steam, or extreme temperature changes, as this can compromise the water seals.

5.3 Battery Replacement

When the display becomes dim or functions irregularly, the battery may need replacement. This watch uses 1 C battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

6. TROUBLESHOOTING

- **Display is blank:** Check battery. If new, ensure it's correctly installed. If old, replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). Try pressing the buttons firmly. If issues persist, a battery reset might be needed (remove and reinsert battery).
- **Water inside the watch:** Immediately take the watch to a service center. Do not attempt to dry it yourself, as this can cause further damage.
- **Time is incorrect:** Refer to section 3.2 for setting the time and date.

7. SPECIFICATIONS

Feature	Specification
Model Number	2427
Display Type	Digital
Movement Type	Quartz
Water Resistance Depth	50 Metres
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Crystal Material	Glass
Band Material	Silica Gel
Case Diameter	34.7 mm
Case Thickness	10.8 mm
Band Width	16 mm
Band Length	225 mm
Item Weight	29.2 g
Battery Type	1 C battery (included)



 <p>Case Width 34.7MM</p>	 <p>Strap Material Silica Gel</p>	 <p>Case Thickness 10.8MM</p>
---	---	---

Figure 4: Dimensional diagram of the watch, illustrating case height, width, strap width, and case thickness.

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

This SKMEI watch comes with a **9-month Manufacturer Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any service-related inquiries, feedback, or technical assistance, please contact the SKMEI India Helpline:

- **Helpline Number:** 1800-889-6251
- **Operating Hours:** Monday to Saturday, 9:00 AM to 6:00 PM (IST)