

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [URBAN](#) /

› [URBAN UR476Y Double Security Bike Lock Instruction Manual](#)

## URBAN UR476Y

# URBAN UR476Y Double Security Bike Lock Instruction Manual

Model: UR476Y

## INTRODUCTION

---

Thank you for choosing the URBAN UR476Y Double Security Bike Lock. This high-security folding lock is designed to provide maximum protection for your bicycle or electric scooter with its robust construction and integrated 120dB smart alarm system. This manual provides essential information for the proper setup, operation, and maintenance of your lock to ensure its optimal performance and longevity.

## PACKAGE CONTENTS

---

Before proceeding with installation, please verify that all components are present:

- URBAN UR476Y Folding Bike Lock with Alarm
- CR2 Battery (pre-installed or separate)
- Carrying Holder
- 3 Keys
- 2 Screws
- 2 Adjustable Cable Ties
- 2 Non-Slip Straps
- Allen Key



Figure 1: All included components.

## SETUP AND INSTALLATION

### 1. Battery Installation

The URBAN UR476Y lock requires one CR2 battery for the alarm function. The battery may be pre-installed. If not, or if replacement is needed:

1. Locate the battery compartment on the alarm module.
2. Use a small screwdriver to open the compartment.
3. Insert the CR2 battery, ensuring correct polarity.
4. Close the compartment securely.



Figure 2: Alarm module and battery compartment.

## 2. Mounting the Carrying Holder

The included carrying holder allows for convenient transport of the lock on your bicycle or electric scooter frame. The holder features a side-opening design for easier access and to prevent frame damage.

1. **Choose Location:** Select a suitable location on your bike or scooter frame. Ensure it does not interfere with pedaling or other components.
2. **Attachment Options:**
  - **Using Screws:** If your frame has mounting points (e.g., water bottle cage mounts), use the provided screws to attach the holder.
  - **Using Straps/Cable Ties:** For frames without mounting points, use the adjustable cable ties or non-slip straps to secure the holder firmly. Ensure a tight fit to prevent movement during travel.
3. **Insert Lock:** Once the holder is securely mounted, insert the folded lock into the holder from the side. The side-opening design facilitates easy insertion and removal.

# INSEPARABLE IN YOUR DAILY LIFE



Figure 3: Mounting options for the carrying holder.

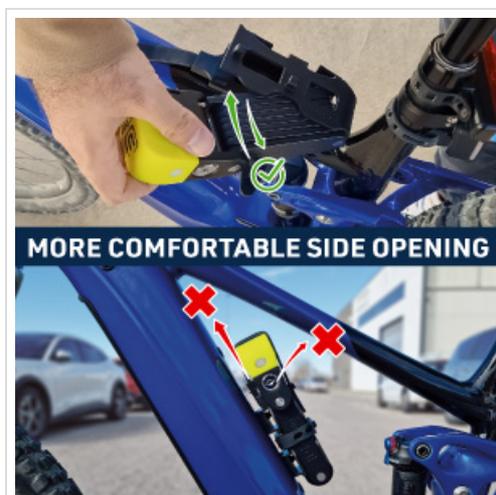


Figure 4: Side opening for convenient lock insertion.

## OPERATING INSTRUCTIONS

### 1. Locking the Device

The URBAN UR476Y features a "Sek Click Locking" mechanism, allowing you to lock it without needing the key immediately.

1. Unfold the lock to its full length (90cm / 35.4in).
2. Wrap the lock around your bicycle or scooter frame and a fixed object (e.g., a bike rack, pole).
3. Align the locking mechanism and push the folding bars together until you hear a "click." The lock is now secured.

**ON/OFF**  
**ALARM** 120db  
**+WARNING**

**+VISIBLE**  
**+DETERRENT**

**MADE IN EU**

**SECURITY**  
**16**

**PATENTED**

**NEXT-LEVEL SMART SECURITY**

Figure 5: Lock in use on a bicycle.



Figure 6: Lock in use on an electric scooter.

## 2. Activating the Smart Alarm

The integrated smart alarm provides an additional layer of security with a 120dB siren and LED alerts.

1. After locking the device, press the alarm activation button located on the lock body.
2. A short beep and an LED flash will confirm that the alarm is armed.
3. The alarm system is sensitive and designed for early detection. It will first emit a warning sound upon minor disturbance.
4. If the disturbance continues, the full 120dB alarm will activate, accompanied by LED alerts.

# Without or with alarm, you choose !!



Earlier detection  
Faster reaction



Optional activation



The most  
powerful alarm



Quicker to lock  
No need of key

## DOUBLE SECURITY: LOCK + ALARM

Figure 7: Alarm features and activation button.

### 3. Unlocking the Device

To unlock the URBAN UR476Y:

1. Insert one of the provided keys into the keyhole.
2. Turn the key to disengage the locking mechanism.
3. The alarm will automatically disarm when the lock is opened with the key.
4. Remove the lock from your vehicle and fold it for storage.



Figure 8: Unlocking with keys.

## MAINTENANCE

---

### 1. General Care

- Keep the lock clean from dirt and debris. Wipe it with a damp cloth as needed.
- Avoid using harsh chemicals or abrasive cleaners, which can damage the plastic coating and internal mechanisms.
- The lock features a silent 360° rotation mechanism and a soft protector to prevent noise and paint damage. Ensure these components remain free of obstructions.

# SILENT MOVEMENT MECHANISM

Exclusive design allows links to rotate smoothly around the axis, without jamming or squeaking, stopping moving parts from shaking and ensuring a quiet clean ride.

360°



SOFT PROTECTOR

**Prevents** the metal of the lock from **damaging the paint** of your vehicle, keeping it in perfect condition.

# HARDENED STEEL LINKS

Figure 9: Silent movement mechanism and soft protector.

## 2. Battery Replacement

If the alarm's sound weakens or fails to activate, it may be time to replace the CR2 battery. Follow the steps outlined in the "Battery Installation" section under Setup.

## 3. Key Care

- Keep your keys safe and consider storing a spare in a secure location.
- Avoid forcing the key if it feels stiff; apply a small amount of graphite lubricant to the keyhole if necessary.

## TROUBLESHOOTING

### • Alarm Not Activating:

- Check if the CR2 battery is correctly installed and has sufficient charge. Replace if necessary.

- Ensure the alarm activation button is pressed firmly after locking.

- **Alarm Too Sensitive/False Alarms:**

- Ensure the lock is securely attached to your vehicle and a stable object to minimize accidental movement.
- Avoid placing the lock in areas prone to strong vibrations or wind.

- **Lock Mechanism Stiff:**

- Apply a small amount of graphite lubricant to the keyhole and moving parts of the folding mechanism.
- Ensure no dirt or debris is obstructing the mechanism.

## SPECIFICATIONS

---

Feature	Detail
Model Name	UR476Y
Lock Type	Folding Lock, Pin Tumbler
Material	Alloy Steel (8 pieces of 6mm thick steel)
Length	90 cm (35.4 inches)
Alarm Decibel	120 dB
Battery Type	1 x CR2 (included)
Item Weight	1.16 kg (2.55 pounds)
Product Dimensions	8.27 x 2.36 x 2.6 inches (folded)
Special Features	Smart Alarm, LED Alert, Warning Function, Silent Movement Mechanism, Soft Protector, Waterproof

## WARRANTY AND SUPPORT

---

URBAN is a recognized European manufacturer of high-security vehicle locks. While specific warranty details are not provided in this manual, URBAN is committed to assisting its customers. For any questions, support, or warranty inquiries, please refer to the contact information provided with your purchase or visit the official URBAN Security website.

*URBAN SECURITY: "Enjoy Moving. Feel Safe."*