

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DOITOOOL](#) /

› [DOITOOOL Air Fryer Knob Replacement Instruction Manual](#)

## DOITOOOL L002EQL351QA20HH

# DOITOOOL Air Fryer Knob Replacement Instruction Manual

Model: L002EQL351QA20HH

## PRODUCT OVERVIEW

---

The DOITOOOL Air Fryer Knob Replacement set provides durable and precise control for various kitchen appliances. These D-shaft knobs are designed for easy installation and offer enhanced grip for reliable operation.

- **D Shaft Knobs:** Specifically designed for air fryer timer knob replacement, featuring a D-shaped shaft interface for secure installation and firm grip. Ensure your appliance has a D-shaft configuration.
- **Excellent Material:** Crafted from sturdy ABS plastic, these knobs withstand continuous heat exposure up to 450°F, ideal for oven/air fryer timer applications, ensuring durability through repeated high-temperature cooking cycles.
- **Enhanced Control:** Regain full control over your appliance with an ergonomic design and smooth rotation for precise temperature and time adjustments.
- **Non-Slip Tactile Design:** Features a 1.2-inch diameter anti-slip surface with a 0.9-inch ergonomic height. Oil-resistant grooves maintain precise control even with greasy fingers, replacing sticky or slippery original knobs.
- **Universal Compatibility:** Compatible with various air fryer, pressure cooker, and oven timer switch models.



Image: A set of four DOITool D-shaft replacement knobs, featuring a black body and a circular silver-colored top with a textured pattern.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	1.18 x 1.18 x 1.73 inches
Item Weight	0.8 ounces
Manufacturer	DOITool
Item Model Number	L002EQL351QA20HH
Material	ABS Plastic
Shaft Type	D-Shaft



Image: A side profile of a single black replacement knob, showing its dimensions: 3cm (1.18in) diameter and 2.2cm (0.86in) height.

## INSTALLATION GUIDE

---

1. **Verify Compatibility:** Before installation, confirm that your appliance's control shaft is D-shaped. These knobs are specifically designed for D-shaft configurations.
2. **Remove Old Knob (if applicable):** Gently pull the existing knob straight off the shaft. Avoid twisting or forcing it, as this may damage the shaft.
3. **Align New Knob:** Take one of the DOITOOOL replacement knobs. Locate the D-shaped opening on the back of the knob. Align this opening with the D-shaped shaft on your appliance.
4. **Press Firmly:** Once aligned, press the new knob firmly onto the shaft until it is fully seated and secure. Ensure it does not wobble.
5. **Test Functionality:** Gently turn the installed knob to ensure it rotates smoothly and engages with the appliance's controls correctly.



Image: A hand holding a single black replacement knob, demonstrating its compact size and ergonomic design.

## Installation Video Example

Your browser does not support the video tag.

Video: A demonstration of installing a D-shaft replacement knob on an appliance. This video shows the knob's features and the simple push-on installation process.

## OPERATING INSTRUCTIONS

---

Once installed, the DOITool replacement knobs function identically to the original knobs on your appliance. They are designed for use with air fryers, ovens, and microwaves that utilize a D-shaft timer or control mechanism.

- **Air Fryer Use:** Turn the knob to select desired cooking time or temperature settings. The non-slip design ensures accurate adjustments.
- **Oven Use:** Rotate the knob to set oven temperature or cooking functions. The durable ABS material is suitable for high-temperature oven environments.
- **Microwave Use:** Adjust cooking time or power levels as per your microwave's specific functions.



Image: A white air fryer with a black DOITOOOL replacement knob installed, showing the knob in use on the appliance.



**TO CATER TO ALL YOUR  
CULINARY REQUIREMENTS**

Image: A modern oven with two black DOITOOOL replacement knobs installed on its control panel, ready for use.



## THIS VERSATILE DEVICE MEETS ALL YOUR COOKING NEEDS

Image: A silver microwave oven with black DOITool replacement knobs on its control panel, indicating versatility across appliances.

### MAINTENANCE

---

To ensure the longevity and optimal performance of your DOITool replacement knobs, follow these simple maintenance guidelines:

- **Cleaning:** Regularly wipe the knobs with a soft, damp cloth to remove any food residue, grease, or dust. For stubborn stains, a mild soap solution can be used.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the ABS plastic material and finish of the knobs.
- **Drying:** Ensure the knobs are completely dry before operating the appliance to prevent electrical hazards or damage.
- **Inspection:** Periodically check the knobs for any signs of wear, cracks, or looseness. If a knob becomes loose, re-seat it firmly onto the D-shaft.

## TROUBLESHOOTING

---

If you encounter issues with your DOITOOOL replacement knobs, refer to the following troubleshooting tips:

Problem	Possible Cause	Solution
Knob does not fit the shaft.	Incorrect shaft type.	Ensure your appliance has a D-shaped shaft. These knobs are not compatible with other shaft types.
Knob is loose or wobbly after installation.	Not fully seated or shaft is worn.	Press the knob more firmly onto the shaft until it clicks or feels secure. If the shaft itself is worn, professional repair of the appliance may be needed.
Knob is difficult to turn.	Obstruction or internal appliance issue.	Remove the knob and check for any debris around the shaft. If the issue persists, it may indicate a problem with the appliance's internal control mechanism.
Knob breaks or cracks.	Excessive force or manufacturing defect.	Avoid applying excessive force when turning or installing. If a defect is suspected, contact customer support.

## CUSTOMER SUPPORT

---

For further assistance, questions, or concerns regarding your DOITOOOL Air Fryer Knob Replacement, please contact our customer support team. We are committed to providing timely and helpful solutions.

- **Contact Information:** Refer to your product packaging or the retailer's website for the most current customer service contact details.
- **When Contacting Support:** Please have your product model number (L002EQL351QA20HH) and a description of the issue ready to expedite assistance.

Your browser does not support the video tag.

Video: A promotional video from Blutoget (a seller of similar products) highlighting customer service and product benefits. While not directly for DOITOOOL, it illustrates the general commitment to customer satisfaction in this product category.

