

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Beautiful](#) /

› [Beautiful 3-Cup Food Chopper Model 5240917 User Manual](#)

Beautiful 5240917

Beautiful 3-Cup Food Chopper User Manual

Model: 5240917

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions thoroughly before operating the appliance.
- To protect against electrical hazards, do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts. Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Do not process hot liquids in the food chopper.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Always ensure the lid is securely locked in place before operating the motor.
- Do not overfill the processing bowl beyond the maximum fill line.
- Handle the stainless steel blade with extreme care as it is very sharp.

PARTS AND FEATURES

Familiarize yourself with the components of your Beautiful 3-Cup Food Chopper:

- Motor Base: Contains the powerful 250-watt motor and touch-activated controls.
- 3-Cup Processing Bowl: A durable glass bowl with a 3-cup capacity for ingredients.
- Stainless Steel Chopping Blade: Sharp blade for efficient chopping and pureeing.

- **Splash Guard Lid:** Prevents splatters during operation and features an integrated pour spout.
- **Non-Slip Base:** Provides stability during use.
- **Touch-Activated Controls:** 'Chop' and 'Puree' buttons for precise operation.



This image displays the fully assembled Beautiful 3-Cup Food Chopper, highlighting its compact design and white icing finish with gold accents.

SETUP

Before first use, and for each subsequent use, follow these steps:

1. Carefully unpack all components and remove any packaging materials.
2. Wash the processing bowl, stainless steel blade, and splash guard lid in warm, soapy water, or place them in the dishwasher (top rack recommended). Rinse thoroughly and dry.
3. Place the motor base on a clean, dry, and stable surface.
4. Place the clean processing bowl onto the motor base, ensuring it is seated correctly.
5. Carefully place the stainless steel blade assembly onto the center post inside the processing bowl. Handle the blade by its plastic hub.
6. Add your desired ingredients to the processing bowl. Do not exceed the MAX fill line indicated on the bowl.
7. Place the splash guard lid onto the processing bowl and twist or press down firmly until it is securely locked in place. The appliance will not operate unless the lid is properly secured.

OPERATING INSTRUCTIONS

The Beautiful 3-Cup Food Chopper features simple touch-activated controls for efficient food preparation.

Chopping

For chopping ingredients such as onions, garlic, herbs, nuts, or firmer vegetables:

1. Ensure the unit is assembled correctly and ingredients are loaded.
2. Plug the appliance into a standard electrical outlet.
3. Press and hold the '**Chop**' button for short, controlled pulses.
4. Release the button to stop. Repeat pulsing until the desired consistency is achieved.
5. For best results, avoid continuous operation for more than 30 seconds. Allow the motor to rest between pulses.



A close-up view of a hand pressing the "Chop" button on the food chopper's base, demonstrating the touch-activated control.



The food chopper bowl contains a mix of finely diced fruits and vegetables, illustrating its chopping capability.

Pureeing

For pureeing ingredients such as sauces, dips, dressings, or baby food:

1. Ensure the unit is assembled correctly and ingredients are loaded.
2. Plug the appliance into a standard electrical outlet.
3. Press and hold the 'Puree' button for continuous processing.
4. Release the button to stop. Continue processing until the desired smooth consistency is achieved.
5. Use the integrated pour spout on the lid for easy dispensing of pureed liquids.



This image shows a smooth green liquid being poured from the chopper's bowl into a glass, highlighting the integrated pour spout feature.

CARE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and hygienic operation of your food chopper.

- Always unplug the appliance from the power outlet before cleaning.
- Disassemble the processing bowl, stainless steel blade, and splash guard lid.
- The processing bowl, stainless steel blade, and lid are dishwasher safe. For best results and to prolong their life, place them on the top rack of your dishwasher.
- Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Exercise extreme caution when handling the stainless steel blade, as it is very sharp.
- Ensure all parts are completely dry before reassembling or storing the appliance.



A hand is shown cleaning the inside of the food chopper's bowl with a sponge, demonstrating the ease of cleaning.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Solution
Unit does not turn on.	Ensure the power cord is securely plugged into a working electrical outlet. Verify that the splash guard lid is properly seated and locked onto the processing bowl.
Ingredients are not chopping evenly.	Do not overfill the processing bowl. Process ingredients in smaller batches. Use the pulse function (short bursts) to allow ingredients to settle between pulses. Ensure ingredients are cut into uniform, smaller pieces before adding.
Motor sounds strained or stops.	Reduce the quantity of ingredients in the bowl. Ensure ingredients are not too large or too hard for the chopper. Unplug the unit and allow the motor to cool down for a few minutes before resuming operation.

Problem	Solution
Leakage from the processing bowl.	Ensure the splash guard lid is properly sealed and locked onto the processing bowl. Do not overfill the bowl past the MAX fill line. Check for any damage to the bowl or lid.

SPECIFICATIONS

- **Model:** 5240917
- **Capacity:** 3 Cups
- **Power:** 250 Watts
- **Blade Material:** Stainless Steel
- **Bowl Material:** Glass
- **Controls:** Touch-Activated (Chop, Puree)
- **Product Dimensions:** 4.72"D x 6.22"W x 8.27"H
- **Item Weight:** 2.87 pounds



A visual representation of the food chopper with its height (9.69") and width (6.34") measurements indicated.

WARRANTY AND SUPPORT

This Beautiful 3-Cup Food Chopper comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your product packaging or visit the manufacturer's official website.

For technical assistance, troubleshooting beyond the scope of this manual, or to inquire about replacement parts, please contact the manufacturer's customer support. Contact information can typically be found on the product packaging or the manufacturer's website.

Related Documents - 5240917

 Sensor Microwave Oven with Touch-Activated Display Instruction Manual Instrucción para horno de microondas con sensor y pantalla táctil Manual de instrucciones	<u>Beautiful Sensor Microwave Oven Instruction Manual</u> Comprehensive instruction manual for the Beautiful Sensor Microwave Oven with Touch-Activated Display, covering safety, operation, cleaning, and warranty information.
 Programmable Temperature Kettle Instruction Manual Instrucción para kettle de temperatura ajustable Manual de instrucciones	<u>Beautiful Programmable Temperature Kettle Instruction Manual</u> Comprehensive instruction manual for the Beautiful Programmable Temperature Kettle with Touch-Activated Display, covering safety, operation, care, and troubleshooting.
 6qt Digital Air Fryer with Touch-Activated Display Instruction Manual Instrucción para freidora de aire digital de 6 qt con pantalla táctil Manual de instrucciones	<u>Beautiful 6qt Digital Air Fryer with Touch-Activated Display - Instruction Manual</u> Instruction manual for the Beautiful 6qt Digital Air Fryer (models 19018, 19028, 19033, 19038). Covers safety precautions, operation, cooking functions (Air Fry, Roast, Reheat, Dehydrate), cleaning, and warranty information.
 9qt TriZone™ Air Fryer with Touch-Activated Display Instruction Manual Instrucción para freidora de aire TriZone™ de 9 cuartos de galón con pantalla táctil Manual de instrucciones	<u>Beautiful 9qt TriZone Air Fryer Instruction Manual</u> Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.
 8qt Slow Cooker Instruction Manual Instrucción para olla de cocción lenta Manual de instrucciones	<u>Beautiful 8qt Slow Cooker Instruction Manual</u> User guide and safety instructions for the Beautiful 8qt Slow Cooker, covering operation, care, cleaning, and warranty information.
 PowerExact Blender System Instruction Manual Precision Blending Manual de instrucciones Batido de precisión	<u>Beautiful PowerExact Blender System Instruction Manual Precision Blending</u> Instruction manual for the Beautiful PowerExact Blender System, featuring Patent-Pending PrecisionSense™ Blade technology. Covers safety, operation, maintenance, and troubleshooting for this easy-to-use kitchen appliance.

