Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SENCOR /
- > SENCOR Soundbar SSB 4450BS Instruction Manual

SENCOR SSB 4450BS

SENCOR Soundbar SSB 4450BS Instruction Manual

Model: SSB 4450BS

1. Introduction

Thank you for purchasing the SENCOR Soundbar SSB 4450BS. This soundbar is designed to deliver a powerful and immersive audio experience for your home entertainment system. This manual provides essential information for the safe and efficient use of your new soundbar, including setup, operation, maintenance, and troubleshooting.

Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- **Power Source:** Connect the soundbar only to an AC power outlet that matches the voltage specified on the product label. Ensure the power plug is fully inserted.
- **Ventilation:** Do not block any ventilation openings. Allow adequate space around the soundbar for proper airflow to prevent overheating.
- Water and Moisture: Do not expose the soundbar to rain, moisture, dripping, or splashing. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Heat Sources:** Keep the soundbar away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the soundbar from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel. Opening or removing covers may expose you to dangerous voltage or other hazards.
- **Placement:** Place the soundbar on a stable, flat surface or mount it securely if using a wall mount (mounting hardware not included).

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- SENCOR Soundbar SSB 4450BS
- Remote Control
- Power Cable (EU plug)
- User Manual

4. PRODUCT OVERVIEW

4.1 Soundbar Front View



Figure 1: Front view of the SENCOR Soundbar SSB 4450BS. The display shows 'bt' indicating Bluetooth

The front panel features the SENCOR logo and a digital display that indicates the current input mode (e.g., 'bt' for Bluetooth, 'OPT' for Optical, 'AUX' for Auxiliary) and volume level.

4.2 Soundbar Rear View (Ports)



Figure 2: Rear view of the SENCOR Soundbar SSB 4450BS, illustrating the connectivity ports. The rear panel typically includes various input ports for connecting to your television or other audio sources. These may include HDMI ARC, Optical, and AUX inputs, along with the power input.

4.3 Remote Control



Figure 3: The remote control for the SENCOR Soundbar SSB 4450BS.

The remote control allows you to manage all functions of the soundbar from a distance. Key buttons include:

- Power (): Turns the soundbar on or off.
- MODE: Cycles through input sources (Bluetooth, Optical, AUX, HDMI ARC).
- VOL+/-: Adjusts the main volume level.
- / / :Playback controls (Previous, Play/Pause, Next) for Bluetooth mode.
- MOVIE / MUSIC / NEWS / 3D: Selects predefined equalizer sound modes.
- BASS+/-: Adjusts the bass level.
- TREB+/-: Adjusts the treble level.
- RESET: Resets sound settings to default.

5. SETUP

5.1 Unpacking and Placement

- 1. Carefully remove the soundbar and all accessories from the packaging.
- 2. Place the soundbar on a stable, flat surface in front of your TV, ensuring it does not obstruct the TV's remote sensor.
- 3. Alternatively, the soundbar can be wall-mounted (mounting hardware not supplied). Ensure the wall can support the weight of the soundbar.

5.2 Connecting Power

- 1. Connect the power cable to the AC IN port on the back of the soundbar.
- 2. Plug the other end of the power cable into a suitable wall outlet.

5.3 Connecting to an Audio Source

Choose one of the following connection methods:

5.3.1 HDMI ARC Connection (Recommended)

- 1. Connect an HDMI cable (not supplied) from the HDMI ARC port on your TV to the HDMI ARC port on the soundbar.
- 2. Ensure your TV's HDMI ARC function is enabled in its settings.

5.3.2 Optical Connection

- 1. Connect an optical cable (not supplied) from the OPTICAL OUT port on your TV to the OPTICAL IN port on the soundbar.
- 2. Ensure your TV's audio output is set to 'Optical' or 'PCM'.

5.3.3 AUX Connection

 Connect a 3.5mm audio cable (not supplied) from the headphone jack or AUX OUT port on your TV/device to the AUX IN port on the soundbar.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power ()** button on the remote control or the soundbar's control panel to turn the unit on or off.

6.2 Selecting Input Source

Press the **MODE** button on the remote control repeatedly to cycle through the available input sources: Bluetooth (bt), Optical (OPT), AUX, HDMI ARC.

6.3 Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control to adjust the master volume. The current volume level will be displayed on the soundbar's front panel.

6.4 Bluetooth Pairing

- 1. Switch the soundbar to Bluetooth mode by pressing the **MODE** button until 'bt' appears on the display. The 'bt' indicator will flash, signifying pairing mode.
- 2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
- 3. Select 'SENCOR SSB 4450BS' from the list of devices.
- 4. Once paired, the 'bt' indicator will stop flashing and remain solid. You can now play audio from your device through the soundbar.
- 5. Use the (Previous), (Play/Pause), and (Next) buttons on the remote for media control in Bluetooth mode.

6.5 Sound Modes and Adjustments

Use the dedicated buttons on the remote control to customize your audio experience:

- MOVIE: Enhances dialogue and sound effects for films.
- MUSIC: Optimizes audio for music playback.
- **NEWS:** Clarifies speech for news broadcasts or podcasts.
- **3D:** Creates a wider, more immersive soundstage.
- BASS+/-: Increases or decreases the low-frequency sound output.
- TREB+/-: Increases or decreases the high-frequency sound output.
- RESET: Resets all sound settings (Bass, Treble, Sound Mode) to their factory defaults.

7. MAINTENANCE

7.1 Cleaning

To maintain the appearance and performance of your soundbar:

- Always unplug the soundbar from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Gently clean the speaker grilles with a soft brush or vacuum cleaner with a brush attachment to remove dust.

7.2 Storage

If you plan to store the soundbar for an extended period, unplug it from the power source and store it in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

8. TROUBLESHOOTING

If you encounter issues with your SENCOR Soundbar SSB 4450BS, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected; Try a different power outlet.
No sound	Incorrect input source selected; Volume too low; Mute activated; Cable connection issue	Press MODE to select correct input; Increase volume; Check if mute is active; Reconnect audio cables securely.
Bluetooth not connecting	Soundbar not in pairing mode; Device too far; Already connected to another device	Ensure soundbar is in 'bt' pairing mode (flashing 'bt'); Move device closer; Disconnect from other devices.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar; Remote sensor blocked	Replace batteries; Remove any obstructions; Ensure remote sensor on soundbar is clear.

If the problem persists after trying these solutions, please contact SENCOR customer support.

9. SPECIFICATIONS

Feature	Specification
Model	SSB 4450BS
Brand	SENCOR
Speaker Maximum Output Power	200 Watts
Product Dimensions (L x W x H)	100 cm x 17.5 cm x 11 cm (approx. 39.4 x 6.9 x 4.3 inches)
Item Weight	4.4 kg (approx. 9.7 lbs)
Mounting Type	Tabletop Mount
Plug Type	EU plug
ASIN	B0F2W9C18B
EAN / Item Model Number	8590669354634

10. WARRANTY AND SUPPORT


SENCOR products are manufactured to the highest quality standards. In the unlikely event of a defect, your product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, service inquiries, or to obtain replacement parts, please visit the official SENCOR website or contact your local SENCOR authorized service center. Keep your proof of purchase for warranty claims.

Website: www.sencor.com

© 2024 SENCOR. All rights reserved.

Related Documents - SSB 4450BS

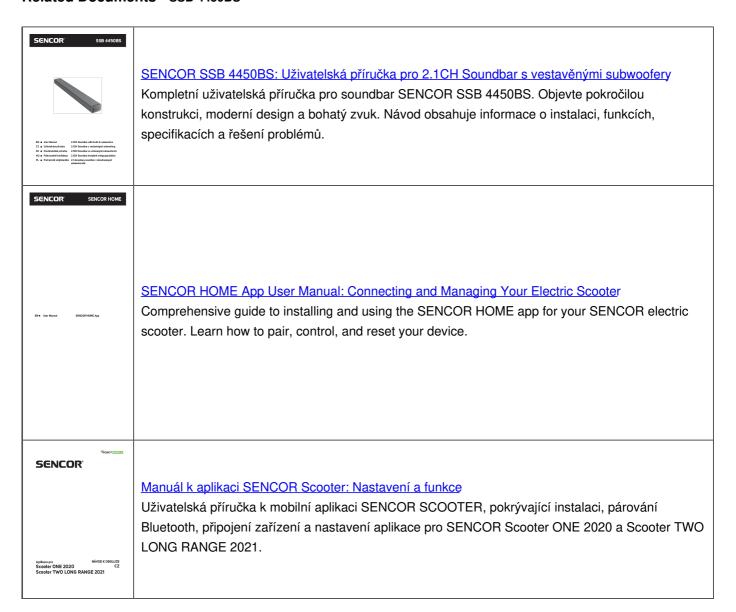



SENCOR SSK 360: Instrucțiuni de Operare și Siguranță

Ghid complet pentru utilizarea în siguranță a distrugătorului de documente SENCOR SSK 360. Conține instrucțiuni detaliate de operare, avertismente esențiale de siguranță, proceduri pentru curățarea blocajelor de hârtie, gestionarea supraîncălzirii și specificații tehnice, precum și informații despre reciclarea corectă a echipamentelor electrice.



SENCOR SCOOTER S70 Electric Scooter User Manual

Comprehensive user manual for the SENCOR SCOOTER S70 electric scooter, covering assembly, operation, safety guidelines, maintenance, technical specifications, and warranty information. Learn how to safely operate and maintain your electric scooter.



SENCOR SVC 8505TI Bagged Vacuum Cleaner User Manual | Safety, Features & Maintenance

Comprehensive user manual for the SENCOR SVC 8505TI bagged vacuum cleaner. Includes important safety instructions, detailed parts description, accessory usage guide, preparation, operation, maintenance, cleaning procedures, technical specifications, and disposal information.