

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SENCOR](#) /

› [Sencor SPT 2700 WH Portable Radio Boombox User Manual](#)

SENCOR SPT 2700 WH

Sencor SPT 2700 WH Portable Radio Boombox User Manual

Model: SPT 2700 WH

INTRODUCTION

Thank you for purchasing the Sencor SPT 2700 WH Portable Radio Boombox. This manual provides important information for the safe and correct operation of your device. Please read it thoroughly before use and keep it for future reference.

The Sencor SPT 2700 WH is a versatile portable audio system featuring FM radio, CD player, Bluetooth connectivity, and USB playback for MP3 files. Its compact design and integrated handle make it ideal for use at home or on the go.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Keep these instructions for future reference.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Sencor SPT 2700 WH.



Image: Front view of the Sencor SPT 2700 WH portable radio boombox, showing the central control panel, LCD display, speakers on both sides, CD compartment on top, and a retractable antenna at the back. A handle is integrated for portability.



Image: Angled view of the Sencor SPT 2700 WH portable radio boombox, highlighting the top-loading CD player, control buttons, USB port, and the overall compact design with a carrying handle.

Key Features:

- FM Radio Tuner
- Top-Loading CD Player
- Bluetooth 5.0 Connectivity
- USB Port for MP3 Playback
- Aux-in Jack (if applicable, not explicitly stated but common)
- Headphone Jack (if applicable, not explicitly stated but common)
- AC/DC Power Operation

SETUP

Powering the Unit:

The Sencor SPT 2700 WH can be powered by AC mains or batteries.

AC Power:

1. Ensure the unit is switched off.
2. Connect the AC power cord to the AC input jack on the back of the unit.
3. Plug the other end of the AC power cord into a standard wall outlet (AC 230V ~ 50Hz).
4. The unit is now ready for use with AC power.

Battery Power:

1. Ensure the unit is switched off and disconnected from AC power.
2. Open the battery compartment cover located on the bottom or back of the unit.
3. Insert the required number of batteries (e.g., 6 x C/UM-2 batteries, check actual product for type) according to the polarity markings (+/-) inside the compartment.
4. Close the battery compartment cover securely.
5. The unit is now ready for portable use.

Note: Remove batteries if the unit will not be used for an extended period to prevent leakage.

OPERATING INSTRUCTIONS

General Operation:

- **Power On/Off:** Press the **POWER** button to turn the unit on or off.
- **Volume Control:** Rotate the **VOLUME** knob (or press **VOL+** / **VOL-** buttons) to adjust the sound level.
- **Function Selection:** Press the **FUNCTION** / **MODE** button repeatedly to switch between modes: CD, FM, Bluetooth, USB, AUX (if available). The selected mode will be displayed on the LCD screen.

FM Radio Operation:

1. Switch the unit to **FM** mode using the **FUNCTION** / **MODE** button.
2. Extend the telescopic antenna for optimal reception.
3. **Manual Tuning:** Press the **TUNE+** / **TUNE-** buttons briefly to adjust the frequency step by step.
4. **Automatic Scan:** Press and hold the **TUNE+** / **TUNE-** buttons for a few seconds to automatically scan for the next available station.
5. **Preset Stations:** (If available) Press **PROG** / **MEM** to store a station, then use **PRESET+** / **PRESET-** to select a preset number. Press **PROG** / **MEM** again to confirm. To recall, press **PRESET+** / **PRESET-**.

CD Player Operation:

1. Switch the unit to **CD** mode.
2. Open the CD compartment cover by gently lifting it.
3. Place a CD with the label side facing up onto the spindle.
4. Close the CD compartment cover securely.
5. The CD will start playing automatically or display "READING" then the first track.
6. **Play/Pause:** Press the **PLAY/PAUSE** (▶/⏸) button.
7. **Stop:** Press the **STOP** (■) button.
8. **Skip Track:** Press **SKIP FORWARD** (▶▶) or **SKIP BACKWARD** (◀◀) buttons.
9. **Fast Forward/Rewind:** Press and hold **SKIP FORWARD** (▶▶) or **SKIP BACKWARD** (◀◀) buttons.

Bluetooth Operation:

1. Switch the unit to **Bluetooth** mode. The display will show "BT" or "PAIR" and an indicator will flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "**Sencor SPT 2700 WH**" from the list of devices.
4. Once paired, the unit will emit a confirmation sound, and the Bluetooth indicator will stop flashing.
5. You can now play audio from your device through the boombox. Use your device's controls for playback (play/pause, skip, volume).

USB Playback:

1. Switch the unit to **USB** mode.
2. Insert a USB flash drive (formatted to FAT32, containing MP3 files) into the USB port.
3. The unit will automatically detect and start playing MP3 files from the USB drive.
4. Use the **PLAY/PAUSE**, **STOP**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for playback control, similar to CD operation.

MAINTENANCE

Cleaning the Unit:

- Always unplug the unit from the power source before cleaning.
- Use a soft, dry cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaning kit. Do not touch the lens with your fingers.

CD Care:

- Handle CDs by their edges to avoid fingerprints on the playing surface.
- Keep CDs in their cases when not in use to prevent scratches.
- Clean dirty CDs with a soft, lint-free cloth, wiping gently from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Check AC power cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Incorrect function mode selected; Headphones connected.	Increase volume; Select correct mode (CD, FM, BT, USB); Disconnect headphones.
CD not playing / "NO DISC" displayed	CD inserted incorrectly; CD dirty or scratched; CD compartment not closed.	Insert CD with label side up; Clean or replace CD; Close compartment securely.
Poor FM reception	Antenna not extended; Weak signal; Interference.	Fully extend antenna; Reposition unit; Move away from other electronic devices.
Bluetooth pairing failed	Unit not in pairing mode; Device too far; Device already paired with another unit.	Ensure unit is in BT pairing mode; Move device closer; Disconnect from other devices.

Problem	Possible Cause	Solution
USB not playing	USB drive not formatted correctly (FAT32); No MP3 files; USB drive damaged.	Ensure USB is FAT32 and contains MP3s; Try another USB drive.

SPECIFICATIONS

- **Model:** SPT 2700 WH
- **Brand:** Sencor
- **EAN:** 8590669346325
- **Power Output:** 3W
- **Bluetooth Version:** 5.0
- **Supported Media:** CD, CD-R/RW, USB (MP3)
- **Radio Tuner:** FM
- **Power Supply:** AC 230V ~ 50Hz or DC Battery (e.g., 6 x C/UM-2, check actual product)
- **Dimensions (W x H x D):** Approximately 25.6 cm x 15.4 cm x 26.2 cm
- **Weight:** 1.5 kg

WARRANTY AND SUPPORT

Sencor products are covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Sencor website.

For technical support, service, or spare parts, please contact your local Sencor distributor or authorized service center. Contact information can typically be found on the Sencor website or in the product packaging.

Website: www.sencor.com