

Braun MQ50.501M

Braun MultiQuick 5 MQ50.501M Hand Blender User Manual

Model: MQ50.501M | Brand: Braun

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Braun MultiQuick 5 MQ50.501M Hand Blender. Please read these instructions carefully before using the appliance and keep them for future reference.

SAFETY INSTRUCTIONS

- Always unplug the appliance before cleaning or assembling/disassembling parts.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids.
- Blades are sharp. Handle with care.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.

PRODUCT COMPONENTS

Your Braun MultiQuick 5 MQ50.501M Hand Blender comes with several components designed for versatile food preparation. Familiarize yourself with each part:



Image: Overview of the Braun MultiQuick 5 MQ50.501M Hand Blender and its various accessories, including the motor unit, blending shaft, whisk, chopper, and beaker.

- **Motor Unit:** The main body of the blender, housing the powerful 1000W motor and speed controls.
- **Blending Shaft (PowerBell Plus):** The stainless steel shaft with a unique bell shape and extra sharp blade for efficient blending and reduced splashing.
- **Whisk Attachment:** For whipping cream, beating eggs, and mixing light batters.
- **Chopper Attachment:** A small bowl with a sharp blade for chopping herbs, nuts, and small quantities of food.
- **Beaker:** A measuring cup for blending and mixing ingredients.

SETUP

Before first use, clean all parts that will come into contact with food. Ensure the appliance is unplugged during assembly.

Attaching the Blending Shaft:

1. Align the blending shaft with the motor unit.
2. Push the blending shaft onto the motor unit until it clicks into place.
3. To detach, press the release buttons on the sides of the motor unit and pull the shaft off.

Attaching the Whisk:

1. Insert the whisk into the whisk gear box.
2. Align the whisk gear box with the motor unit and push until it clicks.
3. To detach, press the release buttons and pull off the gear box, then pull the whisk out of the gear box.

Attaching the Chopper:

1. Place the chopper blade onto the center pin of the chopper bowl.
2. Place the chopper lid onto the chopper bowl.
3. Align the motor unit with the chopper lid and push until it clicks.
4. To detach, press the release buttons and pull off the motor unit, then remove the lid and blade.

Your browser does not support the video tag.

Video: This video demonstrates the assembly and disassembly of the various attachments for the Braun MultiQuick 5 Hand Blender, including the blending shaft, whisk, and chopper. It shows how to securely connect each component to the motor unit and how to remove them for cleaning or switching tasks.

OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and plugged into a suitable power outlet before use.

Using the Blending Shaft:

1. Place the ingredients into the beaker or a suitable container.
2. Immerse the blending shaft into the ingredients.
3. Select your desired speed using the variable speed control dial on top of the motor unit (21 speeds available).
4. Press and hold the ON button to start blending. For maximum power, press the Turbo button.
5. Move the blender up and down gently to ensure even blending.
6. Release the ON button to stop.



Image: A hand holding the Braun MultiQuick 5 Hand Blender, actively blending ingredients in a pot, demonstrating its ergonomic design and ease of use for in-pot blending.

Using the Whisk:

1. Attach the whisk to the motor unit as described in the Setup section.
2. Place ingredients in a bowl.
3. Immerse the whisk into the ingredients.
4. Select a low speed for gentle mixing or higher speeds for whipping.
5. Press and hold the ON button to start.
6. Move the whisk in circular motions.
7. Release the ON button to stop.

Using the Chopper:

1. Assemble the chopper as described in the Setup section.
2. Add ingredients to the chopper bowl. Do not overfill.
3. Place the motor unit onto the chopper lid.
4. Select a suitable speed. For quick chopping, use short pulses by pressing and releasing the ON button.
5. Ensure the motor unit is securely attached before operating.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your appliance. Always unplug the blender before cleaning.

Cleaning the Motor Unit:

- Wipe the motor unit with a damp cloth. Do not immerse it in water.

Cleaning Attachments:

- The blending shaft, whisk, chopper bowl, chopper blade, and beaker are dishwasher safe.
- For manual cleaning, wash parts in warm soapy water, rinse thoroughly, and dry immediately.
- Handle chopper blades with extreme care as they are very sharp.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outage, or attachment not correctly fitted.	Check power connection. Ensure attachment is securely clicked into place.
Motor stops during operation.	Overheating due to prolonged use or too much load.	Unplug and let cool down for 30 minutes. Reduce ingredient quantity.
Ingredients not blending evenly.	Insufficient liquid or ingredients are too large.	Add more liquid or cut ingredients into smaller pieces. Move the blender up and down.

SPECIFICATIONS

Feature	Detail
Brand	Braun
Model Name	MultiQuick 5 MQ50.501M
Power	1000 Watts
Number of Speeds	21 variable speeds + Turbo
Special Feature	Multi-speed, Anti-splash design, EasyClick System Plus
Material	Plastic, Stainless Steel (blending shaft, blade)
Capacity (Beaker)	600 Milliliters
Dishwasher Safe Parts	Yes (attachments)
Dimensions (D x W x H)	6.2 x 6.8 x 20.8 cm
Power Source	Corded Electric

WARRANTY AND SUPPORT

Your Braun MultiQuick 5 MQ50.501M Hand Blender comes with a**2-year full warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or further assistance, please visit the official Braun website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question