

## TechniSat DIGITRADIO CD 2GO BT

# TechniSat DIGITRADIO CD 2GO BT Portable CD Player User Manual

Model: DIGITRADIO CD 2GO BT (0001/3970)

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your TechniSat DIGITRADIO CD 2GO BT portable CD player. Please read this manual thoroughly before using the device and retain it for future reference. This device combines a portable CD player with DAB+ and FM radio reception, Bluetooth streaming, and an MP3 resume function.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- TechniSat DIGITRADIO CD 2GO BT Portable CD Player
- Headphones (with integrated DAB/FM antenna)
- 2 x BL5C Rechargeable Batteries
- External Power Cable (Charging Cable)
- User Manual

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your DIGITRADIO CD 2GO BT.



**Figure 1:** Top view of the TechniSat DIGITRADIO CD 2GO BT portable CD player. The device features a circular, silver brushed metal design with a central display and various control buttons.

## Control Buttons and Display

- **Display:** Shows current mode (DAB+, FM, CD, Bluetooth), time, station information, track details, battery status, and signal strength.
- **SKIP UP (>>|):** Skips to the next track on CD, next station on radio, or navigates menu options.
- **ON/OFF OK (Play/Pause):** Powers the device on/off (long press), plays/pauses CD playback, confirms selections in menus.
- **STOP SEARCH (Square icon):** Stops CD playback, initiates station search in radio mode.
- **DOWN SKIP (|<<):** Skips to the previous track on CD, previous station on radio, or navigates menu options.
- **MENU:** Accesses the main menu for settings and options.
- **EQ/BT:** Toggles equalizer presets or activates Bluetooth pairing mode.
- **MODE:** Switches between different operating modes (CD, DAB+, FM, Bluetooth).

## SETUP

### 1. Charging the Batteries

1. Insert the two BL5C rechargeable batteries into the battery compartment located on the underside of the

- device. Ensure correct polarity.
2. Connect the external power cable to the device's charging port and to a suitable USB power adapter (not included) or a powered USB port.
  3. The battery indicator on the display will show charging status. Allow sufficient time for a full charge before first use.

## 2. Connecting Headphones

The included headphones also function as the antenna for DAB+ and FM radio reception. It is essential to connect them for optimal radio performance.

- Plug the 3.5mm jack of the headphones into the headphone port on the device.

## OPERATING INSTRUCTIONS

### Power On/Off

- To power on, press and hold the **ON/OFF OK** button until the display illuminates.
- To power off, press and hold the **ON/OFF OK** button until the display turns off.

### CD Playback

1. Open the CD compartment cover.
2. Insert a CD with the label side facing up. Close the cover securely.
3. Press the **MODE** button to select CD mode.
4. Press the **ON/OFF OK** button to start playback.
5. Use **SKIP UP** (>>|) and **DOWN SKIP** (|<<) to navigate between tracks.
6. Press the **ON/OFF OK** button to pause playback, press again to resume.
7. Press the **STOP SEARCH** button to stop playback.

**MP3 Resume Function:** The device will automatically resume playback from the last listened position after being powered off and on again. This is particularly useful for audiobooks.

### DAB+ Radio Operation

1. Ensure headphones are connected to act as the antenna.
2. Press the **MODE** button to select DAB+ mode.
3. The device will automatically perform a scan for available DAB+ stations upon first use or if no stations are found. To manually initiate a scan, press the **MENU** button, navigate to 'Scan', and confirm with **ON/OFF OK**.
4. Use **SKIP UP** (>>|) and **DOWN SKIP** (|<<) to browse through available stations.
5. To save a favorite station, tune to the desired station, then press and hold the **MENU** button. Select a preset number (1-10) and confirm.
6. To recall a favorite station, briefly press the **MENU** button, navigate to 'Presets', and select your desired station.

### FM Radio Operation

1. Ensure headphones are connected to act as the antenna.
2. Press the **MODE** button to select FM mode.
3. To automatically search for stations, press the **STOP SEARCH** button. The device will scan and stop at the next strong signal.
4. Use **SKIP UP** (>>|) and **DOWN SKIP** (|<<) for fine-tuning or to jump between saved stations.
5. To save a favorite station, tune to the desired station, then press and hold the **MENU** button. Select a preset number (1-10) and confirm.
6. To recall a favorite station, briefly press the **MENU** button, navigate to 'Presets', and select your desired

station.

Bluetooth Pairing

1. Press the **MODE** button to select Bluetooth mode. The display will indicate "Pairing" or similar.
2. Alternatively, press and hold the **EQ/BT** button to enter Bluetooth pairing mode.
3. On your Bluetooth-enabled device (e.g., smartphone, speaker), search for available Bluetooth devices.
4. Select "DIGITRADIO CD 2GO BT" from the list of found devices to pair.
5. Once paired, you can stream audio from your connected device to the DIGITRADIO CD 2GO BT.

Equalizer Settings

- Press the **EQ/BT** button repeatedly to cycle through available equalizer presets (e.g., Normal, Pop, Rock, Jazz, Classic).
- Select the preset that best suits your audio preference.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them free from dust, fingerprints, and scratches. Use a soft, lint-free cloth to clean CDs, wiping from the center outwards.
- **Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Batteries are depleted or incorrectly inserted.	Charge the batteries. Ensure batteries are inserted with correct polarity.
No sound from headphones.	Headphones not properly connected or volume is too low.	Ensure headphones are fully plugged in. Increase volume.
CD skips or does not play.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD. Check for scratches. Reinsert the CD correctly.
Poor radio reception.	Headphones not connected or poor signal area.	Ensure headphones are connected and fully extended. Move to an area with better signal. Perform a station scan.
Cannot pair via Bluetooth.	Device not in pairing mode or too far from the source device.	Ensure the DIGITRADIO CD 2GO BT is in Bluetooth pairing mode. Move devices closer. Restart both devices.

SPECIFICATIONS



Brand	TechniSat
-------	-----------




Model Name	DIGITRADIO CD 2GO BT
Model Number	0001/3970
Color	Silver
Connectivity Technology	3.5mm headphone jack, Bluetooth
Special Features	Bluetooth Streaming, DAB+ Radio, FM Radio, Portable, Dimmable Display, MP3 Resume Function, Anti-shock
Audio Formats Supported	MP3, WAV
Included Components	Charging cable, 2 x BL5C batteries, Headphones
Battery Life (approx.)	Up to 5 hours
Item Weight	214 Grams
Product Dimensions (L x H x D)	14 x 2.50 x 14 cm

### WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official TechniSat website. Specific details regarding spare parts availability and software updates are not provided in this manual.

### Related Documents - DIGITRADIO CD 2GO BT

	<p><a href="#">TechniSat DIGITRADIO 140 Instruction Manual</a></p> <p>Comprehensive instruction manual for the TechniSat DIGITRADIO 140, covering setup, operation, features like Internet Radio, DAB+, FM, Bluetooth, CD/MP3 playback, and troubleshooting.</p>
	<p><a href="#">TechniSat DIGITRADIO 601 &amp; 631: Bedienungsanleitung für Internetradio mit DAB+/UKW und Bluetooth</a></p> <p>Umfassende Bedienungsanleitung für das TechniSat DIGITRADIO 601 und DIGITRADIO 631. Erfahren Sie mehr über die Funktionen, Einrichtung und Bedienung Ihres Internet-Radios mit DAB+/UKW-Tuner und Bluetooth-Streaming.</p>
	<p><a href="#">DIGITRADIO 217: Instrukcja obsługi radia DAB+/FM z Bluetooth i budzikiem</a></p> <p>Przewodnik użytkownika dla TechniSat DIGITRADIO 217, szczegółowo opisujący funkcje radia DAB+/FM, strumieniowe przesyłanie dźwięku Bluetooth, ustawienia budzika i obsługę.</p>

	<p><a href="#">TechniSat DIGITRADIO 143 CD Instruction Manual</a></p> <p>Comprehensive instruction manual for the TechniSat DIGITRADIO 143 CD, covering setup, operation, features like internet radio, DAB+, FM, Bluetooth, and CD playback, along with troubleshooting and technical data.</p>
	<p><a href="#">TechniSat DIGITRADIO 380 CD IR User Manual: Internet Radio, DAB+, FM, Bluetooth, CD Player</a></p> <p>Comprehensive user manual for the TechniSat DIGITRADIO 380 CD IR. Learn how to set up, operate, and troubleshoot your internet radio, DAB+/FM tuner, Bluetooth streamer, and CD player.</p>
	<p><a href="#">TechniSat DigitRadio 210 IR User Manual - DAB/FM Radio Guide</a></p> <p>Comprehensive user manual for the TechniSat DigitRadio 210 IR, covering setup, operation, DAB/FM features, safety, and technical specifications. Learn how to use your digital radio.</p>