

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SKMEI](#) /

› [SKMEI Digital Kids Watch – Waterproof Sports Watch for Boys & Girls, 50M Water Resistant, LED Backlight, Chronograph, Alarm, Durable Outdoor Wristwatch - 2280 Green Camouflage](#)

SKMEI 2280CMGN

SKMEI Digital Kids Watch - Model 2280 Instruction Manual

Your guide to operating and maintaining your SKMEI 2280 Digital Sports Watch.

PRODUCT OVERVIEW

The SKMEI 2280 Digital Kids Watch is a durable and functional timepiece designed for active children. It features a digital display, 50M water resistance, LED backlight, chronograph, and alarm functions, making it suitable for various sports and outdoor activities.



Image: Front view of the SKMEI 2280 Digital Kids Watch in green camouflage, displaying the time, day, and date.

KEY FEATURES

Key Features

Display

Digital

Dial Shape

Round

Features

Chorno, Alarm

Strap Material

TPU

Water Resistance

50 m



Image: Infographic highlighting the key features of the watch: Digital Display, Round Dial, Chronograph, Alarm, TPU Strap, and 50m Water Resistance.

- **Digital Display:** Clear and easy-to-read digital time display.
- **50M Water Resistance:** Designed to withstand splashes, sweat, and brief immersion. *Note: Not suitable for swimming or diving.*
- **Multi-Functionality:** Includes 12/24-hour format, alarm, stopwatch chronograph, date, and week display.
- **LED Backlight:** For visibility in low-light conditions.
- **Durable Build:** Features a resin crystal, sturdy ABS case, and a soft TPU band for comfort and longevity.

SETUP

Initial Battery Installation (if required)

The watch comes with a C battery included. No user installation is typically required for initial setup.

Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** button to cycle through the hours, minutes, date, and day settings.
3. Use the **START** button to adjust the flashing value (increase the number).
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

OPERATING INSTRUCTIONS

Button Functions

- **LIGHT:** Activates the LED backlight for a few seconds.
- **MODE:** Cycles through different modes: Time Display, Stopwatch, Alarm Setting, Time/Date Setting.
- **START:** Used to start/stop the stopwatch, or to increase values during setting modes.
- **RESET:** Used to reset the stopwatch, or to select different setting parameters during setting modes.

Using the Stopwatch (Chronograph)

1. Press **MODE** button until the stopwatch display appears (usually "00:00:00").
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. Press **MODE** to return to the time display.

Setting and Using the Alarm

1. Press the **MODE** button until the alarm setting mode is displayed (usually indicated by "AL" or an alarm icon).
2. Use the **RESET** button to select between alarm hour and minute.
3. Use the **START** button to adjust the flashing value.
4. To turn the alarm ON/OFF, press **START** while in the alarm display mode (not setting mode). An alarm icon will appear/disappear.
5. When the alarm sounds, press any button to stop it.

Using the LED Backlight

Press the **LIGHT** button (typically located on the top left side of the watch) to illuminate the display for easy reading in dark environments.



Image: A child wearing the SKMEI 2280 watch, illustrating its comfortable and kid-friendly design.

MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** While 50M water resistant, avoid prolonged submersion, hot water, or steam. Do not press buttons underwater.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** When the display dims or functions become erratic, the battery may need replacement. It is recommended to have this done by a professional watch repair service to ensure water resistance is maintained.



Image: The SKMEI watch packaging box, indicating the product's presentation.

TROUBLESHOOTING

- **Display is blank or dim:**

This usually indicates a low battery. Replace the battery as soon as possible. If the issue persists after battery replacement, contact customer support.

- **Buttons are unresponsive:**

Ensure the watch is not wet or dirty around the buttons. If the problem continues, a reset may be needed (consult a professional if no external reset option is available), or there might be an internal malfunction.

- **Time is incorrect or drifts:**

Re-set the time following the "Setting Time and Date" instructions. If the time continues to be inaccurate, the battery may be weak, or the internal quartz movement might require servicing.

- **Water inside the watch:**

Immediately stop using the watch. This indicates a breach in the water resistance. Take the watch to a professional

watch repair service to prevent further damage.

SPECIFICATIONS



Image: A technical diagram illustrating the dimensions of the SKMEI 2280 watch, including case height, width, thickness, and strap width.

Feature	Detail
Model Number	2280CMGN
Product Dimensions	23.5 x 3.75 x 1.35 cm
Item Weight	31.2 g
Case Diameter	37.5 Millimetres
Band Material Type	Thermoplastic Polyurethane (TPU)

Feature	Detail
Band Colour	Army Green Camouflage
Watch Movement Type	Quartz
Water Resistance	50M
Battery	1 C battery (included)
Country of Origin	China

WARRANTY AND SUPPORT

Limited Warranty

This SKMEI watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and what is covered.

Customer Support

For any questions, technical assistance, or warranty claims, please contact SKMEI customer support through the retailer where the product was purchased or visit the official SKMEI website for contact information.

You can visit the official SKMEI store on Amazon for more information:[SKMEI Store](#)