

[manuals.plus](#) /› [XINFUTE](#) /› [XINFUTE SHWRMC0116/SHW/RMC/0117 Remote Control User Manual for Sharp Aquos Netflix TVs](#)

XINFUTE SHWRMC0116

XINFUTE SHWRMC0116/SHW/RMC/0117 Remote Control User Manual

For Sharp Aquos Netflix TVs

INTRODUCTION

This manual provides detailed instructions for the XINFUTE SHWRMC0116/SHW/RMC/0117 Remote Control. This remote is designed for direct use with Sharp Aquos Netflix TVs, offering seamless control without the need for complex programming.

Please read this manual carefully to ensure proper setup and operation of your new remote control.

SETUP

The XINFUTE SHWRMC0116/SHW/RMC/0117 Remote Control requires two AAA batteries (not included) for operation. No pairing or programming is required; simply insert the batteries, and the remote is ready for use with compatible Sharp Aquos Netflix TVs.

- Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards to open it.
- Insert Batteries:** Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- Close the Compartment:** Slide the battery cover back into place until it clicks securely.
- Test the Remote:** Point the remote control towards your Sharp Aquos Netflix TV and press the Power button to confirm functionality.



Image: Back view of the remote control, illustrating the battery compartment location.

OPERATING INSTRUCTIONS

This remote control provides access to all standard functions of your Sharp Aquos Netflix TV. Below is a general overview of key buttons and their functions.



Image: Front view of the remote control, displaying the layout of all buttons.

- **Power Button ()**: Turns the TV on or off.
 - **Netflix Button**: Direct access to the Netflix application.
 - **Aquos Button**: Specific function for Sharp Aquos TVs, typically for input or menu.
 - **Number Buttons (0-9)**: For direct channel selection.
 - **Volume Up/Down (VOL +/-)**: Adjusts the TV's volume level.
 - **Channel Up/Down (CH +/-)**: Changes TV channels sequentially.
 - **Mute Button**: Mutes or unmutes the TV audio.
 - **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
 - **Menu Button**: Opens the TV's main menu.
 - **Back Button**: Returns to the previous screen or menu.
 - **Exit Button**: Exits the current menu or application.
 - **TV Guide Button**: Displays the electronic program guide.
 - **FAV Button**: Accesses favorite channels or functions.
 - **INFO Button**: Displays information about the current program or input.
 - **Colored Buttons (Red, Green, Yellow, Blue)**: These buttons often have context-sensitive functions within menus or specific applications.

- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls media playback functions.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote. Store in a cool, dry place away from direct sunlight.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in liquids.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Some buttons are not working:**
 - This could indicate low battery power; try replacing the batteries.
 - Ensure the remote is clean and there is no debris lodged under the buttons.
- **TV is not responding to any remote commands:**
 - Verify that the TV itself is powered on.
 - Try restarting the TV by unplugging it from the power outlet for a few minutes, then plugging it back in.
 - Ensure the remote is compatible with your specific Sharp Aquos Netflix TV model.

SPECIFICATIONS

Feature	Detail
Model Numbers	SHWRMC0116, SHW/RMC/0117
Brand	XINFUTE
Compatible Devices	Sharp Aquos Netflix Televisions
Power Source	2 x AAA Batteries (not included)
Material	ABS Material

Product Dimensions	6 x 3 x 1 inches (approximately)
Item Weight	2.82 ounces (approximately)
Special Feature	Ergonomic design

WARRANTY INFORMATION

XINFUTE provides a one-year warranty on all purchases of this remote control. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.

For any issues related to product quality or dissatisfaction with your purchase, please contact the seller within 24 hours of receipt. All goods are inspected before shipment to ensure quality.

SUPPORT

If you require further assistance or have questions not covered in this manual, please contact XINFUTE customer support through the platform where you made your purchase.

You can also visit the official XINFUTE store for more information:[XINFUTE Store on Amazon](#)