

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Beko](#) /

› [Beko GNO46624MXPN Multi-Door Refrigerator User Manual](#)

Beko GNO46624MXPN

Beko GNO46624MXPN Multi-Door Refrigerator User Manual

Model: GNO46624MXPN

INTRODUCTION

The Beko GNO46624MXPN multi-door refrigerator is designed to offer both elegant aesthetics and high performance for your kitchen. Featuring 4 doors and a generous capacity of 466 liters, it provides optimized storage solutions for various food items. This appliance incorporates ventilated cold technology to ensure a homogeneous temperature distribution throughout the compartments, helping to preserve food freshness effectively. Additionally, the HarvestFresh function is integrated to maintain the freshness of fruits and vegetables for longer periods. For user convenience, it is equipped with energy-efficient LED lighting and an open door alarm system. Its modern stainless steel design seamlessly integrates into contemporary kitchen environments.

SAFETY INFORMATION

Please read this manual carefully before using your appliance to ensure safe operation and prevent damage. Keep these instructions for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a grounded power outlet with the correct voltage (240V). Do not use extension cords or multiple socket adapters. Disconnect from power before cleaning or maintenance.
- **Ventilation:** Ensure adequate air circulation around the appliance. Do not block ventilation openings.
- **Flammable Materials:** Do not store explosive substances or products containing flammable propellants in the appliance.
- **Children Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Handling:** The appliance is heavy. Use caution when moving or installing to prevent injury.
- **Cleaning:** Use only recommended cleaning agents. Avoid abrasive cleaners or sharp objects.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including protective films and tapes. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

Placement

- Place the refrigerator on a firm, level surface to ensure stability and proper operation.
- Allow sufficient space around the appliance for proper ventilation (at least 5-10 cm on sides and back, and 30 cm above).
- Avoid direct sunlight, heat sources (e.g., stoves, radiators), and damp environments.

Electrical Connection

Plug the appliance into a dedicated, grounded 240V AC power outlet. Do not switch on the appliance immediately after plugging it in; wait at least 4 hours to allow the refrigerant to settle.

Initial Startup

After the waiting period, switch on the appliance. The internal temperature will gradually decrease. It may take several hours for the refrigerator to reach its optimal operating temperature. Do not load food into the appliance during the first 4-6 hours of operation.



Figure 1: Front view of the Beko GNO46624MXPN multi-door refrigerator. This image shows the four-door configuration and the stainless steel exterior.

OPERATING INSTRUCTIONS

Control Panel

The control panel is typically located on the upper door or inside the refrigerator compartment. It allows you to adjust

temperature settings and activate special functions. Refer to the specific icons and buttons on your appliance for detailed operation.

Temperature Settings

- **Refrigerator Compartment:** Recommended temperature is usually between 2°C and 8°C. Adjust using the temperature control buttons on the panel.
- **Freezer Compartment:** Recommended temperature is usually between -18°C and -24°C. Adjust using the temperature control buttons on the panel.

HarvestFresh Technology

The HarvestFresh drawer uses a 3-color light technology that mimics the 24-hour sun cycle, preserving vitamins in fruits and vegetables for longer. Simply place your produce in the designated HarvestFresh drawer.

LED Lighting

The internal LED lighting provides bright and energy-efficient illumination of the refrigerator compartments. These lights are designed for the lifetime of the appliance and generally do not require replacement.

Open Door Alarm

If a door is left open for an extended period, an audible alarm will sound to alert you, helping to prevent energy waste and maintain internal temperatures. Close the door to silence the alarm.



Figure 2: Interior view of the Beko GNO46624MXPN refrigerator, showcasing its spacious compartments, shelves, door bins, and HarvestFresh drawers filled with various food items.

MAINTENANCE AND CLEANING

General Cleaning

- Exterior:** Clean the exterior surfaces with a soft cloth and a mild, non-abrasive detergent. Wipe dry with a clean cloth.
- Interior:** Clean the interior regularly with a solution of warm water and a small amount of baking soda or mild detergent. Rinse and dry thoroughly. Remove shelves and drawers for easier cleaning.
- Door Seals:** Clean door seals with warm water and a soft cloth to ensure they remain flexible and provide a tight seal.

Defrosting

This appliance features an automatic defrosting system (No Frost technology) for both the refrigerator and freezer compartments. Manual defrosting is generally not required. If ice buildup occurs, check door seals for proper closure.

Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily.

TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power, plug loose, fuse blown.	Check power supply, ensure plug is secure, check household fuse/circuit breaker.
Temperature is not cold enough.	Door left open, excessive door openings, warm food placed inside, temperature setting too high, poor ventilation.	Ensure doors are closed properly, reduce frequency of door openings, allow hot food to cool before storing, adjust temperature setting, ensure adequate ventilation.
Unusual noise.	Appliance not level, objects touching the back, normal operating sounds.	Level the appliance using adjustable feet, move objects away from the back, familiarize yourself with normal compressor/fan sounds.
Water on the floor.	Drain hole blocked, water collection tray overflowing.	Clear the drain hole (usually at the back of the refrigerator compartment), ensure the water collection tray is correctly positioned.
Door does not close completely.	Food packages blocking, door seals dirty/damaged, appliance not level.	Rearrange food, clean or inspect door seals, level the appliance.

SPECIFICATIONS

Brand: Beko

Model Number: GNO46624MXPN (8996433200)

Configuration: Multi-door

Total Capacity: 466 Liters

Color: Inox (Stainless Steel)

Installation Type: Freestanding

Number of Doors: 4

Defrost System: Automatic (No Frost)

Voltage: 240 Volt

Product Dimensions (W x D x H): 79.5 cm x 73 cm x 180 cm

Product Weight: 105 kg

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or visit the official Beko website for your region. In case of technical issues or if you require assistance beyond the troubleshooting steps provided, please contact Beko customer support. Have your model number (GNO46624MXPN) and serial number ready when contacting support.

You can often find contact details for Beko support on their official website: www.beko.com

© 2024 Beko. All rights reserved. Information in this manual is subject to change without notice.