

TOPINCN TOPINCNcax27ifto8-11

TOPINCN 3.6L 1000W Electric Hot Pot Instruction Manual

Model: TOPINCNcax27ifto8-11

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the appliance from the power outlet when not in use, before cleaning, or before adding/removing parts.
- Do not immerse the main unit (pot with electrical components) in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use the appliance on a stable, level, and heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid using abrasive cleaners or scouring pads on the non-stick surface.

2. PRODUCT OVERVIEW

The TOPINCN 3.6L Electric Hot Pot is a versatile cooking appliance designed for various culinary tasks, including stewing, steaming, and boiling. Its compact design makes it suitable for small kitchens, dorms, and travel.

Components:

- Electric Hot Pot (Main Unit)
- Glass Lid
- Steaming Basket

- Power Supply Cord



Image 2.1: All components included with the TOPINCN Electric Hot Pot.



Image 2.2: The TOPINCN Electric Hot Pot with steaming basket and lid.

Dimensions:

- Pot Diameter: Approximately 26 cm (10.24 in)
- Pot Depth: Approximately 8.5 cm (3.35 in)
- Steaming Basket Height: Approximately 7 cm (2.76 in)



Image 2.3: Product dimensions for the hot pot and steaming basket.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wash the pot, lid, and steaming basket with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the electric hot pot on a stable, flat, and heat-resistant surface, away from flammable materials. Ensure there is adequate ventilation around the appliance.
4. **Connect Power:** Insert the power supply cord into the appliance's power inlet, then plug the other end into a suitable electrical outlet. Ensure the outlet voltage matches the appliance's requirements.

4. OPERATING INSTRUCTIONS

The electric hot pot features a rotary knob for power control and heat settings.

Heat Settings:

- **OFF:** Appliance is turned off.
- **Low Heat (50-80°C):** Ideal for slow cooking, keeping food warm, or preparing porridge and soups.
- **Medium Heat (100-130°C):** Suitable for rapid cooking, boiling, or light frying.
- **High Heat (150-180°C):** For quick boiling, hot pot, or shabu-shabu.



Image 4.1: Heat settings and suggested uses.

General Operation:

1. Add desired ingredients and liquid to the pot. Do not overfill.
2. Place the lid on the pot.
3. Turn the rotary knob to the desired heat setting (Low, Medium, or High). The indicator light will illuminate.
4. Monitor cooking progress. Adjust heat as needed.
5. Once cooking is complete, turn the knob to "OFF" and unplug the appliance.

Using the Steaming Basket:

1. Add water to the main pot, ensuring it does not touch the bottom of the steaming basket.
2. Place the steaming basket into the main pot.
3. Arrange food items in the steaming basket.
4. Cover with the glass lid and select a heat setting (Medium or High is typically recommended for steaming).



Image 4.2: Using the steaming basket for various foods.

Easily Master the Cooking Speed

X

Half Circle Fever
slow heating



✓

Full Circle Fever
fast evenly heating



Image 4.3: The hot pot is suitable for cooking rice.



Image 4.4: Example of a hot pot dish prepared in the appliance.



Image 4.5: The hot pot features full-circle heating for efficient and even cooking.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your electric hot pot.

1. **Disconnect Power:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Pot and Steaming Basket:** Wash the non-stick pot, lid, and steaming basket with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry immediately.
3. **Avoid Abrasives:** Do not use metal scouring pads, abrasive cleaners, or harsh detergents, as these can damage the non-stick coating.
4. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or allow

water to enter the electrical components.

5. **Storage:** Store the clean and dry appliance in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your electric hot pot, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
 - Check if the rotary knob is turned to a heat setting (Low, Medium, or High) and not "OFF".
 - Verify the power outlet is functional by plugging in another appliance.
- **Food sticks to the pot:**
 - Ensure sufficient oil or liquid is used when cooking.
 - Avoid using metal utensils that can scratch the non-stick coating.
 - Clean the pot thoroughly after each use to prevent residue buildup.
- **Uneven heating:**
 - Ensure the pot is placed on a flat, level surface.
 - Distribute food evenly in the pot.

7. SPECIFICATIONS

Feature	Specification
Item Type	Electric Hot Pot
Model Number	TOPINCNcax27ifto8-11
Material	ABS, Aluminum Alloy
Power	1000W
Capacity	3.6 Liters
Pot Diameter	Approx. 26 cm (10.24 in)
Pot Depth	Approx. 8.5 cm (3.35 in)
Steaming Basket Height	Approx. 7 cm (2.76 in)
Weight	Approx. 1538 g (3.39 lbs)
Heat Settings	3 Gears (Low: 50-80°C, Medium: 100-130°C, High: 150-180°C)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F31J2SZL>

More documents and user manuals: <https://manuals.plus/>