

[Manuals.plus](#) /

› [Kisangel](#) /

› Kisangel Miniature Christmas Deer Figurine User Manual (Model: 4YR5424DYE08G)

Kisangel 4YR5424DYE08G

Kisangel Miniature Christmas Deer Figurine User Manual

Model: 4YR5424DYE08G

1. INTRODUCTION

This manual provides instructions for the proper setup, use, and care of your Kisangel Miniature Christmas Deer Figurine. This decorative item is designed to enhance your home or garden landscape, particularly during holiday seasons.





Figure 1: The Kisangel Miniature Christmas Deer Figurine. This image displays the full view of the green, moss-covered deer figurine, highlighting its texture and form.

2. SETUP

The Kisangel Miniature Christmas Deer Figurine requires minimal setup. Follow these steps to prepare your figurine for display:

1. **Unboxing:** Carefully remove the figurine from its packaging. Inspect for any signs of damage during transit.
2. **Placement:** Choose a stable, flat surface for display. The figurine is suitable for indoor use on tables, shelves, or windowsills, and for outdoor use in miniature gardens or plant pots. Ensure the chosen location is protected from extreme weather conditions if placed outdoors.



Figure 2: Example placement of the figurine in a festive Christmas environment. The figurine is shown alongside other holiday decorations, demonstrating its integration into a decorative display.

3. OPERATING INSTRUCTIONS (DISPLAY AND USE)

This figurine is designed for decorative purposes. No operational steps are required beyond placement.

- **Indoor Decoration:** Place the figurine on any flat surface such as a mantelpiece, bookshelf, desk, or as part of a holiday centerpiece.
- **Outdoor/Garden Decoration:** Integrate the figurine into miniature garden landscapes, terrariums, or alongside potted plants. While durable, prolonged exposure to harsh sunlight or heavy rain may affect its appearance over time.
- **Creative Displays:** Combine with other miniature ornaments to create unique scenes for holidays or year-round enjoyment.



Figure 3: The figurine displayed on a white shelf next to a potted plant and a clock. This illustrates a typical indoor placement for the decorative item.

4. MAINTENANCE

To maintain the appearance and longevity of your Kisangel Miniature Christmas Deer Figurine, follow these simple care guidelines:

- **Cleaning:** Gently dust the figurine with a soft, dry cloth or a soft brush. Avoid using abrasive cleaners or harsh chemicals, as these can damage the simulation moss and plastic material.
- **Storage:** If storing the figurine, place it in a dry, cool environment away from direct sunlight to prevent fading or material degradation.
- **Handling:** Handle the figurine with care to avoid bending or breaking delicate parts, such as the antlers.



1
Plastic material, durable and not easily deform.

2

Christmas deer design, can perfectly match various room decorations on Christmas.



Figure 4: A detailed close-up of the figurine's surface, showing the texture of the simulation moss. This image helps in understanding the material for proper cleaning and care.

5. TROUBLESHOOTING

This section addresses common concerns regarding the decorative figurine.

Problem	Possible Cause	Solution
Figurine appears dusty or dirty.	Accumulation of household dust or environmental debris.	Gently clean with a soft, dry cloth or brush as described in the Maintenance section.
Moss texture appears flattened or damaged.	Rough handling or prolonged pressure.	Gently fluff the moss with a soft brush if possible. Avoid applying pressure to the moss.
Figurine is unstable on a surface.	Uneven surface or improper placement.	Ensure the figurine is placed on a completely flat and stable surface.

6. SPECIFICATIONS

Detailed specifications for the Kisangel Miniature Christmas Deer Figurine:

- **Model:** 4YR5424DYE08G
- **Brand:** Kisangel
- **Material:** Plastic, Simulation Moss
- **Color:** Green
- **Dimensions (L x W x H):** Approximately 5.91 inches x 2.76 inches x 2.36 inches (15 cm x 7 cm x 6 cm)
- **Item Weight:** Approximately 3.2 ounces
- **Recommended Use:** Decorative figurine for home, garden, or holiday displays.

5.9 in / 15 cm



2.8 in / 7 cm

Figure 5: Visual representation of the figurine's dimensions, indicating its height (5.9 inches / 15 cm) and width (2.8 inches / 7 cm).

7. WARRANTY INFORMATION

Kisangel products are manufactured with attention to quality. For specific warranty details, please refer to the retailer's return policy or contact Kisangel customer support. General return policies typically cover manufacturing defects within a specified period from the date of purchase.

8. CUSTOMER SUPPORT

If you have any questions or require further assistance regarding your Kisangel Miniature Christmas Deer Figurine, please contact your point of purchase or visit the official Kisangel store page for support options.

Kisangel Store: [Visit Kisangel Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F31WM42W>

More documents and user manuals: <https://manuals.plus/>